

# DST Setting / Module : 2608/2638/2688

Firstly, make sure it is in the Timekeeping Mode.

<Timekeeping Mode Screen>



1.



In the Timekeeping Mode, hold down (A) button until the city code starts to flash.

2.



Press (C) button once. DST screen appears.

3.



Press (D) button to toggle OFF, ON and AUTO.

4.



Press (A) button twice to exit the setting screen.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>