

KODAK Rapid Charger K6300

USER GUIDE

4H5328

Features



- Charges 2 or 4 AA or AAA Ni-MH rechargeable batteries.
- Powered by either the AC adapter for home/office use or the DC adapter for use in a vehicle.
- Battery life protected by Negative Delta Voltage Detection for charge termination.
- Safety timer to prevent overcharging.
- Automatic selection of charging current for AA and AAA size batteries.
- LED indicator light.

Operating Instructions

- To charge 2 batteries, slide the switch to position "2"; for 4 batteries, slide the switch to position "4".

NOTE: Batteries must be charged in pairs. Do not charge AA and AAA batteries at the same time.

- Insert 2 or 4 AA or AAA batteries into the charger so that the + (positive) and - (negative) ends of the batteries correspond to the same + and - markings in the charger. When charging only 2 batteries, insert them into the left side of the charger.

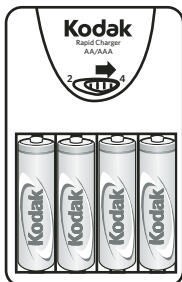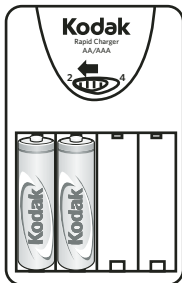

- Home/Office:** Connect the AC adapter to the back of the charger, then plug it into an electrical socket.

CAUTION: Use the supplied AC adapter only (12 V DC/500 mA). Use of an AC adapter that does not meet the same specifications could damage the charger or adapter.

Vehicle: Connect the DC adapter to the back of the charger, then plug it into your vehicle's 12 V power receptacle.

LED Indicator Light:

- *Red*—batteries are charging.
- *Green*—batteries are charged; charger switches to trickle charge to keep the batteries at full charge.
- *Flashing Red*—batteries are not suitable for charging.

- Unplug the charger and remove the batteries.

Charging Time*

| Capacity | No. of Cells | Charge Time (Hours) |
|----------------------|--------------|---------------------|
| AA Batteries | | |
| 1700 mAh | 2 | 2.5 |
| | 4 | 5 |
| 2100 mAh | 2 | 3.5 |
| | 4 | 7 |
| 2500 mAh | 2 | 4.5 |
| | 4 | 9 |
| AAA Batteries | | |
| 800 mAh | 2 | 2.5 |
| | 4 | 5 |

*Charging time depends upon the brand, capacity and condition of batteries being charged.

IMPORTANT SAFETY INSTRUCTIONS— Save These Instructions

DANGER—TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.

- Use an attachment plug adapter of the proper configuration for your power outlet. This battery charger is intended to be correctly oriented in a vertical or floor mount position.
 - Read and follow these instructions before using KODAK Products. Always follow basic safety procedures.
 - The use of an accessory attachment that is not recommended by Kodak, such as an AC adapter, may cause fire, electric shock or injury.
 - If using this product on an aeroplane, observe all instructions from the airline.
- ⚠ CAUTION: Do not disassemble this product; there are no user-serviceable parts inside. Refer servicing to qualified service personnel.**
- ⚠ CAUTION: Do not expose this product to liquid, moisture or extreme temperatures. KODAK AC Adapters and Battery Chargers are intended for indoor use only. The use of controls, adjustments or procedures other than those specified herein may result in exposure to shock and/or electrical or mechanical hazards.**

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

Using the Batteries

- Read and follow all warnings and instructions supplied by the battery manufacturer.
- Use only batteries that are approved for this product to avoid risk of explosion. See the User Guide for your product for supported battery types.
- Keep batteries out of the reach of children.
- Do not disassemble batteries, install them backwards or expose them to liquid, moisture, fire or extreme temperature.
- Replace all batteries in a set at the same time. Do not mix new batteries with used ones. Do not mix rechargeable and non-rechargeable batteries. Do not mix lithium, Ni-MH, and Ni-Cd batteries together. Do not mix batteries of different chemistry types, grades or brands. Failure to observe this precaution may cause leakage.
- Remove batteries when the product is stored for an extended period of time. In the unlikely event that battery fluid leaks inside the product, contact your local Kodak Customer Service representative.

- In the unlikely event that battery fluid leaks onto your skin, wash immediately with water and contact your local health provider. For additional health-related information, contact your local Kodak Customer Service representative.
- When disposing of batteries, follow the manufacturer's instructions and applicable regulations. Kodak encourages customers to take advantage of any local community battery recycling programmes. Contact your local waste remover or recycler for details.
- If the battery contacts touch metal objects, the battery may short-circuit, discharge energy, become hot or leak.

⚠ CAUTION: When removing batteries, allow them to cool first; batteries may be hot.

Using a Battery Charger

- Do not charge non-rechargeable batteries.

WARRANTY

Limited Warranty

Kodak warrants KODAK Consumer Electronic Products and Accessories ("Products"), excluding batteries, to be free from malfunctions and defects in both materials and workmanship for one year from the date of purchase.

Retain the original dated sales receipt. Proof of the date of purchase will be required with any request for warranty repair.

Limited Warranty Coverage

Warranty service is only available from within the country where the Products were originally purchased. You may be required to ship Products, at your expense, to the authorised service facility for the country where the Products were purchased.

Kodak will repair or replace Products if they fail to function properly during the warranty period, subject to any conditions and/or limitations stated herein. Warranty service will include all labour as well as any necessary adjustments and/or replacement parts. If Kodak is unable to repair or replace a Product, Kodak will, at its discretion, refund the purchase price paid for the Product provided the Product has been returned to Kodak along with proof of the purchase price paid. Repair, replacement or refund of the purchase price are the sole remedies under this warranty.

If replacement parts are used in making repairs, those parts may be remanufactured or may contain remanufactured materials. If it is necessary to replace the entire Product, it may be replaced with a remanufactured Product. Remanufactured Products, parts and materials are warranted for the remaining warranty term of the original Product, or 90 days after the date of repair or replacement, whichever is longer.

Limitations

This warranty does not cover circumstances beyond Kodak's control. This warranty does not apply when failure is due to shipping damage, accident, alteration, modification, unauthorised service, misuse, abuse, use with incompatible accessories or attachments (such as third-party ink or ink

tanks), failure to follow Kodak's operation, maintenance or repacking instructions or failure to use items supplied by Kodak (such as adapters and cables), or for claims made after the duration of this warranty.

Kodak makes no other express or implied warranty for this product, and disclaims the implied warranties of merchantability and fitness for a particular purpose. In the event that the exclusion of any implied warranty is ineffective under the law, the duration of the implied warranty will be one year from the purchase date or such longer period as required by law.

The option of repair, replacement or refund is Kodak's only obligation. Kodak will not be responsible for any special, consequential or incidental damages resulting from the sale, purchase or use of this Product, regardless of the cause. Liability for any special, consequential or incidental damages (including but not limited to loss of revenue or profit, downtime costs, loss of the use of the equipment, cost of substitute equipment, facilities or services or claims of your customers for such damages resulting from the purchase, use or failure of the Product), regardless of cause, or for breach of any written or implied warranty, is expressly disclaimed.

Your Rights

Some states or jurisdictions do not allow exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Some states or jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This warranty gives you specific rights, and you may have other rights that vary from state to state or by jurisdiction.

Outside the United States and Canada

In countries other than the United States and Canada, the terms and conditions of this warranty may be different. Unless a specific Kodak warranty is communicated to the purchaser in writing by a Kodak company, no warranty or liability exists beyond any minimum requirements imposed by law, even though defect, damage or loss may be by negligence or other act.

Waste Electrical and Electronic Equipment/Battery Disposal



In Europe: For human/environmental protection, it is your responsibility to dispose of this equipment and batteries at a collection facility established for this purpose (separate from municipal waste). For more information, contact your retailer, collection facility or appropriate local authorities, or visit www.kodak.com/go/recycle. (Product weight: 136 g.)

Kodak

Eastman Kodak Company
Rochester, NY 14650 U.S.A.

© Kodak, 2009. KODAK is a trade mark of Kodak. 4H5328

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>