 


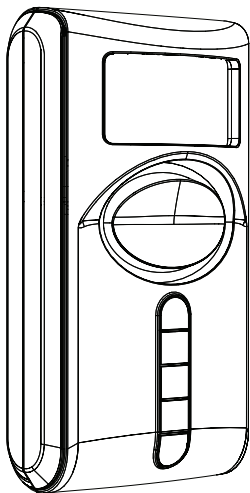

Personal Security  
**Motion Sensor  
with Keypad  
User Manual**








# Motion Sensing Alarm

 
*With Remote Control*

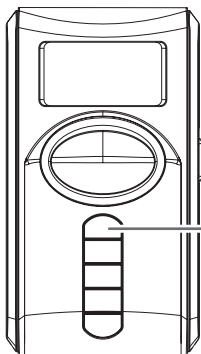

Alarm/Chime Switch

Indicator Light

 Motion Sensing Alarm

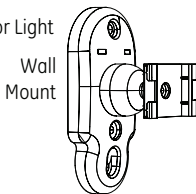

Wall  
Mount

## Low Battery Indicator

 
The Motion Sensing Alarm has a low battery indicator light. When the batteries need to be replaced, the indicator will flash slowly. Average battery life for typical usage is up to one year.

## INSTALLING BATTERIES

The battery compartment is located on the back of the unit.

1. Remove the battery compartment screw and slide off cover in the direction of the open arrow.
2. Insert (3) AA batteries (not included) . Take care to note the polarity diagram inside the battery compartment.
3. Replace the cover and secure screw.

Battery Compartment

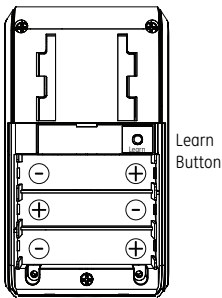

## **CREATING YOUR PERSONAL ALARM CODE**

The 4-digit keypad allows you to set a personal code for arming and disarming the alarm.

 
1. Remove the battery compartment screw and slide off cover in the direction of the open arrow.
2. Press the LEARN button once; the red indicator light on the front of the alarm will blink for 15 seconds. During this time, input your 4-digit code. A beep will confirm each input. The unit will flash a green light 3 times to confirm your new 4-digit code has been saved.
3. Replace the cover and secure screw.

## **INSTALLATION**


The alarm is designed to be wall mounted with the ball and socket mount (included). The ball and socket mount will provide the

flexibility to aim the motion sensor in a particular direction.

1. Choose your desired location, such as the corner of the room. This will provide maximum coverage. **NOTE:** The sensor has a 15-20 ft. detection zone, with approximate angles of 110 degree horizontal x 70 degree vertical. Recommended installation height is 6 to 8 feet.

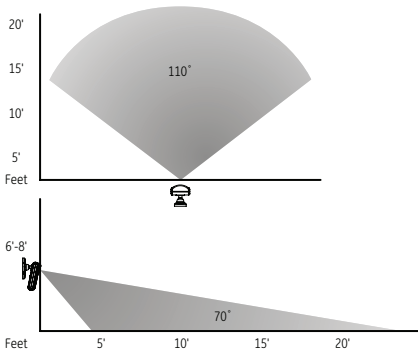

 2. Secure ball and socket mount to the wall using either the provided wall anchors or by screwing directly into a wall stud. Once installed securely on the wall, slide insert bracket of mount into the back of the unit and lock in place. The mount will click when secured to the alarm.

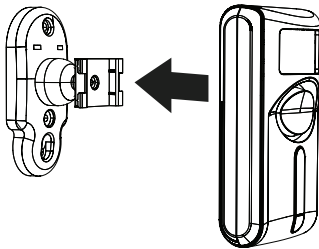

## OPERATING IN THE ALARM MODE

1. Locate the ALARM/CHIME switch on the side of the alarm.

2. Slide switch to ALARM mode.

## **Arming the Alarm**

1. Arm the alarm by pressing your 4-digit code. A beep will sound after each button is pressed.
2. When the 4-digit code is entered correctly the unit's indicator light will flash green once. If entered incorrectly, the unit will sound and the indicator light will flash red three times.
3. A red light will immediately begin to flash indicating the 45-second exit delay has started. The delay allows time for you to leave the protected area without triggering the alarm.
4. When motion is detected, the alarm unit will sound a short tone and a red light will flash. The alarm will activate



in 30 seconds. The siren will sound for 30 seconds (unless disarmed by the remote) and then turn off. In 15 seconds the alarm will check for motion. If motion is detected, the siren will sound again. The cycle will repeat until the unit is disarmed with the remote.

## **Disarming the Alarm**

1. When returning to the protected area, simply enter your 4-digit code within 30 seconds to disarm the alarm.
2. When the fourth digit of your code is entered, the unit will respond with two tones and the indicator light will flash green twice.

The unit will beep once if motion is sensed. If the correct code is not entered within 30 seconds, the alarm will sound. Enter correct code anytime after the alarm has

sounded to deactivate. **NOTE:** To test, a cloth can be used to cover the alarm to reduce risk of hearing damage.

### **Incorrect Code**

If an incorrect code is entered the unit will sound a louder beep and the indicator light will flash red 3 times. Re-enter correct code after indicator light stops flashing.

### **OPERATING IN THE CHIME MODE**

The chime is used to notify you when motion is sensed in the area.

1. Slide switch to CHIME mode; the chime will sound once.
- **Activating the Chime:**  
The chime will go off immediately when motion is sensed. No code is required. The motion sensor will retest the area 15 seconds after chime sounds.

- Deactivating the Chime:  
To deactivate the chime, slide the switch to ALARM.

## **TESTING MOTION SENSOR OPERATION**

1. Set alarm to CHIME mode; the chime will sound once.
2. After initial chime, wait 15 seconds and wave hand in front of the sensor. If chime sounds immediately, sensor is working correctly.
3. To turn unit off, set unit to Alarm mode.

## **CARE AND MAINTENANCE**

To clean the unit housing, use a soft cloth slightly dampened with water and wipe dry. Do not use chemical agents as this may damage and discolor the unit.

## WARNING

### *Limitations of Alarm Products*

This product should be tested periodically to make sure it is working properly. The product, if used properly, may reduce the risk of burglary, robbery, or other adverse events. However, JASCO is not an insurer, this product is neither insurance nor a guarantee that such an event will be prevented, and users should protect themselves with proper insurance. JASCO makes no representation that this product cannot be compromised or circumvented, that it will provide an adequate warning, or that it will prevent any personal injuries, property damage, or other losses. Like any alarm product, including expensive commercial systems, it may be bypassed, it is subject to compromise, and it may fail to warn for a variety of reasons, including, but not limited to: improper installation or positioning; improper maintenance; tampering; dead or improperly installed batteries; sensing limitations; component failures; receivers; for infrared products, intrusions may be outside of a product's designed range and certain environmental conditions may impact performance and audible alarm signals may be outside of hearing range, muted by doors, walls, and floors, unheard by deep sleepers or the hearing-impaired, or overwhelmed by other sounds.

**WARNING***Risk of personal injury*

- Prolonged exposure to alarm siren may cause permanent hearing loss

*Battery Warning*

- Remove batteries before storing the Alarm for extended periods
- Batteries may leak harmful liquids or ignitable materials or explode causing injury and product damage
- Do not mix old and new or other battery types
- Replace all batteries at the same time
- Replace fully discharged batteries immediately

For indoor use only; do not use in wet locations.

This Jasco product comes with a 90 day limited warranty. Please contact Customer Service at 800-654-8483 between 7:30AM—5:00PM CST or via our website ([www.jascoproducts.com](http://www.jascoproducts.com)) if the unit should prove defective within the warranty period.



is a trademark of the General Electric Company and is used under license to Jasco Products Company LLC, 10 E. Memorial Road, Oklahoma City, OK 73114.

51209  
9/17/2007

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>