



Life's Good



LG

chocolate™ by LG

 **verizon**wireless

Quick Start Guide

Getting to Know Your Phone



*Speakerphone can only be activated during a call.

Download from [Www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

Using the Touch Keypad & Navigation Wheel

Touch Keypad

- Touch the exact key with your fingertip.
- It's not necessary to press hard. A light tap will do.

Keypad Settings

 
The touch keypad's sensitivity level is set at **medium** by default and can be adjusted by going to:

Menu > Settings & Tools (6) > Touch Keypad (8) > Sensor Level (1). From the touch keypad menu, you can also turn on and off the touch keypad sound and vibration.

Navigation Wheel

Slowly spin the navigation wheel with your finger tip to highlight menu options. When the correct menu option is highlighted, press the **OK Key** to select that option.

You can also use the navigation wheel as a 4-way directional key to navigate the menus.

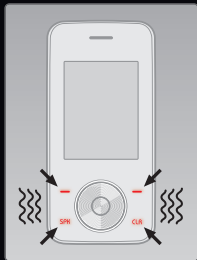

Locking/Unlocking Your Phone

 
 
Key Guard

The touch keypad and navigation wheel are automatically locked when:

- The slide is closed.
- The phone is inactive for 17 sec. (default) or 25 sec. (if display backlight is set at 15 sec.).

Unlocking the Touch Keypad & Navigation Wheel

- Slide Closed: Slide the **Lock Key** (located on the right side of the phone) downwards and release.
 - or –
 - Press the **OK Key** twice.
- Slide Open: press any key (except touch keys).

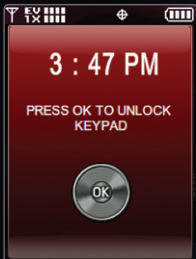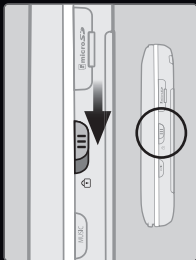

How to Get Music

1. Shop the Catalog Using V CAST Music

 
Press the **Music Key** (located on the right side of the phone). Then tap the **Left Soft Key (Shop)** to download new music. Choose from over 2,000,000 songs!

2. Sync Music from Your PC to Your Phone

Whether you're purchasing music from the online V CAST Music Store or copying music from your personal library, it's easy to sync from your PC.

Connect your phone to your PC with an optional USB cable.* Press the **OK Key** twice, tap the **Right Soft Key (Sync)** to sync music from PC to phone. USB cable and Windows Media Player 10 (or higher) are required.

*Refer to the Music Essentials Kit (sold separately) and Quick Reference Guide for more details.

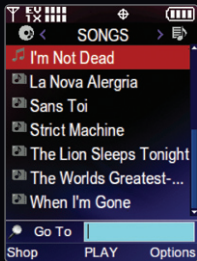


Playing Music

Transform your wireless phone into a portable music player. You can listen to music in the background while doing other activities with your phone. You can even pause the music to take a call.

1. Press the **Music Key** (located on the right side of the phone). Scroll to desired song and press the **OK Key** to play.
2. Use the side **Volume Keys** to adjust volume when a song is playing. Tap the **Right Soft Key (Options)** then **Sound Effect (5)** to try different sound effects.
3. Press the **End Key** twice to exit the music player.



Tip: To enter Music Only Mode while listening to music, tap the **Right Soft Key (Options)**, then **Music Only (6)**. Music Only Mode should be used in places where radio frequency (RF) is prohibited, such as aboard airplanes and in hospitals.

 Note: While playing music in the background, spin the navigation wheel to access your songs.

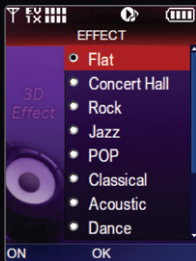

Creating Playlists

  1. Press the **OK Key** twice, select **Playlists (2)**.
2. Tap the **Left Soft Key (Create)** to create a playlist.
3. Enter a playlist name and press the **OK Key**.
4. Tap the **Right Soft Key (Options)**, and select **Add Songs to Playlist (4)**.
5. Press the **OK Key** to mark all the songs you want to add to the playlist.
6. Tap the **Left Soft Key (Done)** when finished.

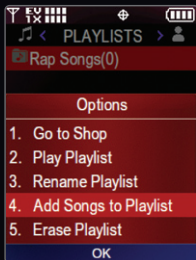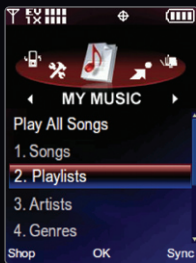

Making & Answering Calls

Making Calls

1. Open the slide. Press and *hold* the **End Key** for 3 seconds to turn the phone on.
2. Enter phone number and press **Send**.
3. Press the **End Key** to end the call or close the slide.*

Tip: To make a call with the phone closed, tap the **Right Soft Key (Contacts)**, select a contact, and tap the **Left Soft Key (Call)**.



Answering Calls

Slide the phone open or press the **OK Key** twice.*

 
*Default settings. You can change your Answer/End Call Options by going to: **Menu > Settings & Tools (6) > Call Settings (7)**, then **Answer Options (1)** or **End Call Options (2)**.

Note: If the phone is ringing or vibrating, press the volume keys to quiet the phone.



Bluetooth® Pairing

1. Set your Bluetooth accessory into pairing mode.
2. Press the **OK Key**, select **Settings & Tools (6)**.
3. Select **Bluetooth Menu (3)**, then **Add New Device (1)**.
4. If Bluetooth is set to off, select **Yes** when prompted to turn it on.
5. Press the **OK Key**, and the phone will now search for the accessory. Once found, highlight it and press the **OK Key** to pair.
6. Enter the passcode (typically “0000” - 4 zeroes) and press the **OK Key**. If you don’t know the passcode, please consult the user manual of the device with which you are trying to pair.
7. Press the **OK Key** to connect with the device.

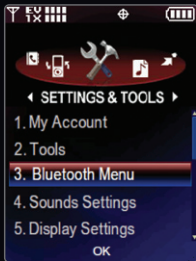

Bluetooth accessories sold separately. Phone does not support all Bluetooth OBEX profiles. For vehicle/accessory compatibility, go to www.verizonwireless.com/bluetoothchart.

Note: You can save up to 20 Bluetooth pairings

Taking a Picture/Recording a Video

1. To activate camera mode: With the slide open, press the **Camera/Video Key**.

To activate video mode: With the slide open, press and *hold* the **Camera/Video Key** for 2 seconds.

2. Press left or right on the navigation wheel to zoom. Press up or down to adjust brightness. Press the **Right Soft Key (Options)** to adjust camera/video options.



3. Press the **OK Key** or press the **Camera/Video Key** to take a photo or record a video. Press the **OK Key** or press the **Camera/Video Key** to stop recording.
4. Tap the **Left Soft Key (Save)** or press the **OK Key** to send.



Note: To take a self-portrait, use the mirror on the back of the phone and press the **Camera/Video Key**.

Customizable Features

 
Changing the Display Theme

1. Press the **OK Key**, select **Settings & Tools (6)**.
2. Select **Display Settings (5)**, then **Display Themes (4)**.
3. Select **Classic, Rhythm & Blues**, or **Rock & Roll**.

Changing the Clip Board Theme

Clip Board is a fun feature which can be accessed by spinning the navigation wheel in standby mode.*

1. Press the **OK Key**, select **Settings & Tools (6)**.
2. Select **Display Settings (5)**, then **Clip Board (5)**.
3. Select **Classic, Diary, Modern** or turn the clipboard feature off.

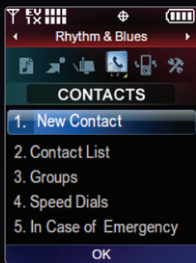

*Standby mode is when the phone is not performing any action and no menu is displayed.

Optional Accessories



Bluetooth
Stereo Speakers



Bluetooth
Stereo Headset



Portable
Stereo Speakers



Music Essentials Kit (4GB)

Bluetooth Stereo Headset, USB Cable,
Music CD, 4GB microSD Card



Music Essentials Kit (2GB)

Stereo Headset, USB Cable, Music CD,
2GB microSD Card



Extended Li-Ion Battery
(1,500 mAh)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>