



Camera/Camcorder Light

LED30

Thank you for purchasing the PROMASTER® LED30 Camera/Camcorder Light.



Please read the following instructions before use.

Installing the Batteries

Gently remove the cover on the back of the light.
Insert 2 AA batteries (not included) into the battery compartment.
Be sure to observe the correct polarity (+,-) as indicated.



After the batteries are properly installed, use the on/off switch to power the light.

Mounting the LED30 Light

You can mount your LED30 Camera/Camcorder light to the built-in accessory shoe on your camera or camcorder. If your camera or camcorder does not have an accessory shoe, use the included mounting bracket as follows:

Connect screw **(A)** to the tripod mount of your camcorder/camera.
Slide your light into the accessory shoe **(B)** of the bracket



Specifications

Light source:	30-5mm super bright LED lamps
Beam angle:	60°
Luminance:	23 Lux @ 10'
Color rendering index:	≥85
Color temperature:	5600K
LED longevity:	>10000h
Power input:	AA Battery × 2
Housing size(mm):	100 x 45 x 32
Weight(g):	60

Code 7193
Made in China

www.promaster.com

Fairfield, CT 06611

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>