 
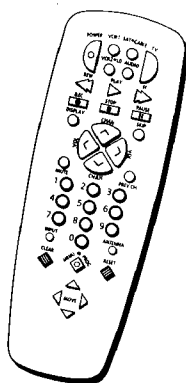 


**SEARS**

**OWNER'S  
MANUAL**

MODEL NO.  
274.43948590  
SERIES

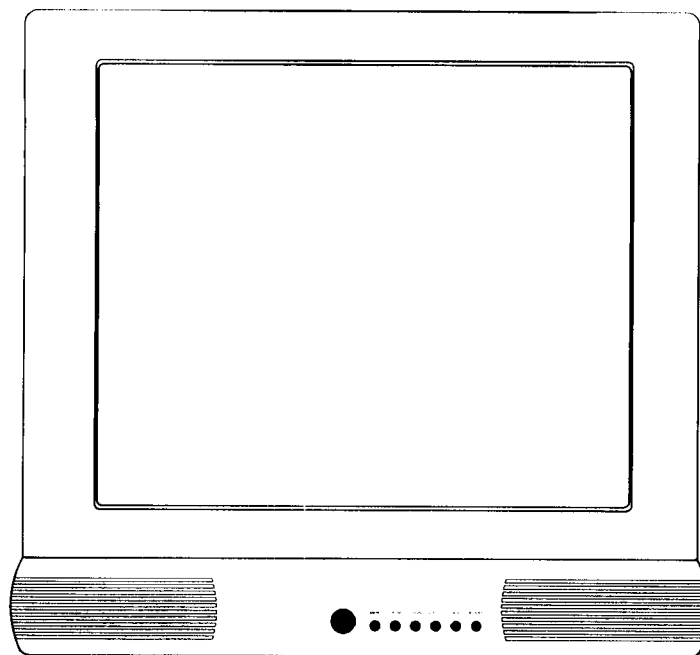

Record the Model No. and the  
Serial No. of your television in  
the space provided.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

Keep this information for  
future use.

**SEARS  
31" TABLETOP  
COLOR TELEVISION  
WITH REMOTE CONTROL**

**Safety Information  
Use  
Warranty and Service**

**Sears, Roebuck and Co., Hoffman Estates, IL 60179 U.S.A.**

# Important Information

## WARNING

To reduce the risk of fire or shock hazard, do not expose this TV to rain or moisture.

## WARNING

RISK OF ELECTRIC SHOCK  
DO NOT OPEN

 
TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.



This symbol indicates important instructions accompanying the product.

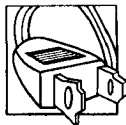

**CAUTION:** To prevent electric shock, match wide blade of plug to wide slot, fully insert.

**ATTENTION:** Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

## Cautions

Operate TV only on 120 volts, 60 Hz AC power (normal house power) .

FCC Regulations state that unauthorized changes or modifications to this equipment may void the user's authority to operate it.

## Note To Cable TV Installer

This reminder is provided to call your attention to Article 820-40 of the National Electrical Code (Section 54 of the Canadian Electrical Code, Part 1) which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

# Table of Contents

<b>Important Information</b>	Warning .....	
<b>Quick Guide to Your TV</b>	Startup .....	2-3
	Set up, Hook up, Plug in the TV, Put Batteries in the Remote, Turn on the TV, Adjust Picture Tilt, Place Channels into Memory, Set the Time	
	Tour of the Remote .....	4
	Basic Button Layout and Functions	
	Guide to the Menus .....	5
	Colors, Menu Buttons, Moving through the Menus	
<b>Using Your TV and Remote</b>	With Remote Buttons .....	6-7
	With VCRs .....	8-10
	With Satellite Receivers .....	11
	With a Cable Box .....	12-13
	With a Laserdisc Player .....	14
	With Audio Equipment .....	15
<b>Adjusting Your TV</b>	Overall Picture .....	16
	Picture Settings .....	17
	Color, Tint, Brightness, Sharpness, Autocolor, Picture Reset	
	Sound Settings .....	18-19
	Stereo, Expanded Stereo, SAP, Tone, Speakers	
<b>Using Advanced Features</b>	Place Channels in Memory/Autoprogram .....	20
	Naming Channels .....	21
	Setting the Sleep Timer .....	22
	Setting the Alarm Clock .....	23
	Selecting a Language .....	24
	Watching Closed Captioning .....	24
	Setting your TV for Antenna or Cable .....	25
<b>References</b>	With TV Front Panel Buttons .....	26
	Displays on the Screen .....	27
	Trouble Checks .....	28-29
	Warranty .....	Back Cover

 
# Quick Guide to Your TV

## Startup

The steps below will get your TV connected and ready for watching.  
For more details, see the page numbers listed.

### 1. Hook up your TV


Details are in the Connections Guide.

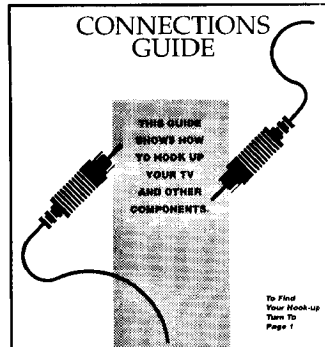

Hook up any antennas, cables or other equipment to your TV before you follow the steps below.


**CAUTION:** If you choose to use a stand with your TV, take precautions that the stand or other furniture the TV is placed on is properly located and of adequate size and strength to prevent the TV from accidentally being tipped over or pulled off. This could cause damage to the TV and or personal injury.

### 2. Plug in the TV

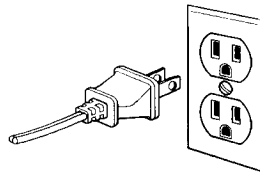 


Plug the cord into the outlet, matching the wide and the small end of the plug with the outlet.

### 3. Put Batteries in the Remote

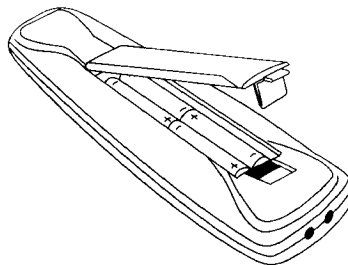 


- Pull off the cover of the battery compartment.
- Place the four AAA batteries as shown, matching the + and - end of each battery in the compartment.
- Replace the cover.

### 4. Turn on the TV

 

Press TV on the remote.

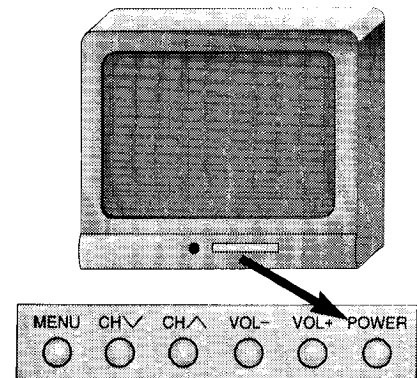 

OR Press POWER on the TV.


# Quick Guide to Your TV

## Startup

### 5. Adjust PICTURE TILT.

Picture tilt is used to correct a tilted picture from the effect of the Earth's magnetic field on a large picture tube. The PICTURE TILT STRENGTH and POLARITY switches on the back of the TV compensate for this effect. If the picture appears tilted, follow these steps to improve it.

 You may need to reset the switches if the TV is moved or repositioned in the room.

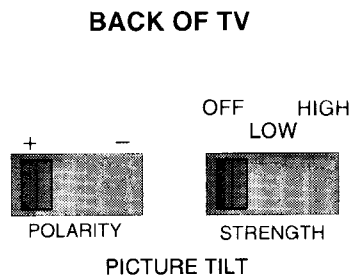

- Make sure STRENGTH switch is in the OFF position.
- Move STRENGTH switch to the LOW position. If this does not fully improve tilt, move STRENGTH switch to HIGH. This should correct tilt. If moving STRENGTH switch makes tilt worse, return it to OFF and go to the next step.
- Change the position of POLARITY switch. If this improves the tilt but does not fully improve it, move the STRENGTH switch to LOW or HIGH. This should correct tilt.


### 6. Place all available channels in memory (Autoprogram)

 *Details for adding and deleting channels are on page 20.*



- Press MENU•PROG until the Setup menu is selected. This menu is white.
- Press MOVE ▼ to highlight Autoprogram.
- Press MOVE ► to start placing channels in the TV's memory.
- Wait until TV has cycled through all the channels and returns to original channel.

### 7. Set the Time

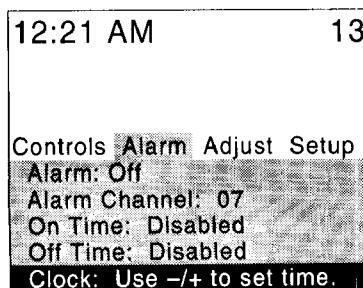


- Press MENU•PROG until the Alarm menu is selected. This menu is green.
- The Clock is automatically highlighted the first time you set it. If it is not, press MOVE ▼ to highlight it.
- Press MOVE ◀ to set the hour.
- Press MOVE ► to set the minutes.

# Quick Guide to Your TV
 
## Basic Tour of the Remote

Basic information about your remote is shown below. This will give you a general idea of how your remote works. *For more details, see pages 6–15.*

### TV Power Button

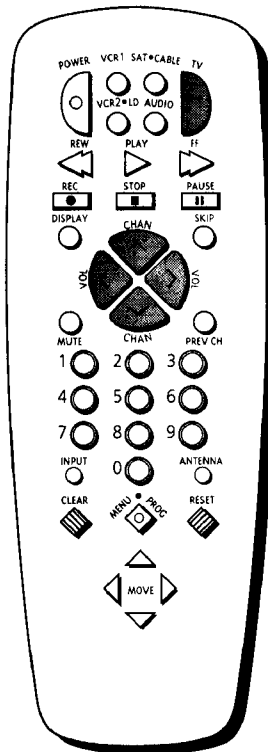

Turns the TV on.  
Sets the remote to control the TV.

### Volume and Channel Controls

 
*Details are on page 6.*

Operates TV when remote is set to control the TV.

Operates the TV and advanced features.

### Component Buttons

*Details are on pages 8–15.*

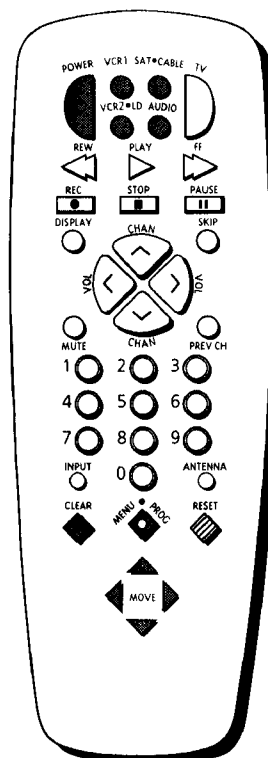

Controls components such as a VCR, laserdisc player, audio equipment, and a cable box.

### Menu Buttons

*See next page for details.*

 
Changes the menus and features on the screen.

# Quick Guide to Your TV

## Menu Basics

General information about using the on-screen menu system is shown below. Details on using the remote buttons are on pages 6-7. Many menu items are explained in detail in *Using the Advanced Features* starting on page 20.

### Colors


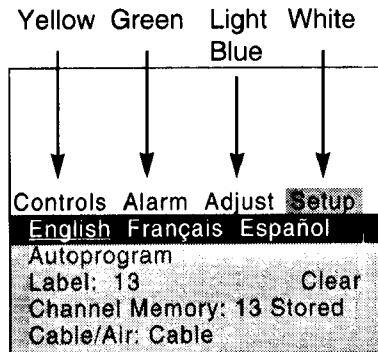


Press MENU•PROG repeatedly to see each of the four menu colors.

Each menu has a different color background as shown at the left.

### Menu Buttons

  The menu buttons are used to adjust the features in the TV's menus. Both the menu buttons on the remote or the front of the TV will move through the menus. See *"Moving through the Menus"* below.

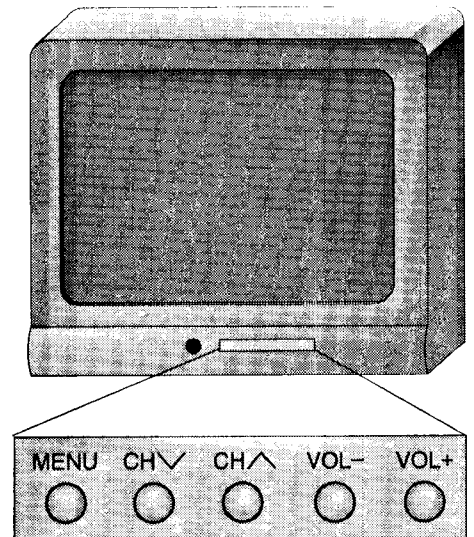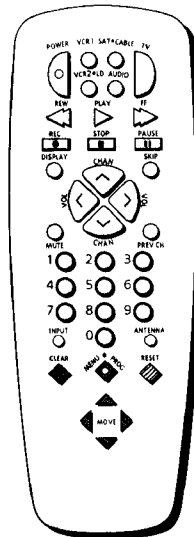


### Moving through the Menus



1. Press MENU•PROG on the remote or MENU on the front panel to move from menu to menu.
2. Press MOVE ▲ and ▼ on the remote or CHANNEL up or down on the front panel to move up and down through the features in the menu.
3. Press MOVE ◀ and ▶ on the remote or VOLUME + or - on the front panel to move left and right on the menu lines.

# Using Your TV and Remote
 
## With Remote Buttons

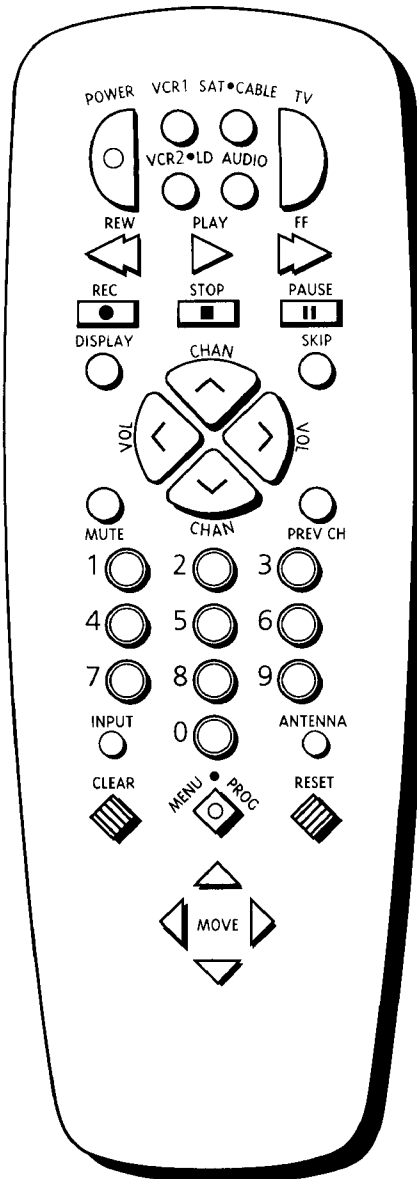

### POWER

Turns off the TV.

Turns off compatible components.

Turns on a component after a component button is pressed.

### AUDIO, VCR1, VCR2•LD, SAT•CABLE, TV

Sets the remote to control the component. VCR2•LD can only be programmed for one component: either a VCR or a Laserdisc Player.

*See Using the Remote with a VCR, Satellite Receiver, Cable Box, Laserdisc Player and Audio equipment on pages 8–15.*

### TV

Turns on the TV.

Shows the displays on the screen.

Sets the remote to control the TV.

*See Using the Remote with a VCR, Satellite Receiver, Cable Box, Laserdisc Player and Audio equipment on pages 8–15.*

### REW (Rewind)

Rewinds a tape or laserdisc.

Searches backward while tape or laserdisc is playing.

### PLAY

Plays tape or laserdisc.

### FF (Fast Forward)

Fast forwards a tape or laserdisc.

Searches forward while tape or laserdisc is playing.

### REC (Record)

Starts recording onto tape.

### STOP

Stops tape or laserdisc.

### PAUSE

Pauses tape or laserdisc.

### DISPLAY

Shows displays on the screen.

Clears menus from the screen.

### SKIP (Commercial Skip)

Allows you to scan other channels during commercials.

Each press adds 30 seconds. TV switches back to original channel when time runs out. Press CLEAR to cancel SKIP.

### CHAN ^ and v

(Channel up and down)

Scans up and down through channels in the TV's memory.

Moves through channels in VCR's memory.

### VOL > and <

(Volume up and down)

Raises and lowers sound.

### MUTE

Switches the TV sound on or off.

### PREV CH (Previous Channel)

 
Changes back and forth between two channels.

Select a channel and then select another. Press PREV CH to switch between the two channels.



# Using Your TV and Remote

## With Remote Buttons

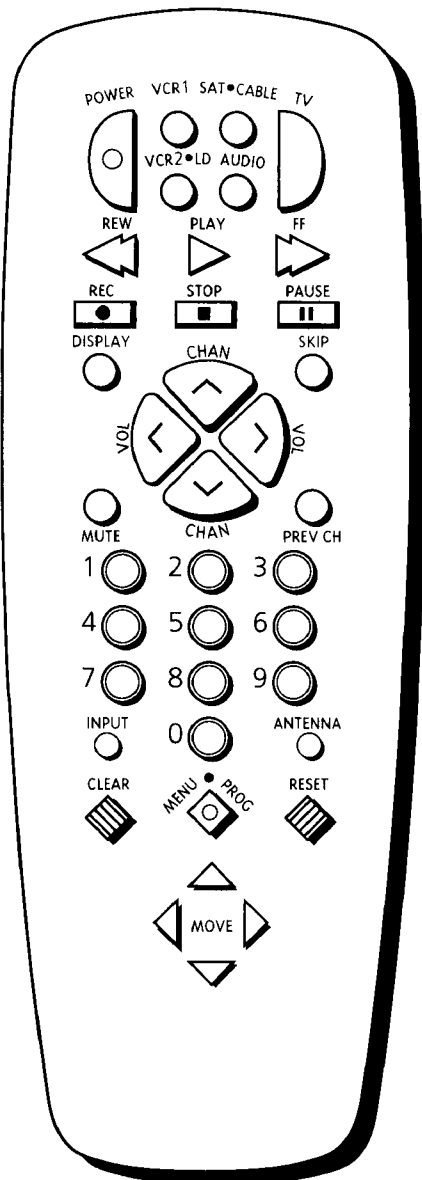

### Number Buttons (0-9)

Selects any channel number.

Two numbers must be pressed for each channel. Press 0 and 6 for channel 6. For three digit channels, press and hold 1 until 1-- appears on the screen. Then press the other two numbers.

### INPUT

Switches between the TV channels and Video 00.

### ANTENNA

Used as TV/VCR button when remote is set to control the VCR.

### CLEAR

Clears menus and displays from the screen.

Clears items from VCR timer programs and VCR's clock.

### MENU•PROG (Program)

Shows menus on the screen and moves from menu to menu.

Sets VCR clock and programs timer on VCR.

### RESET

Returns the picture adjustments to the original settings.

### MOVE ◀ and ▶ (left and right)

Moves left and right on a menu line. See *Menu Basics on page 5*.

Changes a feature setting.

### MOVE ▲ and ▼ (up and down)

 
Moves up and down menus. See *Menu Basics on page 5*.

# Using Your TV and Remote

## With VCRs: Programming the Remote

Refer to the Connection Book or the VCR's owners manual to hook up your VCRs. The remote may need to be programmed for your VCR, but may not operate all models of the brands listed below. Use the codes below or on the sheet packed in with your remote.

### 1. Test the remote

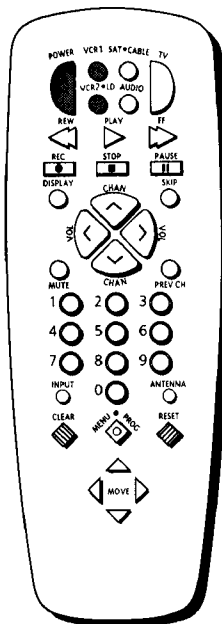

### 2. Program the remote for your VCRs

- A. Press VCR1 or VCR2•LD to turn the VCR on.
- B. Press the VCR buttons shown at the left. If your VCR does not work, program VCR1 or VCR2•LD with a VCR code from the list below.
- A. Point the remote at the VCR and hold VCR1 or VCR2•LD.
- B. Enter the code for your brand from the code list below.
- C. Release VCR1 or VCR2•LD.
- D. Press POWER. If nothing happens, try pressing VCR1 and then POWER.
- E. Repeat A–D with another code if the first one does not work or if a second VCR is connected.

### VCR Codes

 
Aiwa .....	15	Kenwood .....	02,14,16,30,46,47	.....	27,43,53
Akai .....	03,17,22,23,63,66	KLH .....	73	Samsung.....	07,13,22,32,42,48
Audio Dynamics.....	14,16	Lloyd's.....	15	Sansui .....	16,71
Broksonic .....	10	Logik.....	31	Sanyo .....	02,12
Candle .....	07,09,13,44,45,52	Magnavox .....	08,29,53,56	Scott .....	04,13,41,49,68
Canon .....	08,53	Marantz.....	02,08,14,16,29,30,44,46,61	Sears.....	02,05,09,12,18,19,35,43
Capehart.....	01	Marta .....	09	Sharp.....	06,24,27,39,45
Citizen .....	07,09,13,44,45,46,52	MEI .....	08	Shintom .....	17,26,31,55
Colortyme .....	14	Memorex .....	08,09,12,15	Sony .....	17,26,38
Craig .....	07,12	MGA .....	04,27	Sylvania.....	08,15,29,53,56
Curtis Mathes .....	00,07,08,14,15,44,45,53,64,67	Midland.....	32	Symphonic.....	15
Daewoo .....	13,45,52,76	Minolta .....	05,35	Tandy .....	02,15
dbx .....	14,16	Mitsubishi .....	04,05,27,35,40	Tashiko .....	09
Dynatech.....	15	Montgomery Ward.....	06	Tatung .....	30
Electrohome.....	27	MTC .....	07,15	Teac .....	15,30
Emerson .....	08,09,10,13,15,20,23,27,34,41,42,47	Multitech.....	07,15,31,32	Technics.....	08
Fisher .....	02,12,18,19,43,48,58	NEC .....	02,14,16,30,44,46,59,61,64	Teknika.....	08,09,15,21
Funai.....	15	Panasonic.....	08,53,75	Toshiba .....	05,13,19,48,49
GE .....	00,07,08,32,37	Pentax.....	05,35,44	Totevision .....	07,09
Goldstar.....	09,14,46,60	Pentax Resear .....	46	TMK.....	67
Harman Kardon.....	14	Philco .....	08,29,35,56	Unitech .....	07
Hitachi.....	05,15,35,36	Philips.....	08,29	Vector Research .....	14,16,44
Instant Replay .....	08	Pioneer .....	05,16,33	Victor .....	16
JCL .....	08	Portland.....	44,45,52	Video Concepts.....	14,16,44
JCPenney.....	02,05,07,08,14,16,30,35,51,53	ProScan.....	00	Videosonic .....	07
JVC.....	02,14,16,30,46,74	Quartz.....	02	Wards .....	05,06,07,08,09,12,13,15,25,31,35
		Quasar .....	08,53	Yamaha .....	02,14,16,30,46
		RCA .....	00,05,07,08,28,35,37,54,69	Zenith.....	11,17,26,72
		Radio Shack .....	02,06,08,09,12,15,19		

# Using Your TV and Remote

## With VCR: Setting the VCR1 Channel


The VCR 1 Channel works with the VCR1 button on the remote. If the VCR 1 Channel is set, pressing VCR selects the channel to see the VCR picture. The VCR 1 Channel setting depends on which diagram you have used from the Connection Guide. If you want to turn this feature off, set the VCR 1 Channel to Disable. Refer to the chart below for your setting.

### 1. Select the Setup Menu

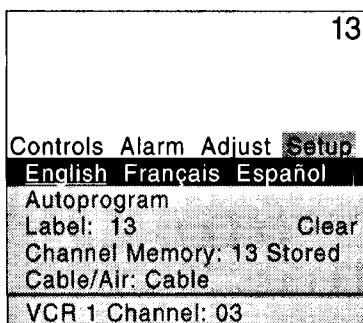


- A. Press TV to set the remote to control the TV.
- B. Press MENU•PROG to select the Setup menu. This menu is white.

### 2. Highlight VCR 1 Channel

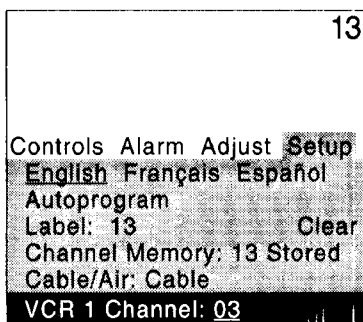 

- A. Press MOVE ▼ to highlight the VCR 1 Channel.
- B. Press MOVE ► to highlight the channel.

### 3. Enter channel number

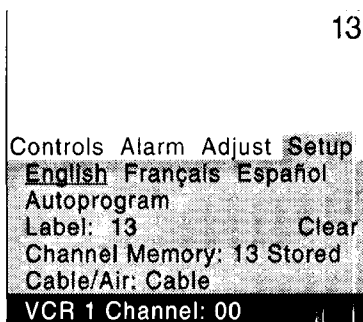 

Enter channel 00, 03, or 04. Choose your setting from the chart below. Press MOVE ▼ until "Disabled" is displayed to turn the feature off.


Diagram used from the Connection Guide:	Set VCR1 Channel to:
1B, 1C, 2B, 2C, 3B, 3C, 4C, 5C	00
4B, 5B	3 or 4 (same as 3/4 switch)

# Using Your TV and Remote
 
## With VCRs: Basic Operation

If the remote operates your VCR, this page will show you how to use it for basic functions. See pages 6-7 for more details on buttons used with your VCR.

### Turn on the VCR

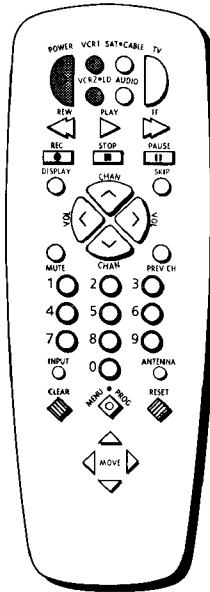


- A. Press channel 00, 03, or 04 on the TV to see what the VCR is doing.
- B. Press **VCR1** or **VCR2•LD** to set the remote to control the VCR.
- C. Press **POWER** to turn on the VCR if it did not turn on when you pressed **VCR1** or **VCR2•LD**.

### Turn off the VCR

 - A. Press **VCR1** or **VCR2•LD** to set the remote to control the VCR.
- B. Press **POWER**.

### Record one TV program and watch another

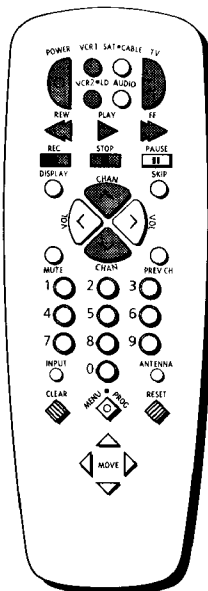

- A. Press **VCR1** or **VCR2•LD** to set the remote to control the VCR.
- B. Tune the VCR to the channel you want to record using **CHANNEL** up or down or pressing two number buttons.
- C. Press **RECORD** to start recording.
- D. Press **TV/VCR** on the VCR.
- E. Press **TV** to set the remote to control the TV.
- F. Press **CHANNEL** up or down to change channels on the TV.
- G. To see the channel you are recording, tune the TV back to channel 00, 03, or 04.

### Watch a tape in your VCR

- A. Turn on VCR.
- B. Insert a tape in the VCR.
- C. Press **PLAY** to start the tape playing.
- D. Press **STOP** when you are finished.
- E. Press **REW** to rewind the tape.

# Using Your TV and Remote

## With a Satellite Receiver: Basic Operation

You may also be able to use the TV's remote with satellite receivers. Refer to your *Satellite Receiver owner's manual* to hook up your *Satellite Receiver*. The remote may need to be programmed for other brands of satellite receivers, but may not operate all models of the brands listed below. Use the codes below or on the sheet packed in with your remote.

Follow the instructions below for basic operation of your receiver. You may also want to experiment with other buttons on the remote to see if they work with your receiver.

 
### Program the remote for your Satellite Receiver

### Turn on the Satellite Receiver

### Turn off the Satellite Receiver

### Satellite Receiver Codes

Chaparral .....	80,81
Cheyenne .....	81
Drake .....	82,83
DSS .....	00
General Instruments...	92,93,94
RCA .....	00
Realistic .....	84
Sierra I,II,III.....	81
STS1.....	85
STS2.....	86
STS3.....	87
STS4.....	88
Toshiba .....	89
Uniden.....	90
Video Cipher II.....	91

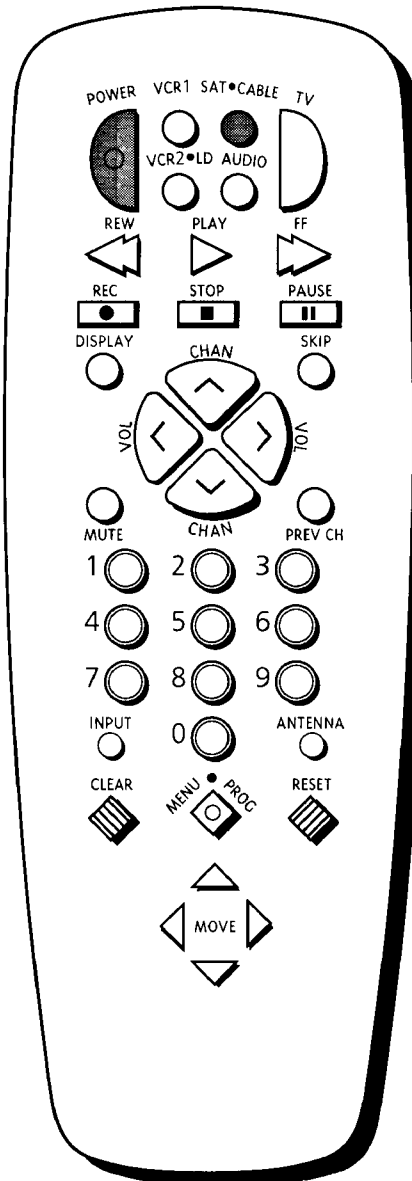

- A. Point the remote at the satellite receiver and hold **SAT•CABLE**.
- B. Enter the code for your brand from the code list below.
- C. Release **SAT•CABLE**.
- D. Press **POWER**. If nothing happens, try pressing **SAT•CABLE** and then **POWER**.

- A. Press **SAT•CABLE** to set the remote to control the satellite receiver.
- B. Press **POWER** to turn on the receiver if it did not turn on when you pressed **SAT•CABLE**.


- A. Press **SAT•CABLE** to set the remote to control the Satellite receiver.
- B. Press **POWER** to turn off the receiver.

# Using Your TV and Remote
 
## With a Cable Box: Programming and Basic Operation

Refer to the Connection Book or contact your cable company to hook up your cable box. If you have a cable box with its own remote, then you may also be able to use the TV's remote with your cable box. This remote may not operate all models of the brands listed below. Use the codes below or on the sheet packed in with your remote.

### Program the remote for your cable box

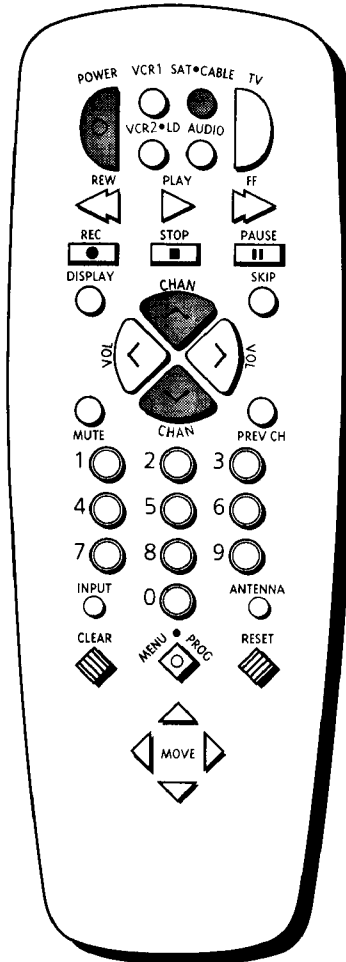

- A. Point the remote at the cable box and hold SAT•CABLE.
- B. Enter the code numbers for your brand from the list below.
- C. Release SAT•CABLE.
- D. Press POWER to turn it on. If nothing happens, try pressing SAT•CABLE and then POWER.
- E. Repeat A-D with another code if the first one does not work.

### Basic Operation: Turn on the Cable Box

- A. Tune TV to channel 02, 03, 04, 05, or 06--the cable box channel.
- B. Point remote at the cable box and press SAT•CABLE.
- C. Press POWER to turn it on.
- D. Press CHANNEL up or down to change channels on the cable box.

### Turn off the Cable Box

- A. Press SAT•CABLE.
- B. Press POWER to turn it off.

### Cable Box Codes

 
ABC .....	22,46,53,54	NSC .....	09	Sprucer .....	27
Anvision.....	07,08	Oak .....	01,16,38	Starcom .....	46
Cablestar .....	07,08	Oak Sigma .....	16	Stargate 2000 .....	58
Diamond .....	56	Panasonic.....	03,27,39,61	Sylvania.....	11,59
Eagle .....	07,08	Philips .....	07,08,19,21,26,28,29,32,33,40,41	Teknika .....	06
Eastern International.....	02	Pioneer .....	18,20,44	Texscan.....	10,11,59
General Instrument .....	46	Randtek.....	07,08	Tocom.....	17,21,49,50,55
GI 400 .....	04,05,15,23,24,25,30,36	RCA .....	00,27	Unika .....	31,32,41
Hamlin .....	03,12,13,34,48	Regal.....	03,12,13	Universal.....	51,52,60
Hitachi.....	37,43,46	Regency.....	02,33	Viewstar.....	07,08,19,21,26,28,29,32,33,40,41
Jerrold.....	04,05,15,23,24,25,30,36,45,46,47,62,65	Samsung .....	44	Warner Amex.....	44
Macom .....	37,43	Scientific Atlanta.....	03,22,35,63,64	Zenith .....	14,42,57,61
Magnavox.....	07,08,19,21,26,28,29,32,33,40,41	Signature.....	46		

# Using Your TV and Remote

## With a Cable Box: Setting the Cable Channel


The Cable Channel works with SAT•CABLE button on the remote. If the Cable Channel is set, pressing SAT•CABLE selects the channel to see cable channels. The Cable Channel setting depends on which channel your cable box must be on to see cable channels. The channels usually used are 02, 03, 04, 05 or 06. Consult your cable company for more information.

### 1. Select the Setup menu

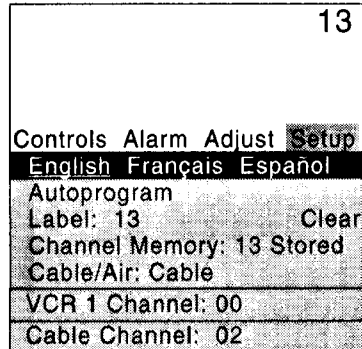


- A. Press TV to set the remote to control the TV.
- B. Press MENU•PROG to select the Setup menu. This menu is white.

### 2. Highlight Cable Channel

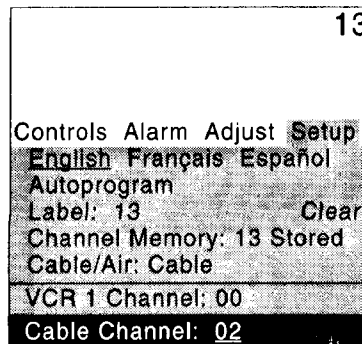 

- A. Press MOVE ▼ to move down the menu until Cable Channel is highlighted.
- B. Press MOVE ► to underline the item.

### 3. Enter channel number

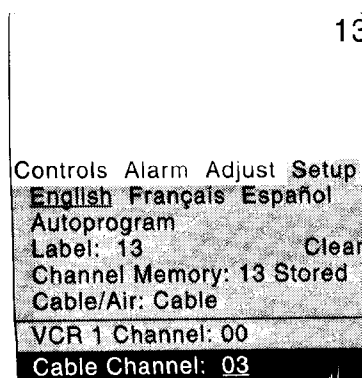 

Enter the number for your cable box, either 02, 03, 04, 05, or 06. Press MOVE ▼ until "Disabled" is displayed to turn this feature off.


# Using Your TV and Remote
 
## With a Laserdisc Player: Programming and Basic Operation

Refer to your Laserdisc Player owner's manual to hook up your Laserdisc Player. The remote may need to be programmed for your laserdisc player, but may not operate all models of the brands listed below. Use the codes below or on the sheet packed in with your remote.

### Program the remote for your Laserdisc Player

### Basic Operation

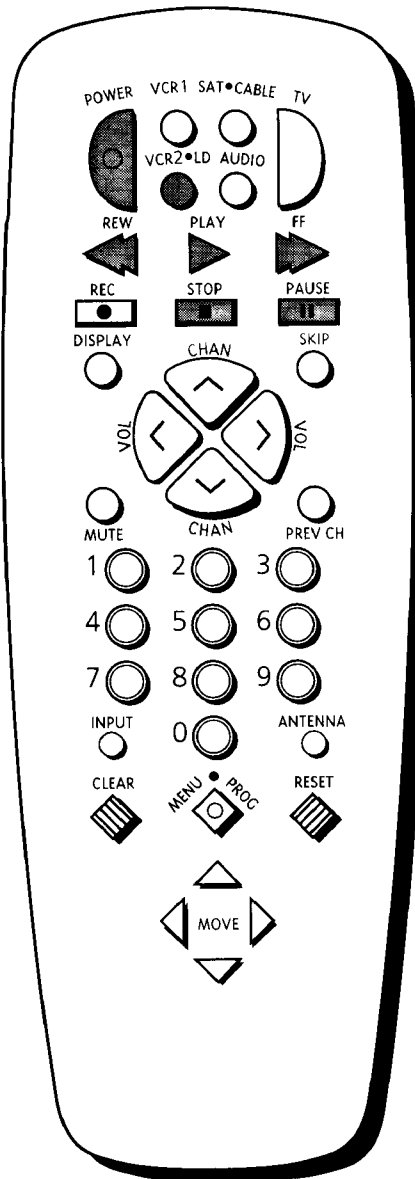

- Point the remote at the laserdisc player and hold **VCR2•LD**.
- Enter the code for your brand from the code list below.
- Release **VCR2•LD**.
- Press **POWER**. If nothing happens, try pressing **VCR2•LD** and then **POWER**.

- Tune TV to channel 00, 03, or 04.
- Point the remote at the laserdisc player and press **VCR2•LD**.
- Press **POWER** to turn it on.
- Use the buttons on the remote that relate to laserdisc player functions. Not all buttons highlighted may work with your laserdisc player.
- Press **POWER** to turn it off.

### Laserdisc Player Codes

Pioneer.....	33
ProScan.....	33
RCA.....	33

 


# Using Your TV and Remote

## With Audio Equipment: Programming and Basic Operation

Refer to the Connection Book or your Audio equipment owner's manual to hook up your audio equipment. Your remote controls some audio equipment such as a radio, CD player, tape player, turntable, or amplifier. The remote may need to be programmed for your equipment, but may not operate all models of the brands listed below. Use the codes below or on the sheet packed in with your remote.

### Program the remote for audio equipment

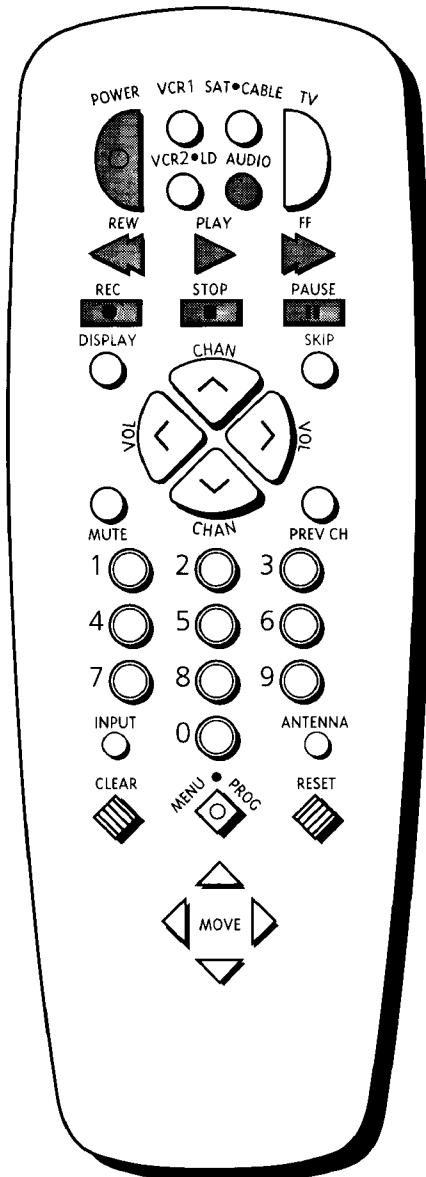

- A. Point the remote at the audio equipment and hold AUDIO.
- B. Enter the code from the code list.
- C. Release AUDIO.
- D. Press POWER to turn it on. If nothing happens, try pressing AUDIO and then POWER.
- E. Repeat A–D with another code if the first one does not work.

### Basic Operation

- A. Point the remote at the audio equipment and press AUDIO.
- B. Press POWER to turn it on.
- C. Use the buttons on the remote that relate to audio functions. Not all buttons highlighted may work with your equipment.
- D. Turn the audio equipment off using the audio component's power off button.

### Audio Codes

 
RCA/ Dimensia	
AM/FM.....	03
CD.....	07
Tape.....	06
Phono.....	05
Aux.....	04

# Adjusting Your TV

## Overall Picture


Follow the steps below to lighten or darken the overall picture without changing the color level.

### 1. Select the Controls Menu

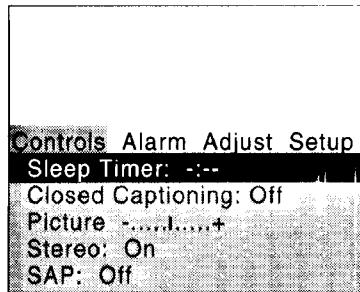


Press **MENU•PROG** to select the Controls menu. This menu is yellow.

### 2. Highlight Picture

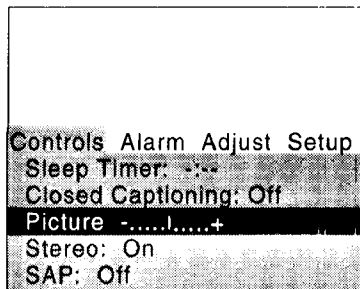 

Press **MOVE ▼** to highlight Picture.

### 3. Use **MOVE ►** and **◀** to adjust the Picture

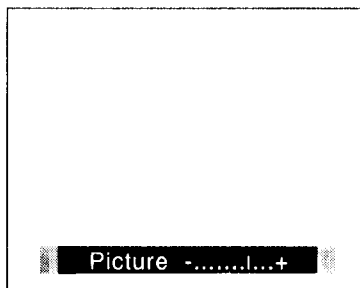 

Press **MOVE ►** to lighten the picture.

OR


Press **MOVE ◀** to darken the picture.

# Adjusting Your TV
 
## Picture Settings


Follow the steps below to change the picture on the screen to your personal setting. The chart at the bottom of the page explains your options.

### 1. Select the Adjust Menu

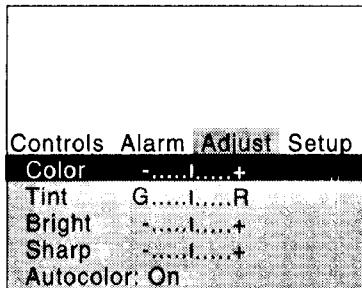

Press MENU•PROG repeatedly to select the Adjust menu. This menu is light blue.

### 2. Highlight item to change

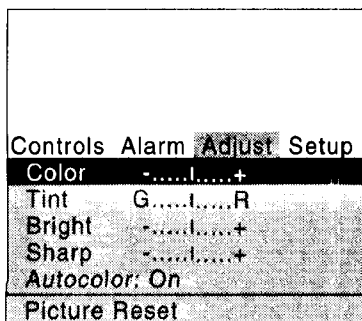 

Press MOVE ▼ to highlight the picture item you want to adjust.

### 3. Use MOVE ► or ◀ to adjust each item

Press MOVE ► or ◀ to adjust each item.

 
	Press MOVE ► to:	Press MOVE ◀ to:
<b>Color</b>	Increase color richness	Lower color to black and white
<b>Tint</b>	Give red tint to skin color	Give green tint to skin color
<b>Bright (Brightness)</b>	Add more light to dark parts of the picture	Add more dark to light parts of the picture
<b>Sharp (Sharpness)</b>	Show cleaner, clearer images	Make picture more smooth
<b>Autocolor</b>	Turn on to keep Color and Tint in proper balance each time you change channels	Turn off for manual adjustment of Color and Tint
<b>Picture Reset</b>	Reset the picture back to the original settings	Reset the picture back to the original settings

# Adjusting Your TV

## Sound Settings: Stereo, Expanded Stereo, SAP and Tone


Follow these steps to adjust the Stereo, Expanded Stereo, SAP or Tone of your TV. SAP (Second Audio Program) is sometimes used to offer the program being watched in another language. The chart below explains your options.

### 1. Select the Controls Menu

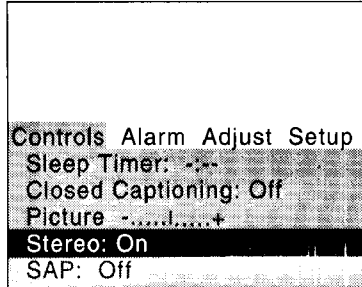

Press MENU•PROG to select the Controls menu. This menu is yellow.

### 2. Highlight item to change

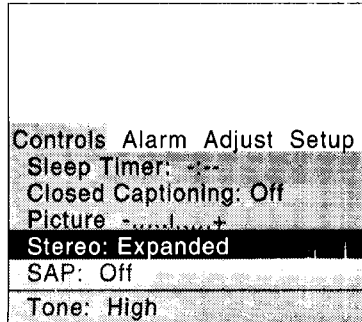 

Press MOVE ▼ to highlight the sound item you want to adjust.

### 3. Use MOVE ► or ◀ to adjust each item

Press MOVE ► or ◀ to adjust each item.

 
<b>Stereo</b>	<p><b>On</b></p> <p>Sound is automatically reproduced in stereo or mono, whichever the TV station is broadcasting.</p>	<p><b>Off</b></p> <p>Sound is reproduced in mono.</p>	<p><b>Expanded</b></p> <p>Expanded stereo adds greater width and dimension to stereo broadcasts creating a more spacious stereo sound effect.</p>
<b>SAP</b>	<p><b>On</b></p> <p>Sound is reproduced in another sound channel. If nothing happens, your broadcast may not have SAP.</p>	<p><b>Off</b></p> <p>Sound is reproduced in Stereo, Expanded Stereo or Mono, whichever is selected in the Stereo Menu Item.</p>	
<b>Tone</b>	<p><b>High</b></p> <p>High pitched sounds are louder.</p>	<p><b>Low</b></p> <p>Low pitched sounds are louder.</p>	

# Adjusting Your TV

## Sound Settings: Speakers

Follow the steps below to turn the speakers on or off in your TV. The chart below explains your options.

### 1. Select the Setup Menu

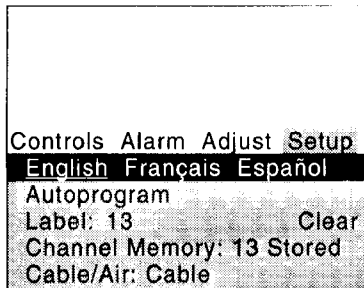

Press MENU•PROG repeatedly to select the Setup menu. This menu is white.

### 2. Highlight speakers



Press MOVE ▼ until Speakers is highlighted.

### 3. Turn Speakers on or off



Press MOVE ► or ◀ to turn the speakers on or off.

Speakers	On	Off
	The sound comes from the TV's internal speakers.	No sound comes from the TV.

# Using Advanced Features

## Placing Channels in Memory (Autoprogramming)

Only channels 2–13 appear in the TV's memory when you first turn it on. The channels available in your area must be programmed into the TV's memory when you hook up your TV. Using CHANNEL up and down allows you to scan through these channels.

 
 
You may want to add or delete a few channels if some stations have weak signals or were off the air when the TV was programmed. Refer to the *Add or Delete Channels* section below.

### 1. Place channels in memory (Autoprogram)



- Hook up an antenna, cable or components before you begin these steps or you will not be able to add channels into memory.
- Press MENU•PROG repeatedly to select the Setup Menu. This menu is white.
- Press MOVE ▼ to highlight Autoprogram.
- Press MOVE ► to start the TV adding all active channels into memory.
- Wait until the TV has cycled through all the channels and returns to the original channel.

### 2. Add or delete channels

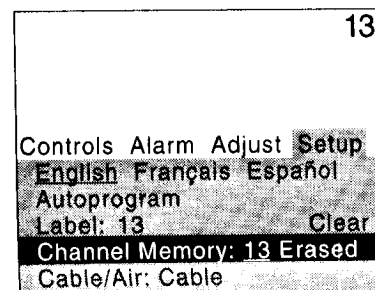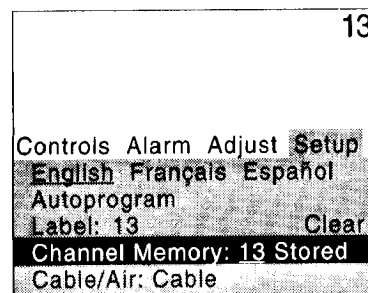


- Press MENU•PROG repeatedly to select the Setup menu. This menu is white.
- Press MOVE ▼ to highlight Channel Memory.
- Press MOVE ► to underline the channel number.
- Select the channel number you want to add or delete with the number buttons.
- Press MOVE ► to add or delete a channel (you will see Stored on the screen when added and Erased when deleted).
- Repeat D and E for more channels.

# Using Advanced Features
 
## Naming the Channels

You can name at least 20 channels with four characters in each name. **Full** appears beside Label when the memory is used up. **Fixed** appears when a channel number cannot be named. Below are the characters that can be used in a name.

### 1. Name a channel

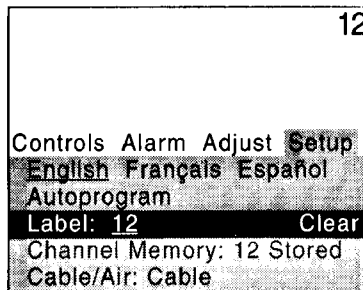

- Press MENU•PROG repeatedly to select the Setup menu. This menu is white.
- Press MOVE ▼ to highlight Label.
- Press MOVE ► to underline the channel number.
- Select the channel number with the number buttons.
- Press MOVE ► to underline the first character of the name.
- Choose the character using MOVE ▲ or ▼.
- Repeat E-F to complete the name.
- Press MOVE ◀ to move backward if you want to change an item.

### 2. Erase a name



- Follow A and B above.
- Press MOVE ► until clear is underlined.
- Press MOVE ▲ or ▼ to clear the name.

### Character List

 
A B C D E F G H I J K L M N O P Q R S T U V W X Y Z &  
' ( ) á + , - . / 0 1 2 3 4 5 6 7 8 9 : ; < = > ? @ blank space

# Using Advanced Features

## Setting the Sleep Timer

You can set your TV to turn itself off. If you're watching TV at night and fall asleep, the TV will turn off for you.


### 1. Set Sleep Timer

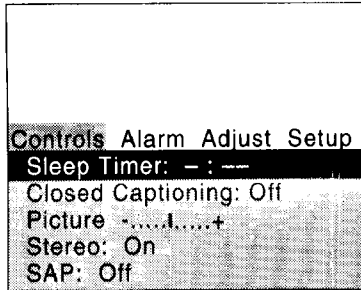


A. Press MENU•PROG to select the Controls menu and highlight Sleep Timer. This menu is yellow.

B. Press MOVE ► to enter the amount of time you want to watch TV before it shuts off. Each press equals 15 minutes.

 C. Press MOVE ◀ to subtract time from the sleep timer.

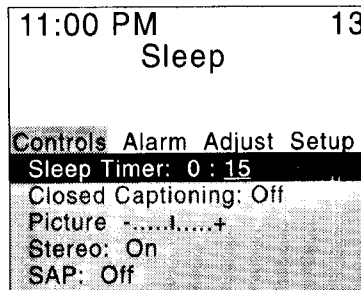


### 2. Add more time

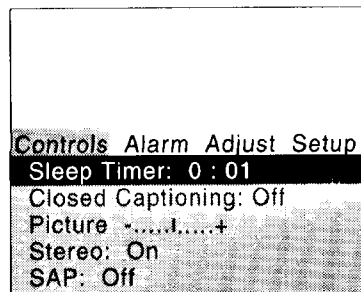 

When 0:01 appears on the screen, the TV will shut off in one minute. Press MOVE ► to add more time.

### 3. Cancel the Timer

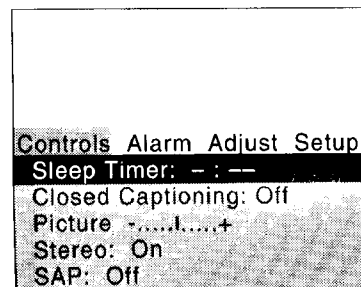 

A. Press MENU•PROG to select the Controls menu and highlight Sleep Timer.

B. Press MOVE ◀ until the time reaches - : --.




# Using Advanced Features
 
## Setting the Alarm Clock


The TV can be set to turn on each day like your alarm clock. You can set it to turn on to your favorite channel at a certain time. You can also set it to turn itself off again. The Alarm cannot be used until the clock is set.

### 1. Turn on the Alarm

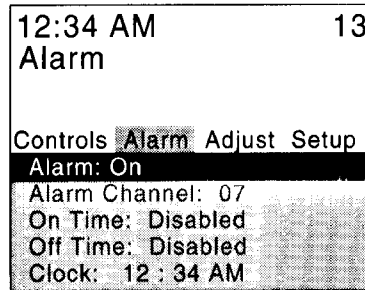


- Press MENU•PROG to select the Alarm menu and highlight Alarm. This menu is green.
- Press MOVE ► or ◀ to select On or Off.

### 2. Set the Alarm Channel

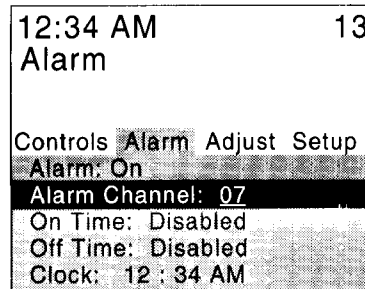 


- Press MOVE ▼ to highlight the Alarm Channel.
- Press MOVE ► to highlight the channel number.
- Enter the channel that you want the TV to turn on to with the number buttons.

### 3. Set On and Off Times

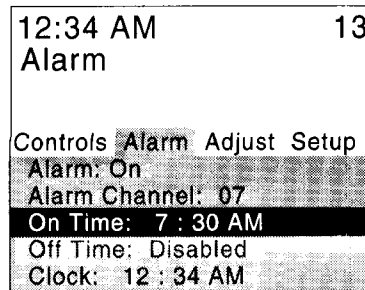 

 - Press MOVE ▼ to highlight the On or Off Time.
- Press MOVE ◀ to set the hour.
- Press MOVE ► to set the minutes.
- Press and hold MOVE ◀ to choose Disabled. This turns the TV only on or only off at a certain time each day.

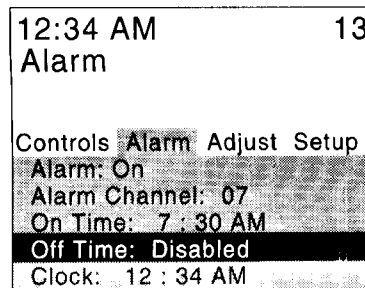


# Using Advanced Features

## Selecting a Language

The on-screen displays in this TV can be displayed in three languages: English, French, and Spanish. When you select a language, most of the displays will be shown on the screen in your preferred language.
 
### 1. Select the Setup menu

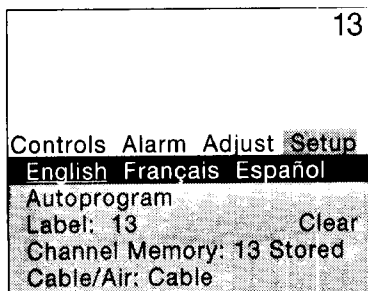

Press MENU•PROG repeatedly to select the Setup menu. This menu is white.


### 2. Select Language

 Press MOVE ◀ or ▶ to select English, Français (French), or Español (Spanish).

## Watching Closed Captioning

Closed captioning displays the audio portion of a program as words on the TV screen. It is useful for the deaf, hearing impaired, or anyone who wants to watch a program without sound. If you have turned Closed Captioning on and it does not appear on the screen, it is not available on the channel you are watching. This TV does not support the text mode. Text information typically consists of program information, weather bulletins, local activities, etc.

### 1. Select the Controls Menu

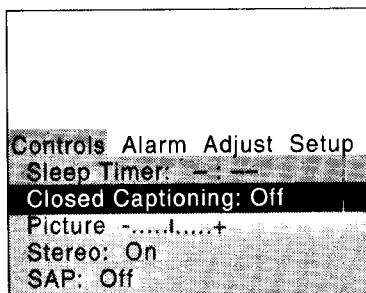


Press MENU•PROG to select the Controls menu. This menu is yellow.

### 2. Highlight Closed Captioning

 Press MOVE ▼ to highlight Closed Captioning.

### 3. Select Setting

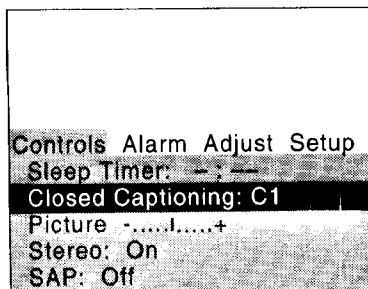

Press MOVE ◀ or ▶ to select Off, C1, or C2. Select C1 for full translation of the primary language in your area. Select C2 for secondary language translation, simplified English, or whatever is being broadcast in your area.

# Using Advanced Features

## Setting Your TV for Antenna or Cable

Your TV automatically adjusts this feature when the TV places channels in memory (Autoprogram). Follow the steps below to change the setting as needed.

### 1. Select the Setup menu



Press MENU•PROG repeatedly to select the Setup menu. This menu is white.

### 2. Highlight Cable/Air



Press MOVE ▼ to highlight Cable/Air.

### 3. Select Cable or Air

 


Press MOVE ◀ or ▶ to select Cable or Air. Select Cable if you have cable. Select Air if you have a home antenna connected to your TV.

# References

## Front Panel Buttons

The CHANNEL up and down and VOLUME + and - buttons not only change the channels and volume of the TV, but work like the MOVE buttons when you are in the TV menus. For details on using buttons with menus, see *Menu Basics* on page 5.

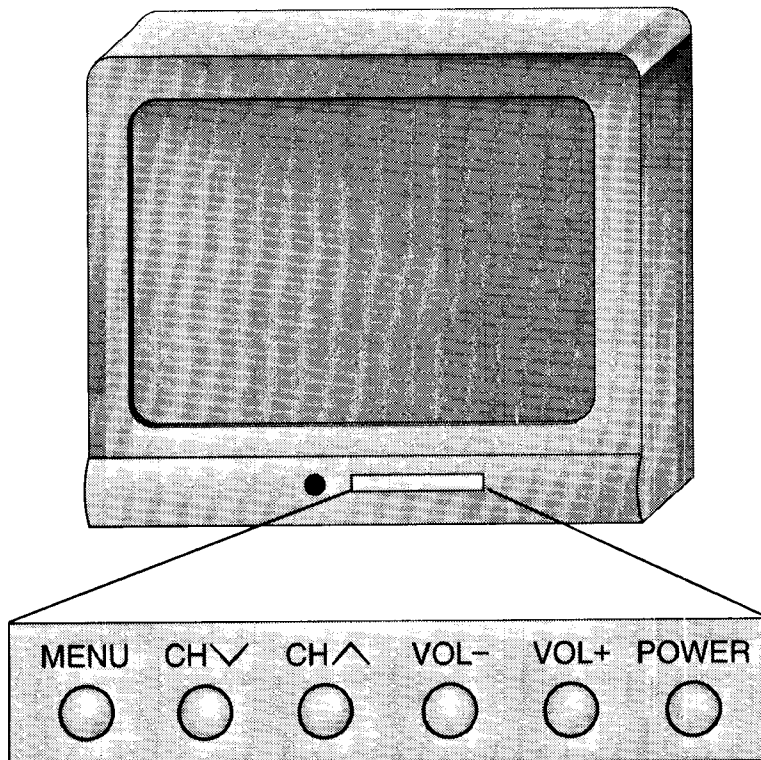


<b>MENU</b>	Shows menus on screen. Moves from menu to menu.
<b>CH ^ and v</b>	Channel up and down. Scans up and down through channels in the TV's memory. Moves up and down menus.
<b>VOL + and -</b>	Volume up and down Raises and lowers sound. Moves left and right on a menu line. Changes a features setting.
<b>POWER</b>	Turns the TV on or off.

# References
 
## Displays on the Screen

Your TV shows the settings of several features on the screen. To see what features have been set on your TV, press DISPLAY on the remote.

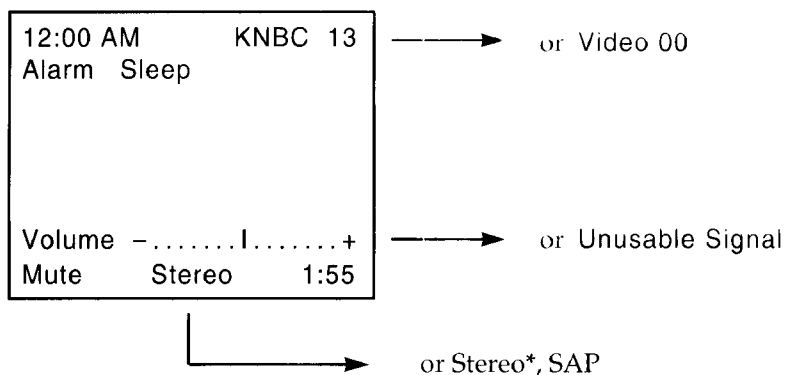

### Screen Display

### Description

**12:00 AM**

Time of the clock. *Details are on page 3.*

**KNBC**

Name you chose to describe the channel. *Details are on page 21.*

**13**

Channel number you are watching.

**Video 00**

Indicates that a component is connected to the VIDEO jack on the back of the TV, it is turned on, and channel 00 is selected.

**Alarm**

Alarm clock is set to turn on or off. *Details are on page 23.*

**Sleep**

Sleep Timer is set to turn off the TV. *Details are on page 22.*

**Volume**

Sound level of the TV.

**Unusable Signal**

No signal is coming in on video input channel 00.

**Mute**

There is no sound. *See MUTE button on page 6.*

**Stereo**

The sound is being broadcast in stereo. *Details are on page 18.*

**Stereo\***

SAP is selected in the menu, but it is not available for the program being broadcast. *Details are on page 18.*

**SAP**

Secondary Audio Program. SAP is selected and it is available for the program being broadcast. *Details are on page 18.*

**1:55**

The time remaining for commercial skip. *Details are on page 6.*

# References

## Trouble Checks

You may have problems that can be fixed with a few minor adjustments. Look for the type of problem you are having below and then try the suggestions to get your TV going again. *For warranty information see Back Cover.*

### Trouble

### Checks and Adjustments

#### Power

TV will not turn on

Plug TV in.  
Plug something else into the outlet to make sure it is working.  
Make sure batteries in the remote are not dead.  
Aim the remote at the TV and press TV.  
Make sure batteries are placed in the remote the right way. *See batteries on page 2.*  
Unplug TV for a few minutes and then turn it on again.

No picture, no sound but TV has power

Check antenna connections.  
Check position of Cable/Air feature. *See page 25.*  
Try another channel. Inactive channel may be tuned.  
Make sure component connected to the VIDEO INPUT jacks is turned on if you choose channel 00.  
Make sure TV is tuned to the same channel as the switch on back of VCR if watching a VCR.  
Make sure TV/VCR button on VCR is in correct position when using VCR.

#### Picture

Blank screen or Unusable Signal appears on screen

Try another channel.  
Scan the channels.

Picture poor, sound okay

Check antenna connections.  
Adjust TV picture. *See pages 16-17.*

# Reference

## Trouble Checks

### Trouble

### Checks and Adjustments

#### Remote

- Remote lockup Remove batteries and hold down one or more buttons for several seconds to drain the microprocessor inside the remote and reset it. Re-install the batteries and try remote again.
- Buttons don't work when you press them Press TV to set the remote to control the TV. *See buttons on page 6-7.*
- Works part or none of the time Clear the path between the remote and TV of any objects.  
Aim the remote at the component you are trying to control.  
Press TV so remote will control TV.  
Make sure batteries in the remote are not dead.  
See if batteries are placed in remote correctly. *See batteries, page 2.*
- Can't select certain channel Press number buttons. Channel may not be in memory. *See autoprogram on page 20.*  
Make sure TV/VCR switch on VCR is in the TV position.  
For numbers over 100, press and hold 1 until 1-- appears, then press the other two numbers.  
Set Cable/Air feature to Cable for channels higher than 69. *See page 25.*

#### Sound

- Noisy stereo reception Turn Stereo off. The stereo broadcast may not be clear. *See page 18.*
- Picture okay, no sound Press VOLUME + or MUTE to restore sound.  
Make sure TV speakers are on. *Details are on page 19.*
- Picture okay, sound poor Try another channel.  
Try adjusting the Tone. *See page 18.*  
Change Stereo to off. The stereo broadcast may not be clear. *See page 18.*
- No stereo on stereo station Make sure Stereo is turned on. *See page 18.*

#### TV Turns on or off

- Turns off by itself Check Sleep Timer. *See sleep timer on page 22.*  
Wait 30 seconds and turn on again, a power surge may have occurred.  
Check Alarm Off time. *See alarm clock on page 23.*
- Turns on by itself Check Alarm On Time. *See alarm clock on page 23.*  
Check clock time. *See clock on page 3.*
- Does not turn off at Alarm Time Make sure alarm is turned on or off. *See alarm clock on page 23.*  
Check clock time. *See clock on page 3.*

**SEARS**

# OWNER'S MANUAL

MODEL NO.  
274.43948590  
SERIES

WHEN ORDERING REPAIR  
PARTS, ALWAYS GIVE THE  
FOLLOWING INFORMATION:

1. NAME OF ITEM  
Sears Color Television  
Receiver
2. MODEL NUMBER
3. PART DESCRIPTION

## SEARS 31" TABLETOP COLOR TELEVISION WITH REMOTE CONTROL

Your Sears Television has added value when you consider that Sears has service units nationwide staffed with Sears trained technicians—professional technicians specifically trained on Sears home entertainment products, having the parts, tools and equipment to ensure that we meet our pledge to you —“We Service What We Sell.”

For repair service, call:  
1-800-4-REPAIR  
(1-800-473-7247)

For replacement parts information and ordering, call:  
1-800-FON-PART  
(1-800-366-7278)

### WARRANTY

#### **FULL 90-DAY WARRANTY ON COLOR TELEVISION**

For the first 90 days from the date of purchase, Sears will repair this television, free of charge, if defective in material or workmanship.

#### **LIMITED WARRANTY ON ALL PARTS EXCEPT PICTURE TUBE**

After 90 days from the date of purchase and up to one year, Sears will furnish, free of charge, a replacement for any defective part in this television. You pay for labor.

#### **LIMITED WARRANTY ON PICTURE TUBE**

After 90 days from date of purchase and up to two years, Sears will furnish, free of charge, a replacement for the picture tube, if defective. You pay for labor.

#### **WARRANTY SERVICE IS AVAILABLE BY CONTACTING THE NEAREST SEARS SERVICE CENTER/DEPARTMENT IN THE UNITED STATES.**

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Sears, Roebuck and Co., Dept. 817WA, Hoffman Estates, IL 60179

Printed in U.S.A. 1/95  
1508117A



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>