



sears

Please refer to part numbers when reordering

For questions or comments about product:

Email: service@nanshanint.com or Call toll-free: 1-877-998-1697

Made in / Hecho en CHINA

Distributed by Sears, Roebuck and Co., Hoffman Estates, IL 60179

See our extensive assortment of outdoor living products
on-line at www.sears.com and www.kmart.com

OWNER'S MANUAL

FIRE PIT WITH SLATE

Product Code: 03907333-3

UPC Code: 0 45774 87433 4

Date of Purchase: ____/____/____


OWNER'S MANUAL FOR KSN:820-039073-333 / 12026

HOW TO INSTALL, USE, AND MAINTAIN YOUR FIRE PIT

1. Safety Precautions

- SAFETY NOTICE: IF THIS FIRE PIT IS NOT PROPERLY INSTALLED, A HOUSE FIRE MAY RESULT. FOR YOUR SAFETY, FOLLOW THE INSTALLATION DIRECTIONS. CONTACT LOCAL BUILDING OFFICIALS ABOUT RESTRICTIONS AND INSTALLATION INSPECTION REQUIREMENTS IN YOUR AREA.
- Overfiring the firepit may cause a house fire. If a firepit glows, you are overfiring.
- Never use gasoline or other flammable liquids to start or 'freshen up' a fire.
- Dispose of ashes in a metal container.

2. Installation instructions

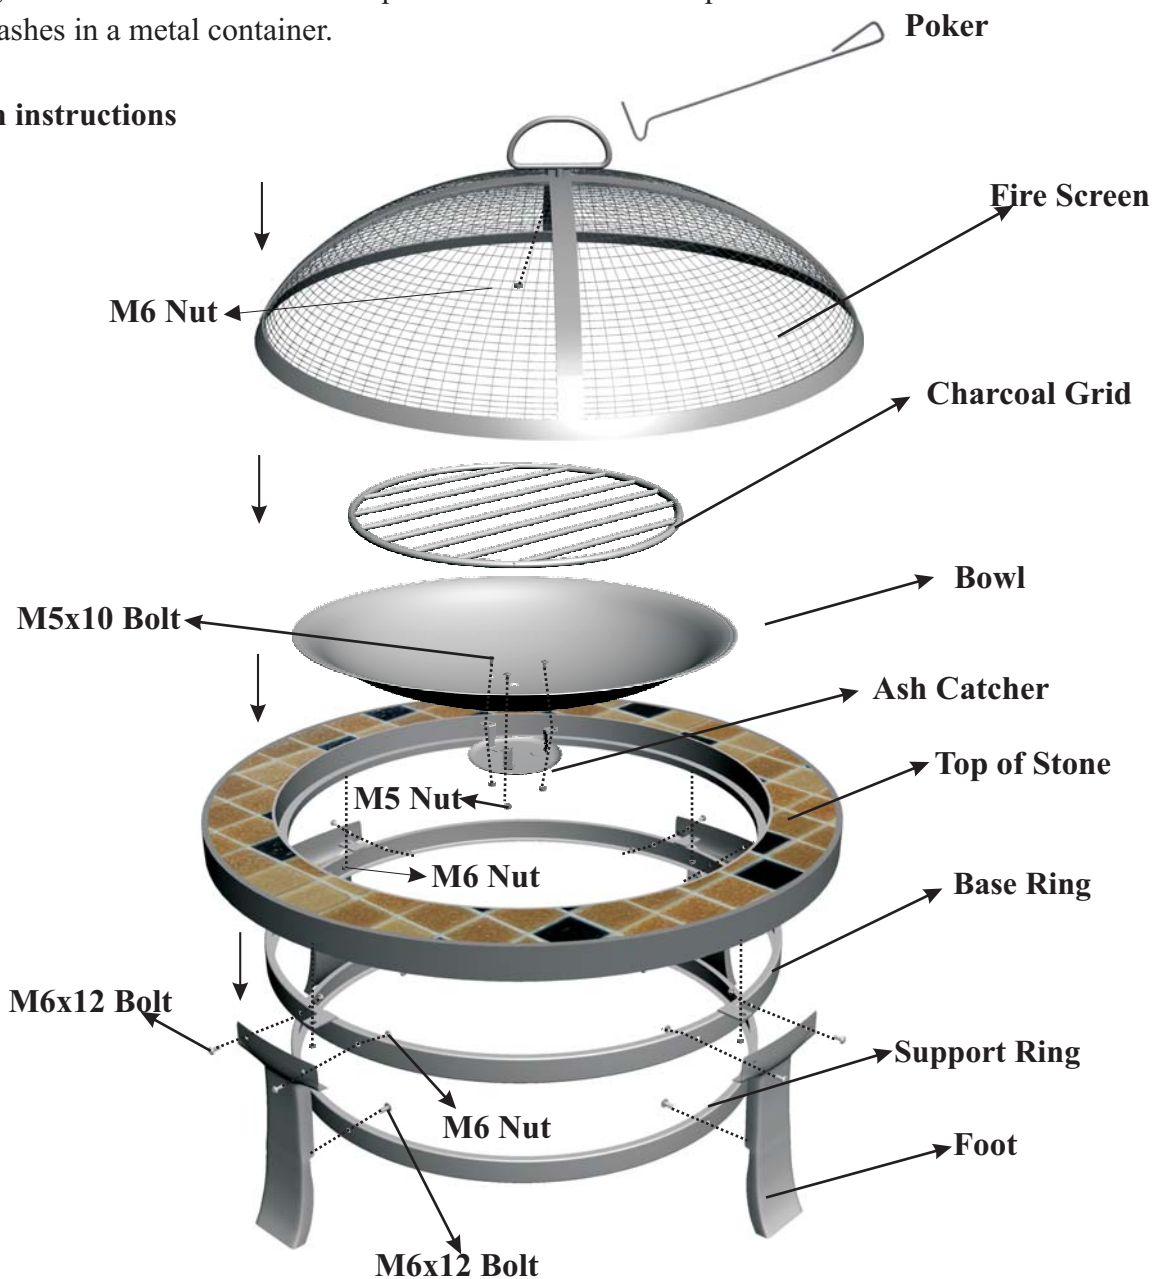

M5x10 Bolt	3pcs
M6x12 Bolt	12pcs
M6 Nut	13pcs
M5 Nut	3pcs

Tools needed for assembly:

Adjustable wrench (not provided)
Screwdriver (not provided)

THIS FIRE PIT IS FOR OUTDOOR USE ONLY

3. Use Instructions

- A. Your fire pit should never be used closer than 36" from walls on the back of fire pit.
- B. After lighting wood, do not leave fire pit unattended. Remember to keep children and pets away from lit fire pit at all times. To avoid harm to people, pets, or property, do not move the fire pit once the wood has been lit. Once wood is lit, the fire pit and surrounding surfaces become very hot, avoid skin contact with all hot surfaces on fire pit. To extinguish wood, douse wood with sand or spray with a fine mist of water.
- C. Do not use gasoline, gasoline-type lantern fuel, kerosene, charcoal lighter fluid, or similar liquids to start or 'freshen up' a fire in this appliance. Keep these flammable liquids well away from this appliance while it is in use.
- D. Disposal of Ashes: Ashes should be placed in a metal container with a tight fitting lid. The closed container of ashes should be placed on a noncombustible floor or on the ground, away from all combustible materials, pending final disposal. The ashes should be retained in the closed container until all cinders have thoroughly cooled.
- E. Keep furnishings and other combustible materials away from firepit.

4. Maintain Instructions

Inspect fire pit twice monthly and clean if necessary, wipe with a damp cloth.
Store indoors and cover the product when not in use.

sears

For questions or comments about product:
Email: service@nanshanint.com or Call toll-free: 1-877-998-1697

Made in / Hecho en CHINA, Distributed by Sears, Roebuck and Co., Hoffman Estates, IL 60179
sears.com

See our extensive assortment of outdoor living products on line at
www.sears.com and www.kmart.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>