

SanDisk®

Cruzer™ USB Flash Drive

Quick Start Guide

MINIMUM SYSTEM REQUIREMENTS:

- Storage only: Windows® XP, Windows Vista®, Mac OS® 10+ and Linux
- USB 2.0 port required for high-speed data transfer
- Requires high-power USB hub port

DISCONNECTING

You don't need to shut down your computer to disconnect the USB Flash Drive, but to avoid losing data you should never remove the device from the USB port while the LED is flashing. If a drive window is open, close any associated windows before attempting to remove your USB Flash Drive.

Windows® Operating System

Use the "Safe to Remove Hardware" hotplug icon in the notification area of the taskbar to safely remove the device before unplugging. The notification area is to the right of the taskbar where you usually see the current time displayed.

1. In the notification area, right-click on the "safe to remove hardware" hotplug icon.
2. Select the device you want to unplug, and then click Stop.
3. When Windows notifies you that it is safe to do so, unplug the USB Flash Drive from your computer.

Mac OS® Operating system Software

1. Drag the removable disk to the desktop Trash icon.
 2. Unplug your USB Flash Drive.
- (Note: LED may stay illuminated)

Disposal Instructions

Do not dispose of this device with unsorted household waste. Improper disposal may be harmful to the environment and human health. Please refer to your local waste authority for information on return and collection systems in your area.

www.sandisk.com/wug

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>