



ErgoBoard™ Keyboard Manual

P73752

F8E817-PS2

Connecting Your ErgoBoard™

- a. Make sure your computer is turned "OFF".
- b. Remove the existing keyboard.
- c. Locate the computer's PS/2 port on the back of your CPU.
- d. Insert the keyboard's PS/2 connector into the PS/2 port.
- e. Turn your computer on. At this point your keyboard will work with the built-in Microsoft® operating system. To use the multimedia function keys you must install the included software.





 




 
 







Installing the Software

WINDOWS® 95, 98, 2000, NT®, AND Me

- a. Insert the 3.5" driver diskette into your A: or B: drive.
- b. Click on "Start" in the lower left corner of your screen, then click on "Run".
- c. Type "A:\setup" (or "B:\setup") and click "OK".
- d. Follow the on-screen instructions to complete the installation.

Using the Keyboard Multimedia Function Keys

The ErgoBoard™ keyboard utilizes the F1-F12 function keys, the Print Screen, Scroll Lock, Pause/Break, Insert, Home, and Page Up keys in conjunction with the “Fn” key. These buttons provide a fast, easy, and convenient way to navigate the Internet. The multimedia functions are enabled by pressing the “Fn” key and releasing. At that point, when you press one of the F1-F12 or other listed special keys, that multimedia function will occur. To turn off the multimedia functions, press and release the “Fn” key. This will return the F1-F12 and other special keys to their normal operation.

KEY	SYMBOL	FUNCTION	DESCRIPTION
INTERNET FUNCTIONS			
F1		BACK	GO TO PREVIOUS PAGE
F2		FORWARD	GO TO NEXT PAGE
F3		STOP	STOP CURRENT TRANSMISSION
F4		REFRESH	UPDATE CURRENT PAGE
F5		SEARCH	ACTIVATES WEB SEARCH WINDOW
F6		FAVORITES	GO TO FAVORITES FILE
F7		HOME PAGE	GO TO DEFAULT HOME PAGE
F8		e-MAIL	ACTIVATE e-MAIL SYSTEM
MEDIA FUNCTIONS			
F9		MUTE	MUTE SOUND. PRESS AGAIN TO RESUME SOUND
F10		VOLUME DOWN	DECREASE VOLUME
F11		VOLUME UP	INCREASE VOLUME
F12		PREVIOUS	PLAY PREVIOUS TRACK
PRINT SCREEN		STOP MEDIA PLAY	STOP PLAYING CURRENT MEDIA
SCROLL LOCK		PLAY/PAUSE	PLAY OR PAUSE CURRENT TRACK
PAUSE/BREAK		NEXT	GO TO NEXT TRACK. IN VIDEO FILE, BUTTON ACTIVATES FAST FORWARD
INSERT		MEDIA	ACTIVATE WINDOWS MEDIA PLAYER
HOME		CALCULATOR	LAUNCH CALCULATOR
PAGE UP		MY COMPUTER	OPENS "MY COMPUTER" FILE

Information

FCC Statement

DECLARATION OF CONFORMITY WITH FCC RULES FOR ELECTROMAGNETIC COMPATIBILITY

We, Belkin Components, of 501 West Walnut Street, Compton CA 90220, declare under our sole responsibility that the product:

F8E817-PS2

to which this declaration relates:

Complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CE Declaration of Conformity

We, Belkin Components, declare under our sole responsibility that the F8E817-PS2 to which this declaration relates, is in conformity with Generic Emissions Standard EN50081-1 and with Generic Immunity Standard EN50082-1 1992.

Belkin Components Limited Lifetime Product Warranty

Belkin Components warrants this product against defects in materials and workmanship for its lifetime. If a defect is discovered, Belkin will, at its option, repair or replace the product at no charge provided it is returned during the warranty period, with transportation charges prepaid, to the authorized Belkin dealer from whom you purchased the product. Proof of purchase may be required.

This warranty does not apply if the product has been damaged by accident, abuse, misuse, or misapplication; if the product has been modified without the written permission of Belkin; or if any Belkin serial number has been removed or defaced.

THE WARRANTY AND REMEDIES SET FORTH ABOVE ARE EXCLUSIVE IN LIEU OF ALL OTHERS, WHETHER ORAL OR WRITTEN, EXPRESSED OR IMPLIED. BELKIN SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

No Belkin dealer, agent, or employee is authorized to make any modification, extension, or addition to this warranty.

BELKIN IS NOT RESPONSIBLE FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY, OR UNDER ANY OTHER LEGAL THEORY, INCLUDING BUT NOT LIMITED TO LOST PROFITS, DOWNTIME, GOODWILL, DAMAGE TO OR REPROGRAMMING, OR REPRODUCING ANY PROGRAM OR DATA STORED IN OR USED WITH BELKIN PRODUCTS.

Some states do not allow the exclusion or limitation of incidental or consequential damages or exclusions of implied warranties, so the above limitations of exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.



belkin.com

Belkin Components

501 West Walnut Street
Compton • CA • 90220 • USA
Tel: 310.898.1100
Fax: 310.898.1111

Belkin Components, Ltd.

Unit 13 • Gatelodge Close • Round Spinney
Northampton • Northants • NN3 8RX • United Kingdom
Tel: +44 (0) 1604678300
Fax: +44 (0) 1604678330

Belkin Components B.V.

+31 (0) 20 654 7300
Starparc Building • Boeing
Avenue 333
1119 PH Schiphol-Rijk •
The Netherlands

Belkin Components, Ltd.

+61(2) 4325 4666
7 Bowen Crescent • West Gosford
• NSW 2250 • Australia

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>