


ASUS®

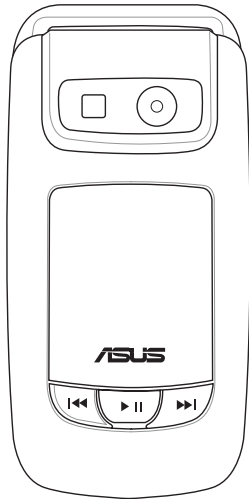

welcome

**ASUS M307**

# Preface

Congratulations on your purchase of an ASUS M307 mobile phone. Read this manual carefully and keep it in a safe place for future reference.

## About this manual

Every effort has been made to ensure that the contents of this manual are correct and up to date. However, the manufacturer makes no guarantee regarding the accuracy of the contents, and reserves the right to make changes without notice.

# Safety Precautions

For your safety and to keep your phone in good operating condition, read the following tips and reminders carefully before using your phone.

- Do not use your phone while driving, unless you use an earphone or hands-free car kit.
- Switch off the phone while in an aircraft. Wireless devices may cause interference in the aircraft communication and navigation systems.
- Switch off the phone when you are inside a hospital or near medical equipment. Follow hospital rules and regulations on using devices that may cause interference.
- Do not use the phone where blasting is in progress. Strictly observe restrictions where required.
- Use the phone to call for help or to help others during emergencies.
- Ensure that the phone is switched off before removing the battery or SIM card.
- Refer phone servicing only to qualified personnel.
- Treat battery with care. Do not take it apart, expose to fire or high temperature, or short circuit with metal objects.
- Use only approved accessories. Do not connect incompatible products or devices.

- For use with battery: MANUFACTURER - WELLDONE for M307 Model. Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.
- Switch off the phone when refueling. Do not use the phone near fuels or chemicals.
- Always keep the phone dry and free from dust.
- Follow the instructions in this user guide.

\*SAR: 0.594W/kg for GSM Head; 0.487W/kg for DCS Head.

## Copyright © 2006 ASUS All Rights Reserved.

No part of this manual, including the products and software described in it, may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form or by any means, except documentation kept by the purchaser for backup purposes, without the express written permission of ASUS INC. ("ASUS").

Product warranty or service will not be extended if: (1) the product is repaired, modified or altered, unless such repair, modification or alteration is authorized in writing by ASUS; or (2) the serial number of the product is defaced or missing.

ASUS provides this manual "as is" without warranty of any kind, either express or implied, including but not limited to the implied warranties or conditions of merchantability or fitness for a particular purpose. In no event shall ASUS, its directors, officers, employees, or agents be liable for any indirect, special, incidental, or consequential damages (including damages for loss of profits, loss of business, loss of use or data, interruption of business and the like), even if ASUS has been advised of the possibility of such damages arising from any defect or error in this manual or product.

Specifications and information contained in this manual are furnished for informational use only, and are subject to change at any time without notice, and should not be construed as a commitment by ASUS. ASUS assumes no responsibility or liability for any errors or inaccuracies that may appear in this manual, including the products and software described in it.


Products and corporate names appearing in this manual may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit, without intent to infringe.

## Package contents


The following illustration displays the package contents of your new phone.



M307 Handset

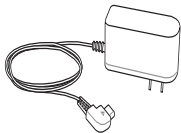

Travel Charger

 


700 mAh  
Li-ion Battery




Stereo Headset




USB cable

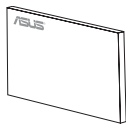


User's Manual

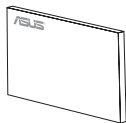

Quick Start Guide

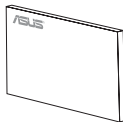

Warranty Card

 

Handset Manager CD-ROM

# Welcome

The M307 is a stylish and fashionable new phone from Asus, with all the functions and utilities to make it a useful tool in today's mobile world. The M307 comes equipped with a built-in camera, MMS/SMS messaging capability, organizer, Java games, audio player, WAP, GPRS, and a miniSD card slot. In addition to the built-in internal phone memory, the miniSD card\* provides additional memory where you can store your contact information, messages, text, graphics, and audio files. The M307's audio player enables you to play back your favorite music.

## Features

- Wide variety of calling and messaging functions
- Built-in camera
- Media center with audio player, and games for your entertainment
- MMS and SMS messaging capability
- Personal information organizer with alarm, calendar, calculator and other useful tools to manage your time
- WAP and GPRS capability to check e-mail or browse web service

<b>Preface</b> .....	2	Low Battery Indicators .....	19
<b>About this manual</b> .....	2	Charging Complete .....	20
<b>Safety Precautions</b> .....	3	<b>Turning On and Off</b> .....	20
<b>Copyright</b> .....	5	SOS .....	20
<b>Package Contents</b> .....	6	Input PIN Code .....	20
<b>Welcome</b> .....	7	<b>Calls Making</b> .....	20
<b>Contents</b> .....	8	Common Calls .....	20
<b>Overview of M307</b> .....	15	International Calls .....	21
Rear View .....	16	Speed Dialing .....	21
Front View .....	16	<b>Call Ending</b> .....	21
Left View .....	16	<b>Volume Adjustment</b> .....	21
<b>Getting Started</b> .....	16	<b>Silent &amp; Hands-free Speaker</b> .	21
<b>SIM &amp; Battery Installation</b> .....	17	<b>Call Answering</b> .....	21
<b>SIM &amp; Battery Uninstallation</b> .	18	<b>Phonebook</b> .....	22
<b>The Mini SD</b>		Add a New Contact .....	22
<b>Installation &amp; Uninstallation</b> ..	18	Search a Contact .....	23
<b>Battery Charging</b> .....	19	Copy the Phonebook .....	23
Start Charging .....	19	Copy a Contact .....	23
In Charging .....	19	Delete All Contacts .....	23



Delete a Contact .....	23	Call Cost's Limit .....	28
Edit Group .....	23	<b>Call Time</b> .....	28
Set Up My Phone Number .....	24	<b>Call Filter</b> .....	29
<b>Other Functions</b> .....	24	Ignore List Modification .....	29
Reject a Call .....	24	Ignore List Deletion .....	29
Speed Dial .....	24	Privileged List Modification .....	29
Call Waiting .....	24	Privileged List Deletion .....	29
Hide My Number .....	24	Filter Setting .....	29
Call Barring .....	24	<b>Security</b> .....	30
Call Forwarding .....	25	PIN .....	30
Fixed Dialing .....	26	Phone Lock Code .....	30
Other Functions .....	26	<b>Text Entry</b> .....	30
<b>Call Log</b> .....	26	<b>Basics</b> .....	30
Missed Calls .....	27	<b>Text Input Methods</b> .....	31
Answered Calls .....	27	<b>Multitap Text Entry</b> .....	31
Dialed Calls .....	27	<b>Smart Text Entry</b> .....	32
Call Cost .....	27	<b>Common Words Text Entry ...</b>	32
Check Call Cost .....	27	<b>Symbols text Entry</b> .....	32
Clear Counters .....	28	<b>Common Settings</b> .....	33

 
<b>Date/Time</b> .....	33	.....	38
<b>Language</b> .....	33	<b>Outbox</b> .....	39
<b>Shortcut</b> .....	33	<b>Common Words</b> .....	39
<b>LED</b> .....	33	<b>SMS Settings</b> .....	39
<b>Auto Keyboard Lock</b> .....	33	<b>SMS Memory</b> .....	40
<b>Greeting Text</b> .....	34	<b>Private SMS</b> .....	40
<b>Factory Settings</b> .....	34	<b>Cell Broadcast</b> .....	41
<b>Firmware Upgrade</b> .....	34	<b>Chatting Rooms</b> .....	41
<b>Manner</b> .....	35	Set Chatting Room .....	41
<b>Personalized Manners</b> .....	35	Start Chatting .....	41
<b>Idle Mode</b> .....	35	Other Functions.....	42
<b>Icons Introduction</b> .....	36	<b>Multimedia Message(MMS)</b> ...	42
<b>Quick Function Keys</b> .....	36	Reading MMS/MMS Inbox .....	42
<b>Main Menu</b> .....	37	Composing MMS.....	42
<b>Messages</b> .....	38	Composing Text .....	42
<b>Text Message(SMS)</b> .....	38	Adding Image .....	43
Message Reading/Inbox .....	38	Adding Audio .....	43
Functions.....	38	Adding Slide .....	43
Message Composing & Sending		Other Options .....	43

Adding Attachment .....	43	Hot Keys for Video Recording	49
Sending MMS .....	43	Video Recorder Settings .....	50
MMS Settings .....	44	<b>Photo Editing</b> .....	51
MMS Memory .....	44	My Album .....	51
MMS Outbox .....	44	Private Album .....	52
<b>Screen Display</b> .....	46	<b>Image Gallery</b> .....	52
Wallpaper .....	46	<b>Video Editing</b> .....	52
Wallpaper from built-in images		My Video .....	52
.....	46	<b>Video Playing</b> .....	53
Wallpaper from user's images		<b>MP3 Player</b> .....	54
.....	46	Playing MP3 Music.....	54
Idle Screen .....	46	Interface of the MP3 Player....	54
Other Screen Setups .....	46	MP3 Player Settings .....	55
<b>Camera</b> .....	47	Playlist Editor .....	55
<b>Capture</b> .....	47	Playlist Manager .....	55
Hot Keys for Capturing .....	47	Category .....	56
Camera Settings .....	48	My Favorite .....	57
Other Settings .....	49	Play Single Song .....	57
<b>Video Recorder</b> .....	49	Playback.....	57

Equalizer .....	58	<b>STK</b> .....	63
Detail .....	58	<b>Alarm Setup</b> .....	64
Language Learning .....	58	<b>Dictionary</b> .....	64
<b>Ringtone Settings</b> .....	58	<b>Calendar</b> .....	65
<b>Composer</b> .....	58	Check the Calendar .....	65
Keyboard and Notes Table ...	59	Go To Date .....	65
Other Functions of Composer		Schedule an Appointment .....	65
.....	59	Check and Edit a Schedule ....	65
Other Options for Incoming		<b>Calculator</b> .....	66
Ringtone .....	60	<b>World Clock</b> .....	66
<b>Games</b> .....	60	<b>Voice Recorder</b> .....	66
Java Settings .....	60	Other Functions .....	66
<b>Network</b> .....	61	<b>Voice Recognition</b> .....	67
<b>How to Set Up WAP</b> .....	61	<b>Name Dialing</b> .....	67
<b>WAP Setup</b> .....	61	Record Name Dialing .....	67
Edit the WAP Profile .....	61	Make a Call with Name Dialing	68
WAP Settings .....	62	<b>Voice Command</b> .....	68
<b>Web Page Browsing</b> .....	62	Record Voice Command .....	68
<b>Network Selection</b> .....	63	Give Voice Command .....	69

<b>Currency Exchange .....</b>	<b>69</b>
<b>Stopwatch .....</b>	<b>70</b>
<b>Memory Status .....</b>	<b>70</b>
<b>Mass Storage .....</b>	<b>71</b>
<b>Installing the Handset Manager</b> .....	<b>72</b>
<b>Starting the Handset Manager</b> .....	<b>73</b>
<b>Main Panel .....</b>	<b>73</b>
<b>Settings, Information, and Online</b> <b>Help .....</b>	<b>74</b>
<b>Navigating the Handset Manager</b> <b>Tools .....</b>	<b>75</b>
<b>Navigating Media Files .....</b>	<b>75</b>
<b>Transferring Files to and from the</b> <b>Handset .....</b>	<b>76</b>
<b>Handset Manager Folder Loca-</b> <b>tion .....</b>	<b>77</b>
<b>Handset Manager Icon .....</b>	<b>77</b>





---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---


---

---


---

---


# Overview of M307

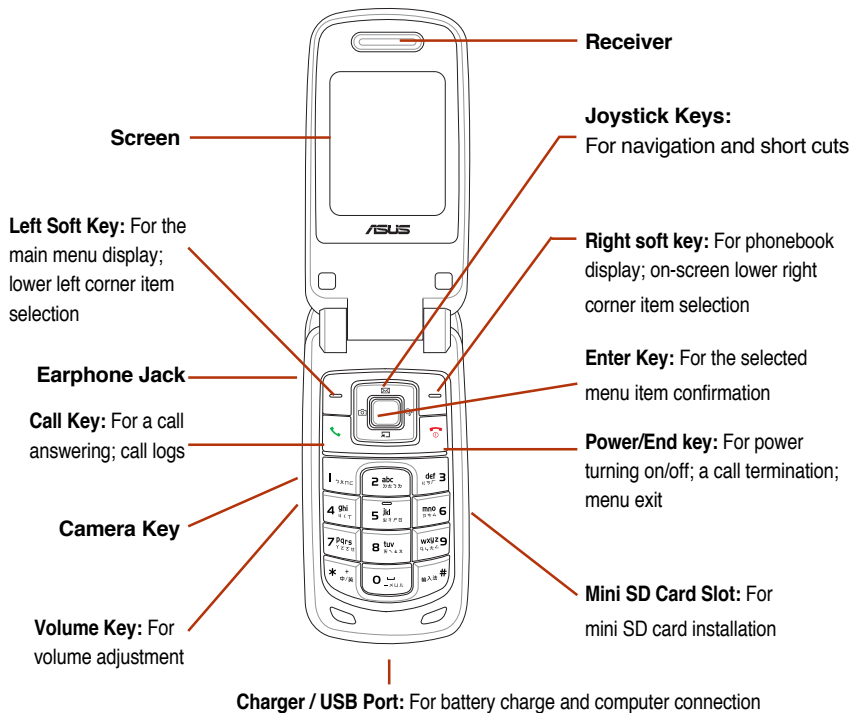


## Rear View

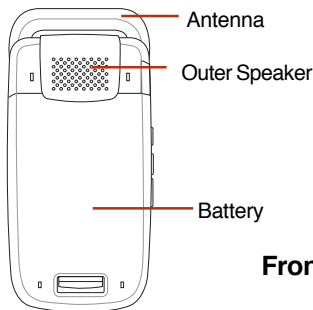

## Front View

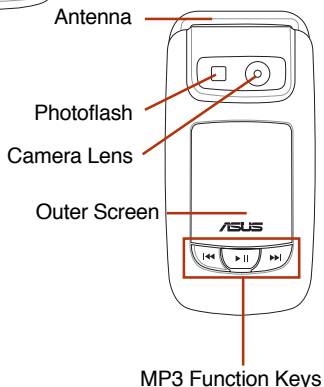

## Left View

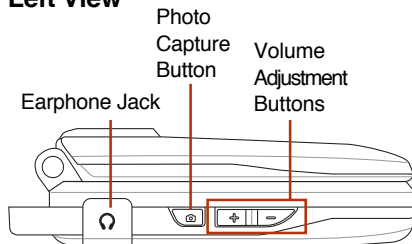

## Getting Started

When registering with a service provider, users will receive a SIM card. The SIM card is a computer chip that enables phone making work, containing the phone number, phonebook information, and service provider information.


**NOTE:**

- Handle the SIM card with care and do not bend it or expose it to static electricity or dirt.
- Be sure to turn off the phone before inserting the SIM card.




## The SIM Card & Battery Installation


1. Push rightward and unlock the SIM card holder.

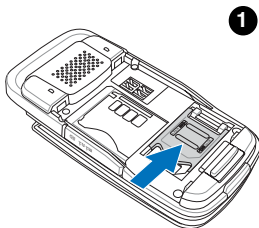

2. Insert the SIM card in the correct orientation with the gold contacts facedown.

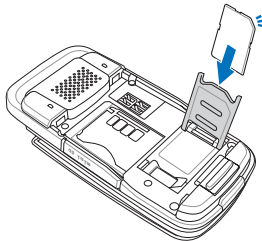

3. Reinstall the battery and press to snap it back into place.


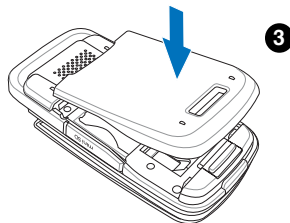


### NOTE:


- Use only the battery recommended by the manufacturer. An incompatible battery may cause danger.
- Dispose of the used batteries as instructed by the manufacturer or ask your local authorities for assistance.
- Keep the SIM card out of children's reach. Be careful when handling, inserting, or removing a SIM card to avoid damaging its gold contacts.

## The SIM card & Battery Uninstallation

1. The battery compartment has a cover latch at the top. Push the latch forward.
2. Lift upward the battery to remove it.

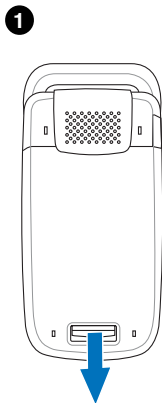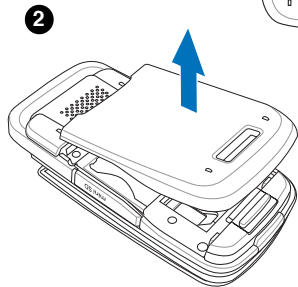


3. Push rightward to unlock the SIM card holder and withdraw the SIM card from it.

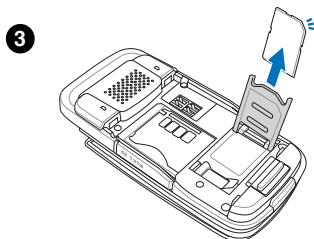

## The mini SD Card Installation & Uninstallation


1. **Install:** Open the cover and place the mini SD card into the slot with the gold contact facedown.
2. **Uninstall:** Press the mini SD card and it will uninstall itself.

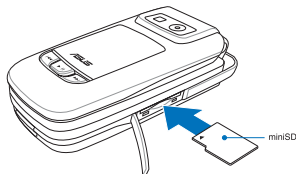

## Battery Charging

### 1. Start Charging

1. Connect the charger to a wall outlet.
2. Connect the charger to the charger port at the bottom of the phone in a correct orientation.
3. The battery will then be charged, and the screen will display a charging animation.

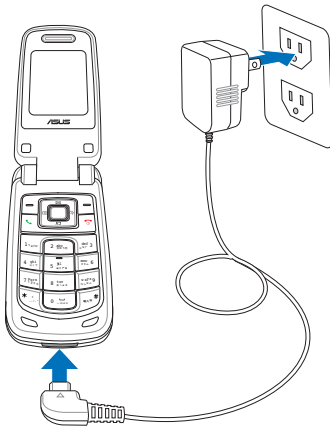

### 1-1. In Charging

1. If the phone is on, the charging animation will appear on the right upper corner of the display. The phone can still be used during its charging process, but it will prolong the charging time.
2. If the phone is off, the charging animation will appear on the display. The phone can still be turned on and used during its charging process. Just press the left soft key (Startup).

#### **NOTE:**

1. Strongly suggest users not to use the mobile phone in charging for the healthy's sake.
2. It takes four hours to fully charge the phone for the first time usage and two hours to charge it after that.

### 1-2. Low Battery Indicators

The battery indicator in the upper right corner of the screen indicates how much charge remains in the battery. When the battery is


low, the phone will emit a double beep sound with a message "Battery Low" on the screen to alert users.

## 2. Charging Complete



The screen will display a charged animation after the battery is fully charged.

**NOTE:** The first-time battery charging will take 4 hours to complete. After that, the charging time will shorten to 2 hours.

## Turning On and Off



Flip open the phone and press  to turn the phone on and off.

### 1. SOS

If the SIM card is not installed, the display will show **Check SIM Card!** after users turn the phone on. Press  (SOS) to make an emergency call or press  to cancel.


**NOTE:** If **Check SIM Card!** message shows up when the SIM card is installed. Please contact the service provider for further help. Emergency number differs in different countries and areas. For some reason, users may fail to make the emergency call in some countries. **Make the SOS call only when in emergency.**



## 2. Input PIN Code

SIM card comes with a PIN code. Key in the PIN code after users turn on the phone and press  to clear and re-enter when misdialing. Press  to confirm after that. When the name of service provider shows up, the mobile is ready to use.


## Calls Making

### 1. Common Calls

1. Flip open the phone and enter the number for dialing. Press  (right soft key) to clear the last number and long press to clear all.

2. After the phone number is completed, press  (left soft key) to save it to the phonebook. Or press  to start connecting.

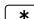

## 2. International Calls

Long press  (asterisk key) until the “+” is shown and, then enter the country code, the city or area code and phone number respectively.



## 3. Speed Dialing

### 3-1. From the phonebook


Users are suggested to save phone numbers to the phonebook for a faster dialing.

In the idle mode, press  to enter the phonebook and use the joysticks (up and down) to select a contact name for dialing. Press  to start connecting.


### 3-2. From Call Log

Press  to show the dialed and received call history. Select a contact and press  to connect the number.


## Call Ending



Press  to end the call.

## Volume Adjustment

Press  buttons on the left side to adjust the volume during the call.

## Silent and Hands-free Speaker

Press  to start the silence function and again to stop it during the call.

Press  while dialing or long press  during connecting to enable the speaker and again to disable it.


## Call Answering

You can only answer the phone call when the phone is on. When a call is coming, the phone will alert users with a ringtone or a vibration based on users' previous setup. The display will show the incoming number, contact name (only on the contact list) or hidden number.

The display will also show the picture if users have set up earlier in the phonebook.

1. Users could just flip open the phone to answer the phone.
2. For answering the call by pressing any key, go to **Settings > Call Settings > Answering Mode** and select **Any Key**.

## Functions During Connection



During a phone call, users can press  to use the following functions.


Option	Discription
Hold	to hold the call
New Call	to hold the call and make a new call
End Call	to end the call
Speaker	to enable or disable the speaker
Send SMS	to compose and send a SMS
Search Names	to search the phonebook during the connection
Voice Record	to record the call
Call Record	to check the call history

## Phonebook

The phonebook is used to store contacts' information, including phone numbers, fax numbers, addresses, and e-mails. Users can also set up special ringtones, pictures and group.

### 1. Add a New Contact

Press  to enter the phonebook and press **Option** to select **Add > To SIM** or **> To Handset**. Press  to confirm and start editing.

1. Key in the information of the contact such as name, cellphone no., home no., company no., fax no., address, e-mail and etc.. Users can also group the contact or set up a picture and ringtone.
2. Press  (**Save**) to finish editing.

#### **NOTE:**

If contacts are saved To SIM, only names and phone numbers can be edited. And the contact cannot be saved only with a name or a phone number.

## 2. Search a Contact

Press **[Left]** to enter the phonebook and press **Option** to choose **Quick Find** or **Name Search**. To search a contact, enter the name of the contact or partial of it and possible contact names will show up.

## 3. Copy All Contacts

Press **[Left]** to enter the phonebook and press **Option** to select **Copy > All Records**. Choose **Handset to SIM** to copy all contacts from phone to SIM card or **SIM to Handset** to do it reversely.

## 4. Copy a Contact

Press **[Left]** to enter the phonebook and press **Option** to select **Copy > Selected Record**. Choose **To SIM** to copy a contact from phone to SIM card or **To Handset** to do it reversely.

## 5. Delete All Contacts

Press **[Left]** to enter the phonebook and press **Option** to select **Delete > All Records**. Choose **From SIM** or **From Handset** to delete all contacts in the SIM card or in the phone.

## 6. Delete a Contact

Press **[Left]** to enter the phonebook and select a contact. Press **Option > Delete > Selected Record** and press **[Left]** (Yes) to confirm the deletion.

## 7. Edit Group

Press **[Left]** to enter the phonebook and press **Option** to select **Settings > Group Set**. Choose a wanted group and press **[Left]** to **Edit**. The name, melody, and LED Color of the selected group will be ready for editing.




### Group a contact

1. Enter the phonebook and select a contact and press **[Left]** to view its information.
2. Press **[Left] > Modify > Group > [Left]**. Select a group name and press **[Left] > [Left]** to confirm the setup.

**NOTE:** Only contacts saved in the phone can be grouped.


The default group names in the phone is as the following: Friends, Family, Business, Colleagues, VIP, Normal, Internet. Users can edit the existed group names.

## 8. Set Up My Phone Number

1. Go to **Settings > Phone Settings > My Phone Number >  > Add.**
2. Key in a name and press  to confirm.
3. Enter the phone number and press  to confirm. The maximum is two sets.




## Other Functions

### 1. Reject a Call

If users want to reject the incoming call, press  to select **Reject**. The caller will be transferred to users' voice mail or a busy signal will be heard. (depending on users' service provider)

### 2. Speed Dial


1. Go to **Settings > Call Settings > Speed Dial > Number List.**

2. The number one to nine corresponds to the keypad number one to nine. Select a number and press  to **Modify**. Enter the phone number or press  (Names) to choose a contact and press  to confirm.

3. After the setup, go to **Settings > Call Settings > Speed Dial > Status Setting** to activate the setup.

### 3. Call Waiting

Go to **Settings > Call Settings > Call Waiting** to **Activate** or **Deactivate** the function.

Press  to answer the other incoming call during a phone call.

### 4. Hide My Number

If users want to hide their phone number when making a phone call. Go to **Settings > Call Settings > Hide My No.** to activate the function. The default setting is **Set by Network**.

### 5. Call Barring

This function needs the support of the service provider and a Network Code password to



function.

All options can be found in **Settings > Phone Settings > Call Barring**.

**NOTE:**

1. The function of Call Barring needs support from users' service provider.
2. The default Network Code password varies according to service providers.
3. Go to **Settings > Phone Settings > Security > Network Code** to change the password.

## Call Barring Options


Option	Discription
Out-All	to bar all outgoing calls
Out-int. Calls	to bar all outgoing international calls
Out-exc. Home	to bar all outgoing calls to non-service provider based region
In-All	to bar all incoming calls
In-Roaming	to bar all incoming calls when roaming

## 6. Call Forwarding

This function enables users to forward the incoming call to another phone number. Go to **Settings > Call Settings > Call Forwarding**. Select a status and press  to **Activate** or **Deactivate** this function. When the call forwarding is enabled, users can enter the phone number for the forwarding call or press  (Names) to select a contact to confirm.

### Call Forwarding Options

Options	Discription
All Calls	to forward all calls
When Busy	to forward calls when busy
Not Answered	to forward calls when not answered
Not Reachable	to forward calls when not reachable

**NOTE:** The function of Call Forwarding needs supports from users' service providers. After this function is activated, a icon  will show on the display to remind users.


## 7. Fixed Dialing

This function limits users to dial fixed phone numbers.

1. Activate this function

Enter **Settings > Call Settings > Fixed Dialing > Status Setting > On**. Key in PIN2 code to enable or disable this function.

2. Create a number list


Enter **Settings > Call Settings > Fixed Dialing > Number List**. Press  to choose **Add**. Key in PIN2 code and then edit names and phone numbers.

**NOTE:** Fixed Dialing needs the support of users' service provider. For users' PIN2 code, please contact the service provider for more details.

## 8. Other Functions

Options	Description
Auto Redial	Auto-redial when failing to connect
Speed Dial	Assign phone numbers to keypad number 1~9. Dial the assigned phone number by pressing the corresponding keypad.
Money Keeper	Remind users or directly end the call after a period of time.
Answering Mode	Set up the answering mode to Any Key or Flip.
Call Summary	Display user's connecting time after a phone call.

## Call Log

Press  to check the information of "missed calls," "dialed calls," "answered calls."

The limit of the Call Log is 60 calls and 20 records for each missed call, dialed call, answered call. The previous history record will be dropped from the list when the quota is exceeded.

## 1. Missed Calls

When there is a missed call, the screen will alert users with a missed call message.

1. Press  to check the missed call number.
2. And press  to check the information of the missed call, such as date and time.
3. Press  after step 1 to delete the record, send a SMS, save the number or save to call barring list.

Users can also check the missed calls by referring to **Calls > Missed Calls**.

## 2. Answered Calls

Go to **Calls > Answered Calls** to select an answered call.

1. Press  to check the information of the answered calls such as date and time.

2. Press  to delete the record, send a SMS, save the number or save to call barring list.

## 3. Dialed Calls

Go to **Calls > Dialed Calls** to select a dialed call.

1. Press  to check the information of the missed call, such as date and time.
2. And press  to delete the record, send a SMS, save the number or save to call barring list.

## 4. Call Cost

### Check Call Cost

Go to **Calls > Call Cost** to check **Last Call Cost** and **All Calls' Cost**.

**NOTE:** Call Cost is a network service, which needs supports from service providers. Users need to contact the service provider before using this function.

## Clear Counters

Go to **Calls > Call Cost > Clear Counters** and key in PIN2 code. Press  to confirm. Users can use this function after a monthly phone bill comes out.

**NOTE:** PIN2 code can only accept incorrect input three times and the SIM card will be locked after that. Please contact the service provider for the unlock code “PUK2” if the situation mentioned above happens.

## Call Costs' Limit

Users can set up a limit to the total call cost. When the limit is exceeded, the phone then can only receive calls.

1. Go to **Calls > Call Cost > Call Costs' Limit** and key in the PIN2 code. The window of cost limit will show up.
2. Enter the planned limits and press  to confirm.
3. If the limit is set to zero, then the Call Costs' Limit will not function.

### **NOTE:**

1. When the call costs' limit is exceeded, users can still make the SOS calls when in emergency.
2. The Call Costs' Limit will only function with the service provider's support. Please contact the service provider before using this function.

## Call Time

M307 helps users to easily and precisely monitor their call time. Just go to **Calls > Call Time** to check the **Last Duration, All Calls, Answered Calls, and Dialed Calls**.

Users can clear the call time counting after a period of time, just go to **Calls > Call Time > Clear Counters**. Press  to confirm and enter the phone password. (Default password is 1234.)

## Call Filter

Call filter helps users avoid unwanted calls. Just put unwelcomed callers' phone number on the **Ignore List**. Unwelcomed calls will be transferred to users' voice mail or the busy signal will be heard depending on the service provider and users will be informed with a missed call message.

### Ignore List Modification

1. Go to **Calls > Call Filter > Ignore List**.
2. The first default option "Unknown Call" can only be enabled or disabled. Press  to select this option, all unknown calls will be blocked.
3. Select an "EMPTY" space and press  to start modifying. Enter the number for ignoring and press  to confirm.

### Ignore List Deletion

1. Go to **Calls > Call Filter > Ignore List**.
2. Select a phone number and press  to choose **Delete** or **Delete All** to delete the number or all blocked numbers.

Moreover, the function of Call Filter also helps users to make a personal Privileged List. Callers out of the list will be transferred to users' voice mail or the busy signal will be heard depending on the service provider and users will be informed with a missed call message.

### Privileged List Modification

1. Go to **Calls > Call Filter > Privileged List**.
2. Select an "EMPTY" space and press  to start modifying. Enter the number to give privilege and press  to confirm.

### Privileged List Deletion

1. Go to **Calls > Call Filter > Privileged List**.
2. Select a phone number and press  to choose **Delete** or **Delete All** to deprive the privilege of the selected number or all phone numbers.


### Filter Setting

Go to **Calls > Call Filter > Filter Setting**. Users can stop the this function or activate either **Ignore List** or **Privileged List**.

## Security

### 1. PIN



To protect users' privacy and avoid personal information theft, users can activate PIN protection. In this way, users have to enter the PIN code before turning on the phone and use.

1. To activate PIN protection, go to **Settings > Phone Settings > Security > PIN**.
2. Enter the PIN code to enable or disable this protection.
3. Press  > **Modify** to modify the PIN code.

### 2. Phone Lock Code

Phone lock code offers an extra protection for your own privacy. When this function is activated:

1. Go to **Settings > Phone Settings > Security > Phone Lock Code**.
2. Enter the password to **Activate** or **Deactivate** the lock.

3. Press  > **Modify** to change the password. Or press  > **Deactivate** to disable this function.

1. The password is limited to 8 numbers.
2. PIN, PIN2, and Network Code are provided by the service providers.
3. The default Phone Lock Code is 1234.

## Text Entry

To add contact names to the phonebook, send a text message, or use the WAP browser, M307 provides several text input methods for users to choose from. Users can either key in letters respectively or use predictive text entry, which helps complete possible words for users. Also, Chinese characters (traditional and simplified) input and symbols insertion are enabled.

## Basics

1. Use the alphanumeric keyboard to enter letters and numbers. Each key is assigned several different characters.

- Press the right soft key to delete a letter when mis-typing.
- To enter symbols or spaces between words, press the asterisk key, and the symbol table will be shown. Use the Joystick Keys to navigate and select the needed symbol.

Key	Assigned Characters
1	. , ? ! @ : ' ( ) % & 1
2	A B C 2
3	D E F 3
4	G H I 4
5	J K L 5
6	M N O 6
7	P Q R S 7
8	T U V 8
9	W X Y Z 9
0	0, symbol table list

## Text Input Methods

For text entry, press **#** to switch input methods (the default is **abc**; press **#** to switch to **ABC**) for entering small letters or capitalized ones. Select **eng** to use the predictive text entry, and navigate with joystick keys to select the wanted words.


## Multitap Text Entry

Multitap text entry enables users to enter individual letters one by one. This is ideal for adding a phonebook entry or entering a WAP address.

When pressing a key, the characters assigned to the key will appear in the upper right corner of the screen. Repeated presses to select one for entering. Enter the next letter in the same way after the previous selected letter appears on the screen.

## Smart Text Entry

Smart text entry is a predictive text entry method. It uses a built-in dictionary to predict the word users are typing. Users can choose the correct word by pressing keys without selecting the right letters and obtain the words suggested by the phone. By reducing the number of keystrokes, the smart text entry method helps users to key in messages more quickly.

Whenever a key is pressed, a list of possible characters or character combinations is created. To enter text, use the joystick keys to find the wanted character combination. Press the right joystick key to proceed the message composing. If mistakes happen, press  to clear.

### **Note:**

For smart text entry to work properly, ensure the language settings in your phone match the language you want to type in. For language settings, see Phone Settings under Settings.

## Common Words Text Entry

Common Words text entry allows users to create a list of useful common phrases for message composing. To use this time-saving method, select **Option > Common Words** when editing a message to input built-in phrases or go to **SMS > SMS Settings > Common Words** to customize common words.

## Symbols Text Entry

With this method, users can enter various types of symbols. Select **Option > Input Method > Insert Symbols**. A list of symbols is displayed. Use the joystick keys to select the desired symbol and select **OK** when done. Users can also press the key “0” as a shortcut to open the symbol table.





## Common Settings

In the **Settings** section, users can customize their preference setup, such as ringtones, display settings, date/time or language.

### Date/Time

Go to **Settings > Phone Settings > Date/Time**.

1. Select **Set Date/Time** and key in with keypad. Press  to confirm.
2. Go to **Set Time Zone** to locate your home city or the nearest one and press  to confirm.
3. Go to **Date Format** and set a wanted format--**DD.MM.YYYY**, **MM.DD.YYYY**, or **YYYY.MM.DD**.
4. Go to **Time Format** to choose **24-Hour** or **12-Hour**.
5. Users have to press  to select **Show Date** and **Show Time** in **Settings > Displays Settings > Main Idle Screen** first and the date/time will show up then.

### Language

Go to **Settings > Phone Settings > Language** to set up the language display.

### Shortcut

Go to **Settings > Phone Settings > Shortcut**. Select an (EMPTY) space and press  to start editing. Choose one function from the **Shortcut List** and press  to confirm.


### LED

Go to **Settings > Phone Settings > LED** to start or stop the LEDs, including **Mtc LED**, **Event LED**, **Charging LED**, **Low Battery**, and **Normal LED**.


### Auto Keyboard Lock

This function can prevent users from misdialing or necessary operation.

1. Go to **Settings > Phone Settings > Auto Keyboard Lock**.
2. Select a time interval and press  to confirm.


When the keyboard is locked, users can still press  to answer the incoming call and operate other functions normally during the call. The keyboard will remain locked after users end or reject the call.

## Greeting Text

Users can personalize the greeting text. Simply go to **Settings > Phone Settings > Greeting Text**. Enter an unique greeting text and press  to confirm.

## Factory Settings

This function will help users to restore to the default settings and keep users' **Phonebook**, **Organizer** and **Message**.

1. Go to **Settings > Phone Settings > Factory Settings**.
2. Key in the Phone Lock Code and press  to confirm. The phone will auto-restart and restore to the default settings.

## Firmware Upgrade

Users can easily upgrade the firmware of M307 with a mini SD card.


1. Download the latest firmware file (.bin file) from [tw.asus.com](http://tw.asus.com).
2. Place the bin file into a mini SD card and install the card to the phone or save the file to the phone through the mini USB cable.
3. Restart and go to **Settings > Phone Settings > Firmware Upgrade**.
4. Locate the latest bin file **From Phone** or **From Memory Card** and press  to confirm.
5. After the upgrading , remember to restart the phone.

## Manner

In the **Manner** menu, users can select manners, including **Normal**, **Meeting**, **Indoor**, **Outdoor**, **Custom** and even further personalize and rename those manners.

**NOTE:** Long press  in the idle mode, users can enter the Manner menu directly.



## Personalized Manners

1. Go to **Manner** menu and press  to select **Personalize**.
2. Manners for personalization is as following:


















Option	Discription
Incoming	to change the incoming ringtone
Message	to change the incoming message tone
Ring Mode	including Silent, Ring Only, Vibrate, Vib. and Ring, or Vib. then Ring

Option	Discription
Message Mode	including Silent, Ring Only, Vibrate, Vib. and Ring
Volume	including Incoming, Message, Earpiece, Key Tone and Multimedia Volume
Misc Tones Switch	including Key Tone, Connect Vib., Battery Low, Alert Tone, PowerOn/Off, Charger Tone and Flip Tone

## Idle Mode











When the phone is on but not in use, it is in its idle mode. There will be lots of icons on the display. Press  to enter the main menu and  to the phonebook.

## Icons Introduction





Icon	Description
	signal strength
	call forwarding activated
	line 1 or line 2 selected
	ringtone enabled
	ringtone and vibrate disabled
	keyboard locked
	vibrate enabled
	alarm clock set
	text message received
	multimedia message received
	e-mail received
	in roaming
	chatting rooms activated
	ignore list enabled
	privileged call enabled
	battery status
	fly mode enabled




## Quick Function Keys

When in the idle mode, quick function keys available are as the following.

Icon	Description
	SMS Inbox
	Shortcut Menu
	Camera Menu
	Fun Center
	Photo Capture Activation
	Volume Adjustment Buttons; the upper one to increase and the lower one to decrease volume
	Main Menu
	Phonebook
	Call Records
	One press to idle mode
	Long press to turn on/off the phone

## Main Menu

In the idle mode, press  to enter the main menu and navigate with joysticks. Press  to select an item. For exit from the main menu or sub-menu, simply press  or . The table beneath will introduce the icons and functions in the main menu.

Icon	Discription
	<b>Network:</b> Enables users to specify the WAP and data settings and set up GSM and GPRS settings. Provides access to the internet and to STK SIM card service.
	<b>Messages:</b> Enables users to check, compose and send SMS, MMS, or Email. Also, enables users to chat and broadcast messages.
	<b>Manner:</b> Enables users to set up and personalize manners, including ringtones, volumes, ring types and answer modes.

Icon	Discription
	<b>Settings:</b> Enables users to set up the phone, display, ringtones, network, security, call and also restore to the factory default settings.
	<b>Camera:</b> Enables users to take pictures and record videos. Users can also save and send the files to friends.
	<b>Media Center:</b> Enables users to play MP3 music files, play JAVA games and compose ringtones.
	<b>Organizer:</b> Contains useful tools, including an alarm, schedule planner, calculator, currency and unit converter, stopwatch, file manager and etc.
	<b>Phonebook:</b> Helps users to manage names and phone numbers for easy access and caller recognition.
	<b>Calls:</b> Stores information about dialed, answered, missed calls.

## Messages




M307 supports SMS and MMS message service. SMS enables users to read, compose, send and receive text messages; while MMS allows users to receive and send multimedia messages. If the message quota is exceeded, users have to delete old messages for the new ones.

## Text Message (SMS)

### 1. Message Reading / Inbox

When a new message arrives, the screen will alert users with a new message animation. Just flip open the phone and press  to read or go to **Message > SMS Inbox** to read it.






#### Functions

In the Inbox menu, select one message and press  to read it or press  to make a phone call. When reading a message, users can use the following functions by pressing .

Option	Discription
Detail	to show the receive time
Reply	to reply to the sender
Forward	to forward the message
Delete	to delete the message
Save Number	to save the sender's no.

**NOTE:** In the Inbox menu, options available are View, Delete, Copy, Move to Folder and Save Number. When reading a message, the functions above will show up.

### 2. Message Composing & Sending

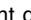1. Select **Message > Edit SMS**.
2. Press  to "To:." Enter the number or press  to select a contact and press  to confirm.
2. Press  to enter "Content:." and start editing the contents. Users can edit content directly or press  to apply **Common Words**.

**NOTE:** Users can use  \* and  # to switch the input methods.

- After the editing is over, press  to confirm and press  > **Send**.
- “Save to outbox” message will show up and press Yes to save it to outbox.

Functions available when sending a SMS:

Option	Discription
Send	to send the message
Save	to save the message without sending it

### 3. Outbox

When users save the message to the outbox, select a message to read and press  to use the following functions.

Option	Discription
View	to read the message
Delete	to delete the message

Option	Discription
Copy	to copy Selected Record or All Records To SIM or To Handset
Move to Folder	to move the message to other folder
Save Number	to add the record To SIM or To Handset

### 4. Common Words

M307 builds in some **Common Words** for users to edit message. Users can also personalize their own common words.

Go to **Message** > **SMS Settings** > **Common Words** to select one and press  to edit .

### 5. SMS Settings

Users can change SMS setups in the SMS Settings menu.


Option	Discription
Service Center	to modify the service center number
Send Format	to set up the send format: Implicit, Text, Fax, ERMES, Paging, X400 and E-mail
Validity Period	to set up the validity period for the message
Common Words	to edit common words
Delivery Rpt.	to activate the report function after the message is delivered
Reply Path	to enable or disable the replay path
Default Saved Media	to set up the saved media as To SIM or To Handset

## 6. SMS Memory

Users can check the SMS memory status In Handset and In SIM Card.

## Private SMS

Users are able to prevent others from prying by saving important SMS to the private SMS folder.

1. Go to **Message > SMS Inbox** and select a SMS.
2. Press  and choose **Move to Folder > Selected Record** or **All Records > Private SMS**. Confirm the operation.

**NOTE:** Only messages saved in the handset can be moved to the private SMS folder.

3. Go to **Message > Folder Management > Private SMS** and key in the password "1234" (default) to enter the private folder to read messages.

**NOTE:** The default password of the handset is1234. Users are able to customize their own password by referring to Settings > Phone Settings > Security > Phone Lock Code.



## Cell Broadcast

Cell broadcast can offer users messages about weather, latest news, or financial market.

The broadcast has been defaultly set up, users only need to activate and use this function.

Option	Discription
Activate	to start or stop the function
Topics	to edit broadcast messages topic wished to receive
Language	to set up supported language
Read Message	to read the received messages


**NOTE:** This function needs supports of the service provider. Please contact the service provider for more details.

## Chatting Rooms


This function enables users to use chatting rooms as MSN and after activate the setup, certain messages will be placed in the chatting room instead of SMS Inbox.




Users can directly edit messages in the chatting room and there will be records of the sent messages.

### 1. Set Chatting Room

1. Enter **Message > Chatting Rooms > Room 1** and press .
2. Set up your preferred name in the **Set My Nickname**.
3. In the option of **Set Chatting Room**, set up **Friend's Name / Friend's Number** and **Activate** it to start using.




### 2. Start Chatting

1. After activate the chatting rooms, enter **Message > Chatting Rooms** to select one chatting room and press  to confirm.

2. Press  > **Send**. Key in messages and press  to send. The reply messages will be saved in this chatting room.
3. Press  to exit from the chatting room.

### 3. Other Functions

Other functions of the chatting rooms available for users are as following:

Option	Discription
Clear Chatting Room	to clear chatting rooms by pressing  > Clear Chatting Room >  >  and all the setups and messages will be cleared
Save to Memory Card	to save messages to the mini SD card after it is installed

## Multimedia Message (MMS)




Via WAP/GPRS, MMS offers users a more colorful and interesting message service with audio and image files attachment.

### 1. Reading MMS / MMS Inbox





When a new MMS arrives, the screen will inform users with a MMS animation.

### 2. Composing MMS





#### Composing Text

1. Go to **Message > MMS > Edit MMS**.
2. Select "Content:" and press  >  > **Add Text** to start editing.
3. When finish editing, press  to confirm.
4. If users would like to edit or delete the text, simply press  to **Edit**, set up **Duration** or **Delete**.


## Adding Image

1. After the text part is done, press  > **Add Image** > .
2. Locate the wanted image and press  to confirm the addition.
3. If users would like to edit or delete the image, simply press  to **Edit**, set up **Duration** or **Delete**.

## Adding Audio

1. After the image part is done, press  > **Add Audio** > .
2. Locate the audio file and press  to confirm the addition.
3. If users would like to edit or delete the audio, simply press  to **Edit**, set up **Duration** or **Delete**.



## Adding Slide

A slide can only hold a combination of text, image and audio. To have a multi-slide MMS, just press  > **Add Slide** and repeat the previous steps to add text, image and audio.





## Other Options

1. **Delete Slide:** to delete a slide in the multi-slide MMS.
2. **Slide Duration:** to set up the duration time.
3. **Preview:** to preview the MMS.

## Adding Attachment

1. After the MMS is done, go back the **Edit MMS** menu to select **Attachment**.
2. Press  to **Add Image**, **Add Audio**, and **Add Video**.
3. Press  to return to the **Edit MMS** menu.

## 3. Sending MMS

1. There are To:, Cc:, Bcc:, Subject: in the Edit MMS menu.
2. Users cannot enter phone numbers directly. Just highlight To: and press  >  > **Add**. Users can add a recipient from phonebook, or enter the phone number. Press  to confirm and press  to return the menu.

- For more recipients, repeat the previous step.
- Press  > **Send** >  to send the MMS. Users can find a copy in the MMS Outbox.

Other options for sending MMS:

Option	Discription
Preview	to preview the MMS
Send	to send the MMS
Save	to save the MMS to the outbox without attachments
Settings	to set up MMS sending

## 4. MMS Settings

Enter **Message > MMS Settings**

Option	Discription
Validity Period	to set up the valid period
Delay Delivery	to set up the delivery time
Read Report	to ask for notes after recipients receive message (function only when recipients agree to send)

Option	Discription
Delivery Report	to receive reports from the service provider
Auto Download	to auto-download any new MMS
Sender Visibility	to hide or show sender's number to recipients
Storage Setting	to set up the MMS storage place, handset or memory card
Profiles	to select and edit user's service provider. (default settings are strongly recommended)

## 5. MMS Memory

Users can check MMS Memory status.

## 6. MMS Outbox

No matter users send the MMS directly or choose to save it as a draft, there will be a copy in the MMS Outbox. Select one and press  there will be options as following:



Option	Discription
View	to view the content
Send	to send the message
Delete	to delete the selected MMS
Delete All	to delete all MMS
Move to Handset	to move the MMS to handset
Move to Memory Card	to move the MMS to the memory card

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

## Screen Display

### 1. Wallpaper

#### Wallpaper from built-in images

1. Go to **Settings > Display Settings > Wallpaper > Main Wallpaper/ Sub Wallpaper**.
2. Navigate upward and downward to browse the built-in images and select one. Press  and press  > **Set as > Main Wallpaper/ Sub Wallpaper**.

#### Wallpaper from user's images

1. To set the images captured with M307 camera as the wallpaper, please go to **Camera > My Album > Handset**.
2. Locate the wanted picture and press  > **Set as > Main Wallpaper**. Name it and press  to confirm.
3. Repeat the previous steps in the built-in images section to set up the wallpaper.

### 2. Idle Screen



Go to **Settings > Display Settings > Main Idle Screen/ Sub Idle Screen**.


Users can enable or disable Show Manner/ Show Date/Show Time, Analog Clock, Digital Clock, Business Clock in the Sub Idle Screen option. In the Main Idle Screen option, users can start or stop function displays such as Show Operator, Show Manner, Show Date, Show Time.

### 3. Other Screen Setups

Option	Discription
Brightness	adjust the brightness with left / right joystick keys
Theme	choose Theme 1 or 2 for M307
Animation	set up power on/off animation
Clean Wallpaper	enable or disable the clean wallpaper (only pictures without words)

Option	Discription
Backlight Timer	set up the backlight time to save power
Sleep Timer	set up the sleep time to save power




- If the picture is satisfactory, then press  to save it to my album and if not, press  to discard it.

**NOTE:** When the phone is not flipped open, long press  to activate the flashlight function.

## Camera






M307 is equipped with a 2.0 mega pixel camera, which supports photo capture, continuous shots, video recording. Users can set the image and video files as the wallpaper or power on/off animation. Even, users can easily share all the image and video files to families or friends with MMS or e-mail.

## Capture

- Go to **Camera > Capture**; or press the left joystick key  and choose **Capture**; or press  button on the left side.
- Preview in the screen and press  to capture.


## Hot Keys for Capturing

M307 offers many hot keys for a convenient image capturing.

Option	Discription
	Increase / Decrease Brightness
	Zoom In / Out
	Frame
	<b>Effect:</b> repeated presses can switch different effect settings.
	<b>Caputre Mode:</b> repeated presses can switch different capture modes.

Option	Discription
3	<b>Flash Switch:</b> repeated presses can enable or disable the photoflash.
4	<b>Capture Timer:</b> repeated presses can set up the delay seconds.
5	<b>Multi-Capture:</b> repeated pressess can set up the number of shots.
6	<b>Storage Set.:</b> repeated pressess can set up the storage position.
7	<b>Photo Quality:</b> repeated pressess can set up the photo quality.
8	<b>Photo Size:</b> repeated pressess can set up the photo size.
9	<b>Photo Orientation:</b> repeated pressess can set up the photo orientation.

## Camera Settings





Go to **Camera > Capture >  > Settings** and adjust the following setups.

1. **Photo Size:** resize it with left / right joystick keys. Options: 176x224, Portrait, 1200x1600, 960x1280, 480x640, 240x320.
2. **Photo Quality:** adjust qualities with left / right joystick keys. Options: Nice, Normal, Economic.
3. **Capture Mode:** switch modes with left / right joystick keys. Options: Auto, Night, Indoor, Outdoor, Cloudy, Sunset, Lamp.
4. **Brightness:** increase and decrease brightness with left / right joystick keys.
5. **Contrast:** increase and decrease contrast with left / right joystick keys.
6. **Auto Focus:** switch the focus setup with left / right joystick keys. Options: Auto, Semi-Auto, Manual.
7. **Multi-Capture Interval:** switch the interval with left / right joystick keys. Options: 1 Sec, 3 Sec, 5 Sec, 0.1 Sec, 0.5 Sec.



8. **Photo Orientation:** switch the orientation with left / right joystick keys. Options: Vertical, Horizontal.
9. **Flash Switch:** start or stop the flash with left / right joystick keys.
10. **Capture Sounds:** Sound 1-3 to choose from.
11. **Storage Set.:** set up the storage position with left / right joystick keys. Options: Handset, Memory Card.
12. **AC Frequency:** adjust the frequency with left / right joystick keys. Options: 50 HZ, 60 HZ.
4. **Capture Timer:** set up delay seconds with left / right joystick keys.
5. **Multi-Capture:** set up the number of shots with left / right joystick keys. Options: Off, 4 Shots, 6 Shots, 9 Shots, 16 Shots.

## Video Recorder





1. Go to **Camera > Video Recorder** and press  to start video taping.
2. After the recording stops, press  to save or press  to stop the recording and save it automatically. Press  to exit video recording. The file will be in the **My Video** folder.

## Other Settings

1. **My Album:** browse the pictures in the album.
2. **Preview Effects:** preview pictures with different effects.
3. **Frame:** switch different frames with left / right joystick keys.


## Hot Keys for Video Recording

M307 is designed with several hot keys for a convenient video recording.

Option	Discription
 / 	Increase / Decrease Brightness
 / 	Zoom In / Out

1	<b>Preview Effect:</b> repeated presses can switch different effect settings.
2	<b>Record Mode:</b> repeated presses can switch different capture modes.
3	<b>Flash Switch:</b> repeated presses can enable or disable the photoflash.
4	<b>Record Sound:</b> repeated presses can enable or disable the voice recording.
8	<b>Video Size:</b> repeated presses can resize the video.


## Video Recorder Settings

Go to **Camera > Video Recorder >**  **> Settings** and adjust the following setups.

- My Video:** view the video in my video folder.
- Preview Effects:** preview pictures with different effects.
- Video Size:** resize it with left / right joystick keys. Options: 320X240, 176x224, power on/off animation.
- Record Mode:** switch modes with left / right joystick keys. Options: Auto, Night, Indoor, Outdoor, Cloudy, Sunset, Lamp.
- Record Sound:** enable or disable the voice recording during the video recording.
- Brightness:** increase and decrease brightness with left / right joystick keys.
- Contrast:** increase and decrease contrast with left / right joystick keys.
- Flash Switch:** start or stop the flash with left / right joystick keys.
- AC Frequency:** adjust the frequency with left / right joystick keys. Options: 50 HZ, 60 HZ.

# Photo Editing

## 1. My Album

The captured images will be saved in **My Album**. Go to **Camera > My Album > Handset / Memory Card** and select a picture for editing. Press  to use the following function.




Option	Discription
View	to view the selected image
Change View	to change ways of browsing images, Thumbnail or Name List
Find	to search images with file names
Set as	to set the image as Main Wallpaper, Sub Wallpaper or Default Portrait
Save as	to save the image as Main Wallpaper, Sub Wallpaper (Portrait)

Option	Discription
Hide	to hide the image to Private Album
Delete	to delete the selected image
Delete All	to delete all images
Rename	to rename the image
Edit Image	to edit the image, including Special Effect, Inserting Frame, Inserting Text, Rotating, Flipping.
Four in One	to combine favorite images together
Send MMS	to send the image via MMS
Detail	to view the detail of the image, including Name, Formate, Size and etc.
Slide Show	to slide show the images
Storage	to check the storage status

**NOTE:** Users can also find My Album in Media Center > Image Gallery.

## 2. Private Album

Personal pictures can be saved in the **Private Album**.

1. Go to **Media Center > Image Gallery > Private Album** and enter password (default :1234) before viewing the pictures.
3. To move the images back to **My Album**, just press  > **Unhide** >  > . The images will then be moved to **My Album**.


**NOTE:** The default Phone Lock Code is 1234. To change the code, go to Settings > Phone Settings > Security > Phone Lock Code.

## Image Gallery

There are five folders, **My Album**, **Main Wallpaper**, **Sub Wallpaper**, **Frame**, **Private Album**, in the image gallery. Users are able to browse and edit all the images in these folders. Just follow the instructions in the previous page.

## Video Editing

### My Video

The recorded video will be saved in **My Video**. Go to **Camera > My Video** and press  to operate the following functions:


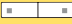


Option	Discription
View	to view the selected video
Change View	to change ways of browsing videoes, Thumbnail or Name List
Find	to search videoes with file names
Set as	to set the video as the power on animation or power off animation
Delete	to delete the selected video
Delete All	to delete all videoes
Rename	to rename the video
Detail	to view the detail of the image, including Name, Formate, Size and etc.
Storage	to check the storage status

**NOTE:** Users can also find My Video in Media Center > Animation.

## Video Playing


Users can go to **Camera > My Video**. Select a video to and press  to play it.

During the video playing, users can use the following functions:








Option	Discription
press 	to play or pause the video
press 	to adjust the volume
press 	to play the video in vertical or horizontal orientation
press 	to show or hide the video information

## MP3 Player

M307 is equipped with a high quality MP3 player for digital music files.


Go to **Media Center > MP3 Player** and the interface on the right side will show up. Or, users can simply press  to enter the media center menu.



### 1. Playing MP3 Music

1. When users enter **Media Center > MP3 Player** for the first time, the player will automatically create a playlist "Playlist\_All.m3u" and put all the music stored in "My Music" in the memory card to the list.
2. Press   for previous or next songs, and press  to show the current list or  to stop.
3. Press   to adjust the volume.
4. Or press  to activate the MP3 player when the phone is close.


**NOTE:** Insert the mini SD card before using this function and do not remove the memory card when the player is in use.
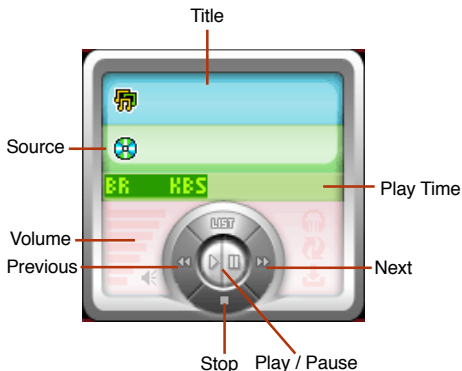
### 2. Interface of the MP3 Player





**NOTE:** To avoid unnecessary operation, users can lock and unlock the cover function buttons by pressing  .

### 3. MP3 Player Settings

Go to **Media Center > MP3 Player** and press  to use the following functions.

#### Playlist Editor

1. Go to **Media Center > MP3 Player** and press  to enter the **Playlist Editor**.
2. Press  to use the functions below.

Option	Discription
Play	to play the music
Add	to add music to My Music
Delete	to delete the selected music
Replace	to replace the selected music with music in My Music
Add All	to add all music in My Music folder to the list
Delete All	to delete all music on the list
Appraisal	to give comments on musics depending on users' preference

Option	Discription
Reset Hit Rate	to reset the hit rate
Save	to save the playlist
Detail	to view the detail of the music



3. Press  to save the setup.

**NOTE:** When users remove the music on the playlist, the music file will not be deleted and remain in My Music folder.

#### Playlist Manager

In addition to the auto-generated playlist Playlist\_All.m3u, users can use this function to create other playlists.

**NOTE:** Users can have different playlists for different situations and moods. A song can be put on various playlists.


1. Go to **Media Center > MP3 Player** and press  to select **Playlist Manager**.
2. Press  to use the functions below.

Option	Discription
Edit	to edit the playlist
Play Playlist	to play all the songs on the playlist
Add	to add a new playlist
Delete	to delete the selected list
Rename	to rename the list
Refresh	to refresh the playlist after some songs are removed from the My Music folder

**NOTE:**

1. If the playlist needs no refresh, the option will not be allowed to choose.
2. Only Playlist\_All.m3u can be refreshed.

**Category**

When using M307 to read or play new installed MP3 music, please operate the function **Update Category (Media Center > MP3 Player >  > Category > Update Category)** first. And then the information about the new added music will be added to the phone.


Other functions in the **Category**:

1. **Folder**: users can browse the sub-menu in the **My Music** folder.
2. **Artist and Album**: if users have updated category, users will see the category of the artists or the albums after selecting these two options.
3. **Appraisal**: users can grade on all the music and search music with different standard.
4. **Top 10**: top 10 songs will be shown on the list.
5. **Recently Played**: the recently played list can be easily replayed here.




**NOTE:** Users can directly select songs and play in every category and save it as a playlist, which will be set up as the default playlist until users change the playlist.


## My Favorite

Go to **Media Center > MP3 Player** and press  to select **My Favorite** for the following functions.


1. **View:** to edit **My Favorite** list and save it as a playlist.
2. **Add Current Song:** to add the current song to **My Favorite**.
3. **Add Current List:** to add the current list to **My Favorite**.

## Play Single Song

If users want to play a certain song outside of the playlist, just go to **Media Center > MP3 Player >  > Play Single Song**.


Users will then be transferred to **My Music**. Select a wanted song and press  to confirm the playing.







### NOTE:

1. When entering a folder with MP3 music files, users can simply select and press  to play the music.
2. Functions only in Settings > Memory Card Manager.


## Playback

M307 offers various ways of playing music, including Once, Repeat List, Repeat Song, Shuffle Once, Shuffle Repeat.

Go to **Media Center > MP3 Player >  > Playback**.

1. Use upward and downward navigation keys   to select a playback and press  to confirm. The selected item will be marked with .
2. If users choose to repeat, there will be a icon  on the MP3 Player interface.
3. If users choose to shuffle, there will be a icon  on the MP3 Player interface.

## Equalizer



Go to **Media Center > MP3 Player >**  **> Equalizer**. Users can apply different equalizers, including Normal, Classic, Pop, Bass, Rock and None.

**NOTE:** Users can apply a different equalizer even when the music is playing.

## Detail

Users can check the information about the songs in the option such as Name, Album, Title, Artist and etc.

## Language Learning

1. During the MP3 playing, pressing the camera button  on the left side will make a mark A and a second time pressing will make a mark B. The player will repeatedly play A to B extract.
2. To cancel the playing, press the camera button  once more.



## Ringtone Settings



In the **Settings > Ringtone Settings**, users can set up their preferred ringtones for incoming calls, messages, key tone, ring mode, message mode and etc.. M307 has lots of built-in music for users to choose from.

Or users can customize their own music by going to **Media Center > Music > Ringtone > Composer**.


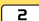












## Composer

The Composer serves as a tool for users to compose their own music.

1. Go to **Media Center > Music > Ringtone > Composer**. Press  and select **Add**.
2. A blank staff will show up and users can use the keypad to start music composing.
3. Press  and select **Play** for previewing the new composed tune.
4. According to personal needs, users can adjust the **Tempo** or play the tune with wished **Instruments**.

5. When users finish composing, press  > **Save** and key in a wanted file name. Press  to confirm the composing and saving.
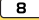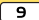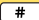
## Keyboard and Notes Table

Key	Discription
	Do
	Re
	Me
	Fa
	So
	La
	Ti
	Rest
	to prolong the note
	to shorten the note
	to rise the note an octave
	to add/ subtract a dotted note
 	to flat a note or rise a semitone

## Other Functions of Composer

Other functions available for users when using the composer.

Option	Discription
Play	to play the selected tune
Set as Incoming	to set the tune as the incoming ringtone
Add	to compose a new tune
Edit	to edit the selected tune
Delete	to delete the selected tune
Delete All	to delete all tunes in the composer
Rename	to rename the selected tune
Copy to Memory card	to copy the selected tune to the memory card
Detail	to check the information of the selected tune

## Other Options for Incoming Ringtone

In addition to MP3 music or self-composed tunes, the incoming ringtone can be set up in other ways as following.



1. Music in **Media Center > Music > Ringtone > Default Ringtone** or **Download Ringtone** can all be set as the incoming ringtone.
2. Music in **Media Center > Music > My Recording** or **My Music** can all be set as the incoming ringtone.

## Games

M307 comes with several built-in JAVA games. Users will not feel bored with all these interesting games.

## Java Settings

Go to **Media Center > Java Games** and press  to adjust the settings.

Option	Discription
Sound Setting	to adjust volume with   keys
Network Setting	to customize DNS IP and network profile
Sleep Time	to set up the sleep time
Delete	to delete the selected item
MIDlet Info	to check the information of the downloaded Java games
Java Info	to check the file amounts and the memory status
Install from Memory Card	to install Java games from memory card



## Network

The built-in browser of M307, which supports WAP 1.2.1 and WAP 2.0 enables users to browse most WML WAP web pages. In addition to WAP, M307 also supports GPRS Multi-slot Class 10.

Push Inbox enables users to get messages such as news website addresses or MMS information.

## How to Set Up WAP

The WAP allows you to configure the network settings of the mobile phone and surf the Internet.

**NOTE:** Network service needs supports from the service provider. Please contact the service provider for more details.

## WAP Setup

Before using WAP, users have to apply for this service from the service provider and configure the settings.

1. Go to **Network > WAP > Profiles**.
2. Select the service provider and press  > **Activate** >  to activate WAP service.

### Edit the WAP Profile

If users' service provider is not on the list, users can edit their own profile.

1. Go to **Network > WAP > Profiles** and choose an unnamed profile. Press  > **Modify** to start editing.
2. Users have to enter the data from the service provider to complete the setup.

Option	Discription
Name	to enter the name of the service provider
WAP Settings	to enter the Gateway IP, Login Name, Password, Homepage and etc.
CSD Settings	to change the dial-up number, call type, login name, password, and linger time in a CSD type of connection

Option	Discription
GPRS Settings	to change the APN, login name, and password in a GPRS type of connection
GPRS Adv. Set.	to change advance GPRS settings including data and header compression, authentication, and quality of service
Message Server	to set the message server for the MMS messages

## WAP Settings


Other settings available for users:

Option	Discription
Use Cache	to activate or deactivate cache using
Push Message	to activate or deactivate push message
Show Image	to view or block webpage images
Wrap Text	to turn text wrapping on or off

Option	Discription
Clear Cache	to delete the contents of the Internet cache
Clear Cookies	to delete saved cookies in the cache
Clear Password	to clear all password in the password list
Security Settings	to select and activate Internet security settings
Factory Settings	to restore the phone's original WAP settings

## Web Page Browsing

After adjusting or changing the necessary Internet settings, users are now ready to surf the Internet with the handset.

Press  to use the functions below when surfing the internet.

- Back
- Forward
- Stop
- Reload
- Homepage
- Set Homepage



- Go to URL    • Show Address
- Bookmark    • Set Bookmark
- Save Image • Edit
- About        • Exit Browser




## Network Selection

When users' M307 cannot receive signal but the service provider operate normally. First check the SIM card and see if it is broken. If there is nothing wrong with the SIM card, then users can try to connect to the network through manual setup.

Go to **Settings > Network Selection** and choose **Manual**. There will be a list of service providers. Choose the right provider to register. Unless the phone fails to select the network normally, the option **Auto** will save users a lot of trouble.

## STK

The **STK** (Sim Tool Kit) list allows users to view and use value-added services offered by the phone operator.



1. Go to **Network > STK**.
2. Select one tool and press  to use it or press  to cancel and press  to abort.

### NOTE:



1. The contents of this menu are SIM-dependent and varies from one phone operator to another. Inquire with the phone operator the complete list of services that they offer.
2. If the phone operator has no value added service, a **Service Not Available** message appears when users access this menu.


## Alarm Setup

M307 enables users to set up 5 alarm clock for wake up alarm or reminders for important schedules.

1. Go to **Organizer > Alarm** and press  to select one. Press  to adjust the following **Alarm Setting**.

Option	Discription
Alarm Time	to key in the alarm time
Alarm Type	to choose Once or Repeat
Ringtone	to choose a ringtone
Remind Setting	options: Ringtone, Vibrate or Vib. and Ring
Set Volume	to set the volume
Set Ring Time	to decide the ring time





2. When the alarm rings, press  to stop it, or press  to start the alarm for the lazy. The alarm will ring 5 minutes later.

3. When the alarm rings, press  to start the alarm for the lazy if the phone is not flipped open.
4. The alarm will still work normally, even if the handset is not switched on, .

## Dictionary

M307 offers users Chinese-English and English-Chinese dictionary for a quick understanding of unknown vocabularies.

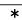**NOTE** : Insert the mini SD card before using this dictionary function.


1. Go to **Organizer > Dictionary**. Use  and  keys to switch the input methods.
2. Press  to clear the mis-input letters.
3. When finish spelling, press  to read the meaning of the word in Chinese.






## Calendar

M307 can help users schedule important meetings, and appointments.



### Check the Calendar

1. Go to **Organizer > Calendar**, and navigate with joystick keys on the calendar.
2. Press volume adjustment keys  on the left side to check the next or the previous month.
3. Today will be marked with blue letters, and the days with schedules will be marked with black frame.

### Go To Date




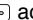
1. Go to **Organizer > Calendar**.
2. Press  > **Go To Date** and press  to confirm.
3. Enter the specific date and press  to check the schedule of that day.

### Schedule an Appointment

1. Go to **Organizer > Calendar**.
2. Press  > **Add**.
3. Enter the Title, Record Type, Start Time, End Time, Repeat Type and other information about the appointment.
4. Press  to save the schedule.







The phone will alert users with ringtones or vibration when the schedule time comes.

### Check and Edit a Schedule

1. Go to **Organizer > Calendar**. Select a date with schedule and press  to check.
2. Or press  > **View All** >  to check all the schedules.
3. Press  again to **View, Edit, Delete** and **Delete All** schedules.

## Calculator

The calculator of M307 can help users with basic calculating jobs. Go to **Organizer > Calculator** to use the functions below.





Function	Keyboard
number input	the number keyboard
+ - × ÷	the joystick keys 
=	
Clear	
C/AC	
.	
Back	

## World Clock


Go to **Organizer > World Clock**, users can check the time all over the world.

## Voice Recorder

Voice recorder enables users to record a speech or any voice users want to record.

1. Go to **Organizer > Voice Recorder**.
2. Press  > **Record** or just press  to start recording.
3. Press  to stop the recording and save it to **My Recording**; press  to stop the recording and discard it.

## Other Functions

Go to **Organizer > Voice Recorder**. Select a recording and press  to do the following operations.

Option	Discription
Play	to play the recording
Set as	to set the recording as the incoming ringtone
Delete	to delete the recording
Delete All	to delete all the recordings
Rename	to rename the recording

Option	Discription
Detail	to check the detailed information of the recording
Send MMS	to send the recording via MMS


## Voice Recognition




Voice recognition allows users to do the **Name Dialing** or the **Voice Command**.

### Name Dialing


Any words can be used as the command for the name dialing. Users can thus easily voice-dial the number without efforts.

### Record Name Dialing

1. Go to **Organizer > Voice Recognition > Name Dialing**.
2. Select EMPTY and press  > **Record Voice**.
3. Say the name after the message **Please say the name after beep!**

4. Repeat the same move after the message **Please say again after beep!**
5. If the second time recognition fails, the message **Please say again after beep!** will appear again for the third time recording. If all fail, please start from the step two to record it again.
6. Enter the phone number after the recording or press  to access the phonebook to select a contact. Edit the name and press  to confirm.
7. Confirm the name dialing recording by pressing  again.

**NOTE** : The function of name dialing can only include ten sets.


8. Press  to use the following functions.

Option	Discription
Play	to play the selected name dialing
Delete	to delete the selected name dialing
Delete All	to delete all the name dialing

**NOTE:**

1. The function of name dialing has nothing to do with language but the recorder's voice
2. Please record the name dialing in a quiet surroundings.
3. Please use clear and specific names for each name dialing, and avoid similar names for different phone numbers.
4. Noisy environment may affect the operation of the name dialing.




**Make a Call with Name Dialing**


1. Flip open the phone and long press the camera button  on the left side.
2. Say the name after the message **Please say the name or command after beep!**
3. If the recognition succeeds, the phone will start the connection. If it fails, the message **Please say again after beep!** will appear. The phone only accepts operation failure three times.

**Voice Command**

Any words or phrases can be used to operate the voice command.

**Record Voice Command**


1. Go to **Organizer > Voice Recognition > Voice Command.**
2. Select a function and press  to **Record Voice.**
3. Say the command after the message **Please say the command after beep!**
4. Repeat the same move after the message **Please say again after beep!**
5. If the second time recording fails, the message **Please say again after beep!** will appear again for the third time recording. If all fail, please start from the step two to record it again.
6. After the recording succeeds, the icon  will turn into .

7. Press  to do the following operation.




Option	Description
Play	to play the voice command
Delete	to delete the selected voice command
Delete All	to delete all voice commands
Add Item	to add a voice command item (users have to delete one before add one.)
Delete Item	to delete a voice command item
Restore All	to restore the default setting and the added items will be cleared

**NOTE:** Please avoid the same words or phrases for name dialing and voice command in order not to affect the voice recognition operation.


## Give Voice Command


1. Flip open the phone and long press the camera button  on the left side.
2. Say the name after the message **Please say the name or command after beep!**.
3. If the recognition succeeds, the phone will enter the corresponding options. If it fails, the message **Please say again after beep!** will appear. The phone only accepts operation failure three times.

## Currency Exchange






1. Go to **Organizer > Currency Exchange >  > Add Rate.**
2. Use the upward and downward joysticks to set currency 1 and 2. Use the leftward and rightward joystick keys to change the currency.
3. Enter the currency rate and press  to confirm.
4. Press  > **Calculate** and enter the amount in the currency 1 and the currency 2 will show the corresponding moeny.

**NOTE:** Before using the function of currency exchange, users have to add rate first.

- Press  to use the following function.




Option	Discription
Modify Rate	to modify rate
Delete Rate	to delete rate
List Currency	to list the built-in currency and press  to add, modify or delete the currencies

## Stopwatch

- Go to **Organizer > Stopwatch** and use the upward and downward joystick keys to switch between **Lap Stopwatch** and **Split Stopwatch**.
- Press  to start the stopwatch and press  to mark the time.
- Press  again to pause the stopwatch and press  clear the time.
- Press  to exit the stopwatch.

## Memory Status

This option will show the memory status of the **Phonebook**, **SMS**, **Calendar**, **Shared Memory**, and **Memory Card**.



Press  or use the upward and downward joystick keys   to show the next page and the previous page.

- Phonebook:** to check the phonebook space **In Handset** and **In SIM Card**.
- SMS:** to check the SMS space **In Handset** and **In SIM Card**.
- Calendar:** to check the **Event Status** and **Holiday space**.
- Share Memory Status:** to check the **Used Space** and **Free Space** in the built-in **Shared Memory**.
- Memory Card Status:** to check the **Used Space** and **Free Space** in the memory card.

**NOTE:** Users cannot check the memory card status without the card installation.

## Mass Storage

M307 supports mini SD card, so users can use the handset as a card reader for an easy file storage and transmission.

1. Connect the USB cable to the handset and the PC.
2. Go to **Settings > Transmit > Mass Storage**, and press  to confirm.
3. A message **Mass storage connecting, please do not remove the USB cable!** will show up.
4. Click **My Computer** on the desktop, a **Removable Disk** will appear.
5. Browse, edit, delete, upload and download files from the mini SD card.
6. Press  (Close) to remove the Removable Disk after editing.

**NOTE:** Do not remove the USB cable during this function operating.

## Installing the Handset Manager

Ensure that the following system requirements are met:

### Software:

- Microsoft Windows 98 or above system

### Hardware:

- USB 2.0 port
- CD-ROM driver

You can also edit voice mail details or connect to a voice mail account here.

**NOTE:** Voice mail is a service provider feature. Contact your service provider for voice mail numbers and settings or other voice mail assistance.

To install the Handset Manager software:

1. Insert the software CD into your computer to start installation.
2. On the start-up page, select the mobile phone model and interface you wish to install.
3. Turn on the phone and connect it to the computer using the supplied USB cable.  
When you turn on the phone, the phone prompts you to select a type of USB connection. Select COM Port.
4. Click OK on the phone keypad to proceed.
5. Click Install Handset Manager.

### NOTE:

- Make sure the mobile phone is switched on and correctly connected with the USB data cable before installation.
- Most systems already support USB. However, if your system does not, install a USB driver before installing the Handset Manager software.
- To uninstall software, click the Add/Remove Programs icon in the control panel. Select the ASUS M307 USB-Handset Manager from the list. Click the Remove button and follow the instructions on screen.



# Starting the Handset Manager

To start the Handset Manager:

1. Connect your handset to a USB port on your computer using the supplied USB data cable, then turn on your handset.
2. A list of connection types appears in the handset window. Select COM Port.
3. Select Asus M307 USB-Handset Manager > Asus M307 USB-Handset Manager from the computer's program list, OR

Right click the phone icon in the system tray in the lower right corner of the screen. Select Handset Manager.

4. An animation in the Handset Manager main panel shows your connection status.


## NOTE:

- Be sure to unplug the USB cable after use. The computer may not boot as usual if you start the computer with the phone's USB cable connected.

- When disconnecting the mobile phone from the computer while using Handset Manager, first turn off the handset, then disconnect the USB cable. When transmitting data to the Handset Manager, don't disconnect the handset.
- While transmitting and editing data, don't operate the phone and Handset Manager at the same time.
- Don't install Java Games through Handset Manager while simultaneously playing Java games in the mobile phone.

## Main Panel

The following illustration shows the main panel. Access all the Handset Manager functions from this Panel.

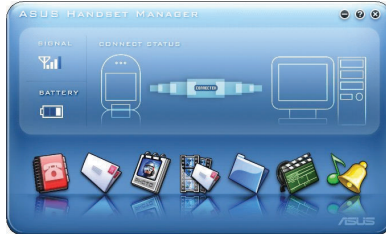

Access the Handset Manager tools by clicking on the icons at the bottom of the screen. Each tool has its own interface, which opens when you click on the icon.



Phonebook



Message



Album



MMS



File Manager






Video




Sound

Clicking the three buttons in the upper right corner of the main Handset Manager panel does the following:

-  Closes Handset Manager and minimizes the system tray.
-  Minimizes Handset Manager to the task bar.
-  Opens online help and settings.


## Settings, Information, and Online Help

You can access several items related to settings, information, and online help by clicking on the  icon.

- Select Help Topics to open online help. You can also open online help from the program list: Asus M307 USB-Handset Manager > User's Guide.
- Under Settings, you can select whether to run the Handset Manager automatically when you start the computer. You can also set the computer port, handset model, and interface type manually here.
- Select Handset Version to see the model name and firmware version of the phone, when the phone is connected. Select About Handset Manager to see the version of Handset Manager installed in your computer.


## Navigating the Handset Manager Tools

No matter which Handset Manager tool you are working with, you can access functions and commands in the following three ways. The Messages window is shown as an example.

1. Right-click to bring up the pop-up menu or click icons on the menu toolbar, OR
2. Click on the File button  in the upper left corner to choose from a drop-down menu, OR
3. Click on the icons in the upper right of the window.

File Button

Icons for Functions

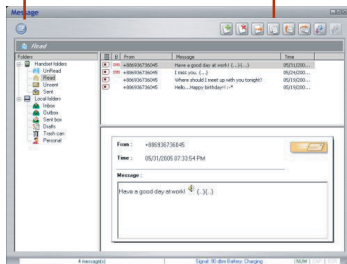


When you move the mouse over an icon, a pop-up window tells you the name of the button.


**NOTE:** You must exit one tool before launching another.

## Navigating Media Files


The interfaces for media tools-MMS, Sound, or Album and Video-are quite similar. The Album interface is shown here.

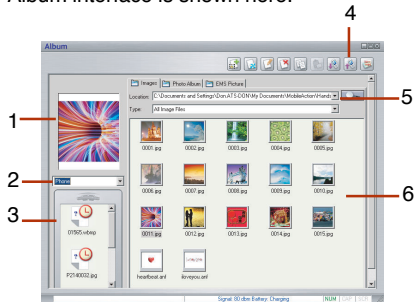



1. Preview Pane
2. Phone File Location
3. Phone Files
4. Icons for Functions
5. File Path/ Browse Icon
6. Thumbnails of Computer Files

- The left preview pane shows a preview of the files you select. A drop-down menu on the left lets you select the location of phone files. Select Handset or Memory Card.
- Thumbnails of files in the phone are shown in the lower left pane.
- Icons in the upper right corner give access to various functions, such as copy, paste, and delete. Also in the upper right, a frame shows the current file path, next to the browse icon . If you want to choose another file location, click this icon. The browse icon and drop down menus give you access to computer files only.
- Thumbnail views of computer files in the selected location are shown in the lower right pane.

## Transferring Files to and from the Handset

- To edit a file in your handset, download the file to your computer by clicking on the Download icon  in the upper right. The download function does not save the

file on your computer. To save the file on your computer you first download it as described above and then right-click and select Save from the dropdown menu. You can then save the file to a specific location on your hard disk.

- To add a file to the handset, click on the Update icon .
- To refresh the folder display click the Refresh icon .




### **NOTE:**

- As used in the Handset Manager software, the term update has the same meaning as upload.
- You do not necessarily need to select a folder on the phone's handset or miniSD card. The Handset Manager automatically locates the appropriate folder for the file type.

## Handset Manager Folder Location

The Handset Manager creates a default folder in the My Documents folder in Windows. Find this folder in My Documents > Mobile Action > Handset Manager. There are also sub-folders for the different types of files you can work with in the Handset Manager.

**NOTE:** To locate handset files using the handset screen, go to Organizer > File Manager.

-  Handset Manager is connected with the handset.
-  SyncManager has launched auto-synchronization.
-  The handset is disconnected from Handset Manager.

**NOTE:** When you close the Handset Manager window, the application remains running in the background. To completely exit Handset Manager, right click and select Exit.

## Handset Manager Icon

A Handset Manager icon appears in the system tray, even when the Handset Manager is minimized. By right-clicking the Handset Manager icon in the system tray, you can select the following Handset Manager functions: Handset Manager, SyncManager, SyncManager Settings, and Exit.

The appearance of the icon in the system tray indicates the current status:



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>