




MODEL RS88B
SECURITY SAFE
INSTALLATION AND USAGE INSTRUCTIONS

Your Avanti Room Security Safe is supplied with the following:

- 1 – Security Safe Unit 4-1.5V Batteries
- 2 – Emergency Access Keys 1-Felt Liner
- 1 – Installation / Usage Guide Installation Screws

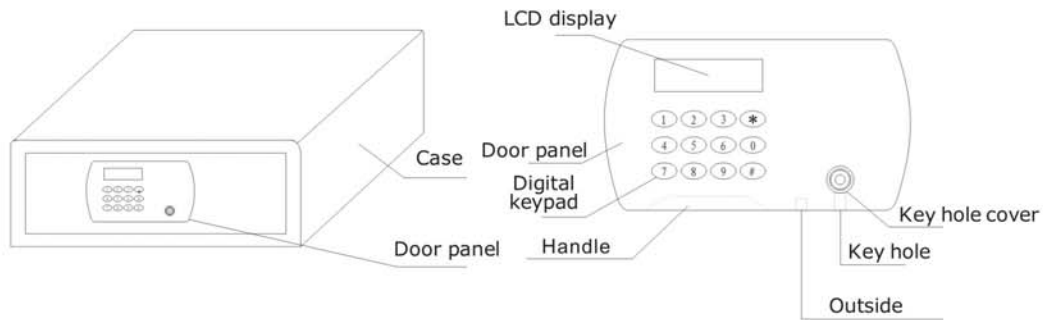


INSTALLING YOUR SECURITY SAFE

When installing your safe, be sure the location is sturdy enough to support the unit and is both secure and easy to access.

Safe can be installed onto either a concrete or wooden surface.

When installing use a 25/64" (10mm) drill bit and screws.

To prevent removal of your security safe, it is recommended to use Allen type screws (not included) to affix the unit to the installation location.

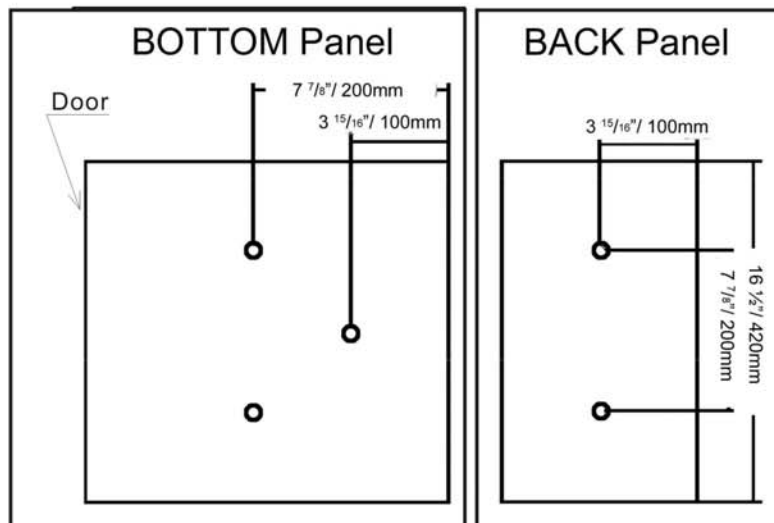

INITIAL SETUP AND CONFIGURATION.

After you have installed the unit in its final location, proceed to set up digital access controls.

- 1) Using the emergency Access Key, open the safe.
- 2) Open the battery compartment cover.
- 3) Following the image shown in the battery compartment install 4 AA size batteries.
- 4) Close the battery compartment cover.
- 5) The words "ALL READY" will be displayed on the LCD display for approximately 1 second; the security safe will then go into "STANDBY Mode".
- 6) Once in "STANDBY Mode" the LCD display will show the date and time (YY, MM, DD).
- 7) Using the keypad, enter the initial setup password "1234" or the administrator password "8888".

NOTE:

Battery Life / Level indicator: The battery indicator on the LCD display will show the current status of the batteries. Always replace all of the batteries at the same time. If at any time the battery level is too low to operate the security safe, use the emergency access key.

GUEST / USER CODE SETUP

To reset the access code read and follow the steps below.

- 1) With the door open, enter a new 4 – 8 digits code and press the "#" key to confirm the new pass code.
- 2) You will hear and see the security lock engage and the word "CLOSE" will be displayed on the LCD screen.
- 3) Enter the new pass code and press the "#" key again to open the security safe. The security lock will disengage and the word "OPEN" will be displayed on the LCD screen.
- 4) Close the door and enter the new code set up in step # 1 and press the "#" key. The word "CLOSE" will be displayed on the LCD screen and the security lock will engage.
- 5) If the Guest / User enters the wrong pass code three (3) times in a row the alarm will sound for 1 minute and will continue to sound in 1 minute intervals until the correct code is entered or the emergency access key is used to open the safe.

RESETTING THE ADMINISTRATOR PASSWORD

To reset the access code read and follow the steps below.

- 1) With the door open, press the "#" key to activate the keypad, then press the "0" key twice, then press the "red" button on the battery compartment once to enter the programming mode.
- 2) Once in the programming mode you will hear a "DI" sound and "- - -" will be shown in the LCD display.
- 3) Enter the new 4 – 8 digits administrator password and press the "#" key to confirm.
- 4) The word "INTO" will show on the LCD display to confirm the new password has been set up successfully.

The logo for Avanti Products, featuring the word "Avanti" in a stylized, cursive font with a registered trademark symbol (®) to the right. The word is underlined.

Avanti Products, Miami, FL 33172

Service Issues: 1 – 800 – 220 – 5570

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>