

2 OPTIONAL ACCESSORIES

**SHREDDER KIT**

**P/N 890209.** *Shreds leaves, dramatically reducing total volume.*

**HOSE KITS**

*For vacuuming in hard to reach areas.*

**Heavy Duty Vacuum Hose Kit P/N 900943.**

4"(102mm) x 10' (3.05m)

**Homeowners Vacuum Hose Kit P/N 900942.**

4"(102mm) x 10' (3.05m)

**NOZZLE WEAR PLATES**

**P/N 900810.** *Extends nozzle life when used along curbs and hard surfaces.*

**STANDARD TURF QUICK DEBRIS BAG**

**P/N 890307.** *Standard on TKD models. For use in leaves and grass in non-dusty conditions.*

**OPTIONAL DEBRIS BAGS**

**QUICK DEBRIS BAG**

**P/N 890305** *for use in dusty conditions.*


**DEBRIS BAG COVER**

**P/N 900801** *Directs dust downward away from operator.*

**ZIPPERLESS QUICK BAG**

**P/N 890309** *For non dusty conditions that are damaging to zippers.*

1

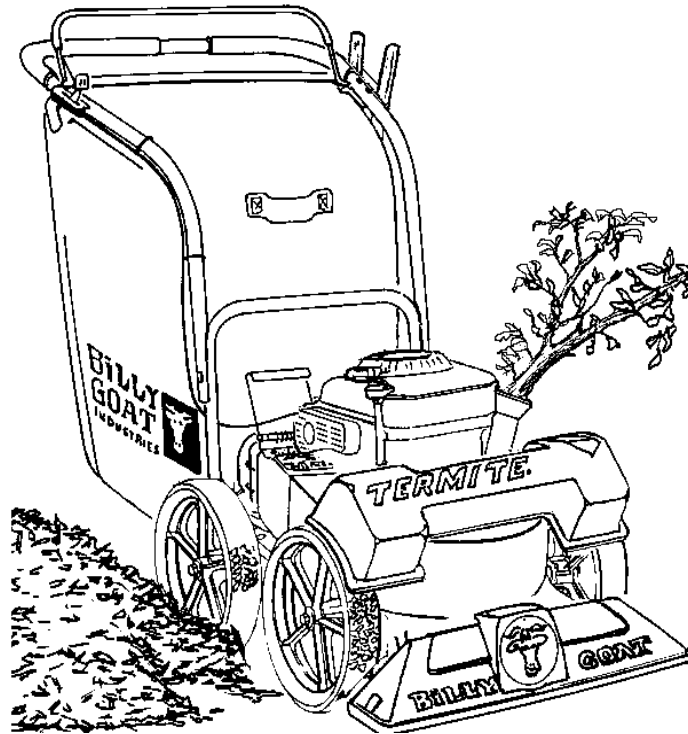

The **TERMITE**®

*Thank You for Selecting*  
**The Powerful TKD TERMITE® SELF-PROPELLED VACUUM CHIPPER**

**Operator Owner's Manual**

**TKD505SPT**

3

**Specifications**

**TKD505SPT**

|                   |                   |
|-------------------|-------------------|
| ENGINE: H.P.      | 5.5 (4.1 kW)      |
| ENGINE: TYPE      | TEC. PREMIER      |
| ENGINE: FUEL CAP. | 1.5 qt. (1.4 L)   |
| ENGINE: OIL CAP.  | 0.66 qt. (0.62 L) |
| WEIGHT: UNIT      | 126# (57.2 kg)    |
| WEIGHT: SHIPPING  | 149# (67.6 kg)    |
| ENGINE WEIGHT:    | 18.75# (8.5 kg)   |

UNIT SIZE: OVERALL LENGTH: 62"(1.57m) OVERALL WIDTH 26.75"(0.68m) OVERALL HEIGHT 42"(1.07m)

5

# IN THE INTEREST OF SAFETY



**BEFORE STARTING ENGINE, READ AND UNDERSTAND THE "ENTIRE OPERATOR'S MANUAL & ENGINE MANUAL."**



**THIS SYMBOL MEANS WARNING OR CAUTION. DEATH, PERSONAL INJURY AND/OR PROPERTY DAMAGE MAY OCCUR UNLESS INSTRUCTIONS ARE FOLLOWED CAREFULLY.**



**WARNING:** The Engine Exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

## WARNING: DO NOT

1. **DO NOT** run engine in an enclosed area. Exhaust gases contain carbon monoxide, an odorless and deadly poison.
2. **DO NOT** place hands or feet near moving or rotating parts.
3. **DO NOT** store, spill or use gasoline near an open flame, or devices such as a stove, furnace, or water heater which use a pilot light or devices which can create a spark.
4. **DO NOT** refuel indoors where area is not well ventilated. Outdoor refueling is recommended.
5. **DO NOT** fill fuel tank while engine is running. Allow engine to cool for 2 minutes before refueling. Store fuel in approved safety containers.
6. **DO NOT** remove fuel tank cap while engine is running.
7. **DO NOT** operate engine when smell of gasoline is present or other explosive conditions exist.
8. **DO NOT** operate engine if gasoline is spilled. Move machine away from the spill and avoid creating any ignition until the gasoline has evaporated.
9. **DO NOT** transport unit with fuel in tank.
10. **DO NOT** smoke when filling fuel tank.
11. **DO NOT** choke carburetor to stop engine. Whenever possible, gradually reduce engine speed before stopping.
12. **DO NOT** run engine at excessive speeds. This may result in injury & /or damage to unit.

13. **DO NOT** tamper with governor springs, governor links or other parts which may change the governed engine speed.

14. **DO NOT** tamper with the engine speed selected by the engine manufacturer.

15. **DO NOT** check for spark with spark plug or spark plug wire removed. Use an approved tester.

16. **DO NOT** crank engine with spark plug removed. If engine is flooded, place throttle in "FAST" position and crank until engine starts.

17. **DO NOT** strike flywheel with a hard object or metal tool as this may cause flywheel to shatter in operation. Use proper tools to service engine.

18. **DO NOT** operate engine without a muffler. Inspect periodically and replace, if necessary. If engine is equipped with muffler deflector, inspect periodically and replace, if necessary, with correct deflector.

19. **DO NOT** operate engine with an accumulation of grass, leaves, dirt or other combustible material in the muffler area.

20. **DO NOT** use this engine on any forest covered, brush covered, or grass covered unimproved land unless a spark arrester is installed on the muffler. The arrester must be maintained in effective working order by the operator. In the State of California the above is required by law (Section 4442 of the California Public Resources Code). Other states may have similar laws. Federal laws apply on federal lands.

21. **DO NOT** touch hot muffler, cylinder, or fins because contact may cause burns.

22. **DO NOT** run engine without air cleaner or air cleaner cover.

23. **DO NOT** operate during excessive vibration!

24. **DO NOT** leave machine unattended while in operation.

25. **DO NOT** park machine on a steep grade or slope.

## WARNING: DO

1. **ALWAYS DO** remove the wire from the spark plug when servicing the engine or equipment TO PREVENT ACCIDENTAL STARTING.
2. **DO** keep cylinder fins and governor parts free of grass and other debris which can affect engine speed.
3. **DO** pull starter cord slowly until resistance is felt. Then pull cord rapidly to avoid kickback and prevent hand or arm injury.
4. **DO** examine muffler periodically to be sure it is functioning effectively. A worn or leaking muffler should be repaired or replaced as necessary.
5. **DO** use fresh gasoline. Stale fuel can gum carburetor and cause leakage.
6. **DO** check fuel lines and fittings frequently for cracks or leaks. Replace if necessary
7. **Follow** engine manufacturer operating and maintenance instructions.
8. **Inspect** machine and work area before starting unit.

## 6 TABLE OF CONTENTS

|                      |         |
|----------------------|---------|
| SAFETY INSTRUCTIONS  | 2       |
| GENERAL SAFETY       | 3       |
| ASSEMBLY             | 3       |
| PARTS BAG & CONTROLS | 4       |
| LABELS               | 4       |
| OPERATION            | 5 - 7   |
| MAINTENANCE          | 8 - 9   |
| PARTS DRAWING & LIST | 10 - 12 |
| TROUBLESHOOTING      | 12      |
| WARRANTY PROCEDURE   | 12      |

Part No. 890316

7

## SOUND

97

### SOUND TESTS

Sound tests conducted were in accordance with 79/113/EEC and were performed on 05/19/95 under the conditions listed:

GENERAL CONDI- Sunny  
TION:

109

TEMPERATURE: 62°F (16.7°C)

WIND SPEED: 5 MPH (8.0 kmh)

WIND DIRECTION: South

HUMIDITY: 67 %

OPERATOR

BAROMETRIC PRESSURE: 30.06" Hg (763mm Hg)

8

## VIBRATION

### VIBRATION LEVEL 2.2g

Vibration levels at the operators handles were measured in the vertical, lateral, and longitudinal directions using calibrated vibration test equipment. Tests were performed on 05/19/95 under the conditions listed:

GENERAL CONDI- Sunny  
TION:

TEMPERATURE: 62°F (16.7°C)

WIND SPEED: 5 MPH (8.0 kmh)

WIND DIRECTION: South

HUMIDITY: 67 %


BAROMETRIC PRESSURE: 30.06" Hg (763mm Hg)

Page 2 of 12



Form No. F082195D

## GENERAL SAFETY

For your safety and the safety of others, these directions should be followed:

 Do not operate this machine without first reading owner's manual and engine manufacturer's manual.

  Use of Ear Protection is recommended while operating this machine.

  Use of Eye and Breathing protection is recommended when using this machine, especially in dry and dusty conditions. Optional bag cover directs dust toward ground, away from the operator.

·DO NOT place hands or feet inside nozzle intake opening, near debris outlet or near any moving parts.

·DO NOT start engine without debris bag and quick disconnect connected firmly in place to exhaust outlet.

·DO NOT start or operate machine with debris bag zipper open.

·DO NOT operate during excessive vibration.

·DO NOT remove bag until engine has been turned off and has come to a complete stop.

·DO NOT remove hose kit cap on nozzle until engine has been turned off and has come to a complete stop.

·DO NOT operate machine with hose cap, bag or hose removed.

·DO NOT use this machine for vacuuming **exclusively** sand, dust, fine dirt, rock, glass, string like material, grain, rags, cans, metal, bark or water.

·DO NOT operate this machine on slopes greater than 20%.

·DO NOT pick up any hot or burning debris, or any toxic or explosive material.

·DO NOT allow children to operate this equipment.

## ASSEMBLY



Read all safety and operating instructions before assembling or starting this unit.



PUT OIL IN ENGINE BEFORE STARTING.

Your Billy Goat is shipped from the factory in one carton, completely assembled except for the upper handle, debris bag, tamper and bag quick disconnect.

1. **ASSEMBLE** Lift upper handle (item 6), remove items 8, 73, 74, & 30 from lower handle (item 27). Attach upper and lower handle as shown, and securely tighten folding handle knobs (item 73), while holding head of screw (item 8) firmly against upper handle.

2. **UNFOLD** the debris bag (item 1) and fasten bag neck to bag quick disconnect (item 83). Attach firmly to housing exhaust (item 52) see fig. 2.



3. **ATTACH** bag hanger strap to bag supports (item 11), preassembled to upper handle.

4. **INSTALL** tamper (item 85) in chipper hopper (see page 7).

5. **CONNECT** spark plug wire.

## PACKING CHECKLIST

These items should be included in your carton. If any of these parts are missing, contact your dealer.

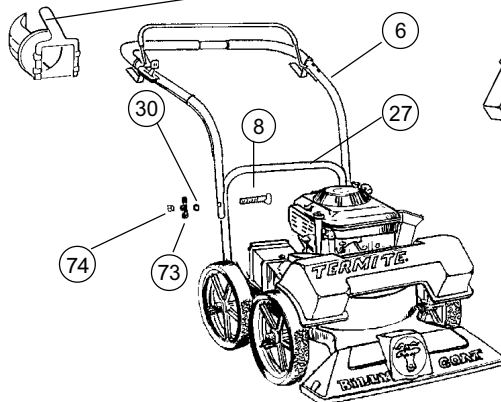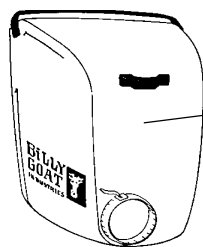

Literature Assy

Engine Manual


Check  Debris Bag  
890306

Check  Connector  
Quick  
Disconnect  
890176

Check  Tamper  
890229

Check  Literature Assy  
890325

Check  Tecumseh  
P/N181-656-1 English

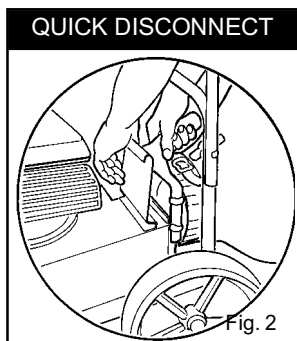

| Literature Checklist            |  |
|---------------------------------|--|
| Owner's Manual                  | <input type="checkbox"/> Check<br><b>Owner's Manual</b><br>890316                  |
| Literature KD / TKD Accessories | <input type="checkbox"/> Check<br><b>Literature KD / TKD Accessories</b><br>890317 |
| Warranty Card                   | <input type="checkbox"/> Check<br><b>Warranty Card</b><br>400972                   |

**Throttle Control**

**Start position**

*Tecumseh engines have a primer button carburetor with no choke.*

**Stop position**



**INSTRUCTION LABELS**

These labels should be included on your Vacuum. If any of these labels are damaged, replace them before putting this equipment into operation. Item and part numbers are given to help in ordering replacement labels..



Label Do Not Fill While Engine Is Hot  
Item 63 Part No.400268

Label Danger Keep Hands and Feet Away  
Item 29 Part No.400424



Label Danger Chipper For Wood Only  
Item 48 Part No. 890152



Label Oil Chain  
Item No. 45  
Part No. 830502



Label Ear Eye Breathing  
Item No. 37 Part No. 890254




Label Danger Flying Material  
Item 62 Part No.810736



Label Warning Guards  
Item 100 Part No.900327



Label Clutch Item No. 99  
Part No. 830503

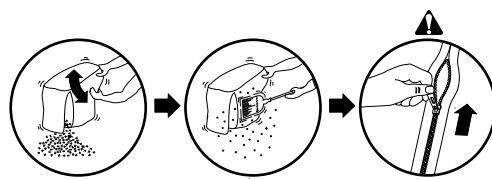

Debris Bag  
Label item 1



Label Read Owner's Manual  
Item No. 123  
Part No. 890301

**ENGINE LABELS**

Tecumseh



**TECUMSEH ENGINE INSTRUCTIONS**

**CAUTION:**  
FOR YOUR PERSONAL PROTECTION, READ ALL SAFETY NOTES IN ENGINE OWNER'S MANUAL.

**OPERATION:**  
FOR DETAILED LUBRICATION, STARTING, AND OPERATING INSTRUCTIONS, SEE ENGINE OWNER'S MANUAL & EQUIPMENT MFR'S. INSTRUCTIONS

**LUBRICATION:**  
 SUMMER SAE 30 OIL  
 WINTER SAE 5W-30 OIL

**TECUMSEH PRODUCTS COMPANY**  
 900 NORTH STREET GRAFTON, WI 53024, U.S.A.

**INTENDED USE:** This machine is designed for vacuuming leaves, grass clippings and other types of organic litter and for chipping brush, limbs, corn and sunflower stalks and palm fronds.

Debris mixed with cans, bottles and small amounts of sand can be vacuumed; however, it is not this machine's primary purpose. Vacuuming cans, bottles and sand will affect the longevity of your machine.

Do not operate if excessive vibration occurs. If excessive vibration occurs, shut engine off immediately and check for damaged or worn impeller, loose impeller bolt, loose impeller key, loose engine or lodged foreign objects. Note: See parts list for proper impeller bolt torque specifications. (See trouble shooting section on page 12).



Like all mechanical tools, reasonable care must be used when operating machine.

**Inspect machine work area and machine before operating. Make sure that all operators of this equipment are trained in general machine use and safety.**



**PUT OIL IN ENGINE BEFORE STARTING.**

### STARTING



**ENGINE:** See engine manufacturer's instructions for type and amount of oil and gasoline used. Engine must be level when checking and filling oil and gasoline.

**ENGINE SPEED:** Controlled by throttle lever on the handle. Under normal conditions, operate at minimum throttle to accomplish your current cleaning task.

**FUEL VALVE:** Move fuel valve to "ON" position (when provided on engine).

**CHOKE:** See Primer.

**PRIMER:** Push primer per engine instructions.

**THROTTLE:** Move remote throttle control to fast position. Pull starting rope to start engine.

**IF YOUR UNIT FAILS TO START:**

See Troubleshooting on page 12.

### VACUUMING OPERATION

**VACUUM NOZZLE HEIGHT ADJUSTMENT:** is raised and lowered by lifting slightly upward on handle and pulling height adjust rod (item 23) at left rear of machine.

**FOR MAXIMUM PICKUP:** Adjust nozzle close to debris, but without blocking airflow into the nozzle. *NOTE:* Never bury nozzle into debris.

#### CLEARING A CLOGGED NOZZLE

**& EXHAUST:** Turn engine off and wait for impeller to stop completely and disconnect spark plug wire. Wearing durable gloves, remove clog. **Danger**, the clog may contain sharp materials. Reconnect spark plug wire.



### CHIPPING OPERATION




**Wearing Eye Protection and Durable Gloves is recommended while operating chipper.**



**Use caution when using chipper**

Your **TERMITE**® chipper is designed to process tree branches and limbs up to 2" (50.8mm) diameter.

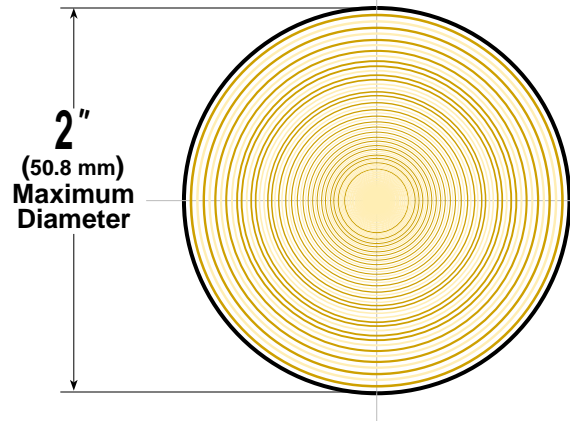

Several small branches can be grouped together and fed together into the chipper (see fig 2.).

When feeding forked branches, squeeze forks together and feed into chipper entrance (DO NOT overload). If forks are too large, use a pair of loppers to trim forks down to size. A lopper storage bracket is provided on every unit (loppers are not included).

### CLEARING A CLOGGED CHIPPER HOPPER



**Under normal circumstances, allow time for machine to clear all wood from chipper hopper before stopping engine. Otherwise, remaining pieces of wood will jam inside of chipper when engine stops. See Tamper on page 7.**

Disconnect spark plug wire.


Remove debris bag quick disconnect from debris outlet on machine.

Wearing durable gloves, access impeller through debris outlet on fan housing and rotate impeller counter clock wise to dislodge and remove jam and remove debris from hopper with tongs or equivalent.

Reconnect debris bag quick disconnect to machine.

Reconnect spark plug wire.



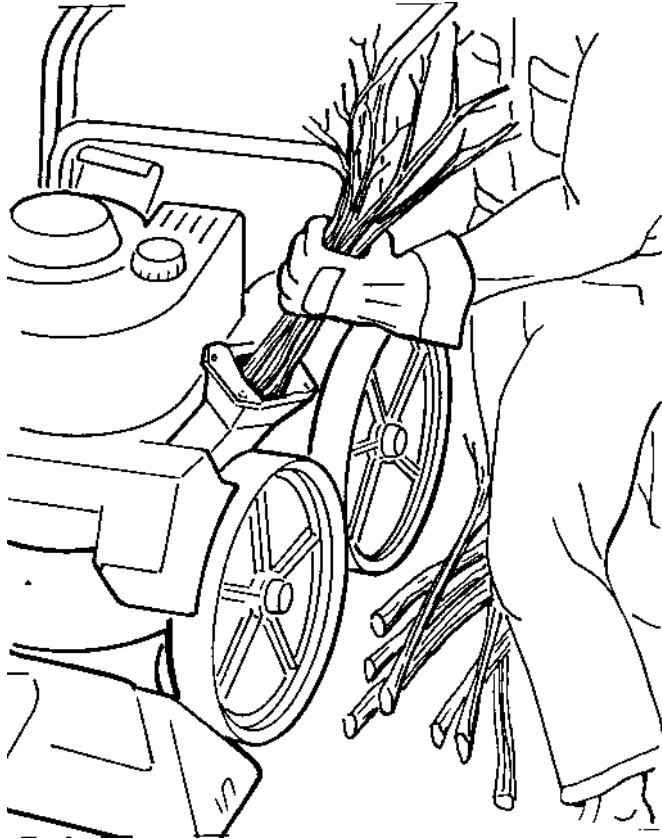

(fig. 2) **Note:** Dry wood is harder to chip than green wood.

### 16.9 MULCH

Wood chips made from branches in your own yard make excellent mulch. A thick blanket of wood chips around plants and flowers keeps weeds out and moisture in (see fig. 3).

### 16.10 COMPOST

Vacuumed leaves, grass and other organic material from your own yard can be emptied into a pile or composter to provide enriched soil for later use as fertilizer in gardens and flower beds (see fig. 3).

**Note:** Allow green chips to dry before spreading around living plants.

### 16.3 DEBRIS BAG

**Debris bags are normal replaceable wear items.**

**▲ Note:** Frequently empty debris to prevent bag overloading with more weight than you can lift.

An optional bag and dust cover is available for use where debris will be vacuumed in dusty conditions (see **Optional Accessories** shown on page 1.)

**DO NOT** place bag on or near hot surface, such as engine. Run engine at 1/2 throttle for first 1/2 hour to condition new bag. Your new bag requires a break-in period to condition the pores of the material against premature blockage. The entire bag surface serves as a filter, and must be able to breathe to have good vacuum performance. Be sure engine has come to a complete stop before removing or emptying bag.

**This vacuum is designed for picking up trash, organic material and other similar debris** (see Safety Warnings page 2-3). However, many vacuums are used where dust is mixed with trash. Your unit can intermittently vacuum in dusty areas. Dust is the greatest cause of lost vacuum performance. However, following these rules will help maintain your machine's ability to vacuum in dusty conditions:

- Run machine at idle to quarter throttle.
- The debris bag must be cleaned more frequently. A vacuum with a clean, pillow soft bag will have good pickup performance. One with a dirty, tight bag will have poor pickup performance. If dirty, empty debris and vigorously shake bag free of dust.
- Machine or pressure-wash debris bag if normal cleaning does not fully clean bag. Bag should be thoroughly dry before use.

*Having one or more spare debris bags is a good way to reduce down time while dirty bags are being cleaned.*

- DO NOT** leave debris in bag while in storage.



(fig. 3)


16.6

## PROPULSION

This vacuum is self-propelled. To engage the drive, pull operator's bail against operator's handle. The drive is disengaged by releasing the operator's bail.

**GROUND SPEED** can be varied by applying slight downward pressure to handle during operation (to allow drive wheels partial slippage) or by changing the engine rpm.

For improved control in confined areas, this machine can be freewheel pushed forward or backward by releasing the operator's bail and pushing machine.

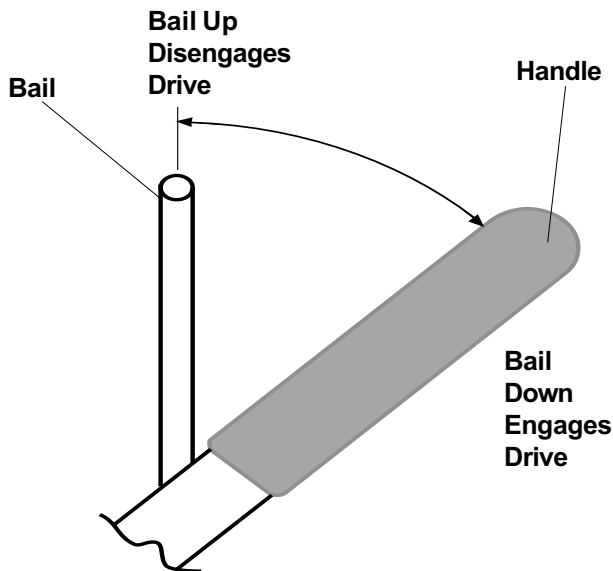

16.12

## TAMPER

Before turning machine off, use the Tamper to slowly push remaining pieces of wood through the chipper. This can prevent any remaining wood from jamming in the chipper when machine is turned off.

16.4

## HANDLING &amp; TRANSPORTING:

Using two people to lift machine is recommended. Lift holding the handle and front of nozzle. Secure in place during transport.

16.5

## STORAGE


⚠ Never store engine indoors or in enclosed poorly ventilated areas with fuel in tank, where fuel fumes may reach an open flame, spark or pilot light, as on a furnace, water heater, clothes dryer or other gas appliance.

**If engine is to be unused for 30 days or more, prepare as follows:**

⚠ Be sure engine is cool. Do not smoke. Remove all gasoline from carburetor and fuel tank to prevent gum deposits from forming on these parts and causing possible malfunction of engine. Drain fuel outdoors, into an approved container, away from open flame. Run engine until fuel tank is empty and engine runs out of gasoline.

**NOTE:** Fuel stabilizer (such as Sta-Bil) is an acceptable alternative in minimizing the formation of fuel gum deposits during storage. Add stabilizer to gasoline in fuel tank or storage container. Always follow mix ratio found on stabilizer container. Run engine at least 10 min. after adding stabilizer to allow it to reach the carburetor.

⚠ Do not store with debris in bag.

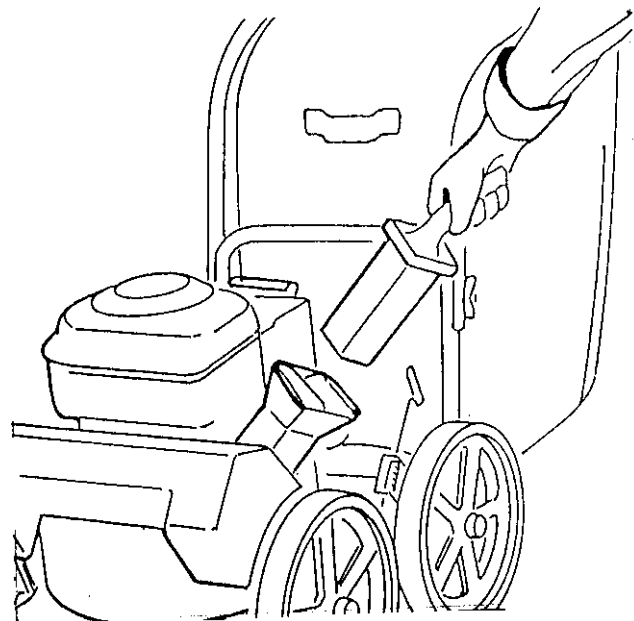

**Tamper Storage Position.**



Use only a qualified mechanic for any adjustments, disassembly or any kind of repair .



**WARNING: TO AVOID PERSONAL INJURY, ALWAYS TURN MACHINE OFF, MAKE SURE ALL MOVING PARTS COME TO A COMPLETE STOP.**



**DISCONNECT SPARK PLUG WIRE BEFORE SERVICING UNIT.**



**ENGINE:** See engine manufacturer operator's instructions.

**DEBRIS BAG:** See page 6.



**RECONNECT SPARK PLUG WIRE, GUARDS, BAG, CAPS AND / OR HOSE BEFORE STARTING ENGINE.**

### IMPELLER REMOVAL

1. Wait for engine to cool and disconnect spark plug.
2. Drain fuel and oil from the engine.
3. Remove bag, quick release, upper handle and clutch cable from upper handle. Do not kink, stretch, or break control cables, control housings, or end fittings while removing handles.
4. Remove chain guard, chains and jackshaft assembly (see page 9, Drive Chain).
5. Remove housing top plate by removing bolts around outside of housing.
6. Leaving engine fastened to top plate, remove impeller bolt and lock washer and slide impeller off crankshaft ( A puller may be required).
7. Retain shim washers used at end of crankshaft for use at impeller reinstallation (see fig. 7). However, your unit may or may not have required the use of shim washers.
8. If impeller slides off freely, proceed to (step 11 or step 15). **(Do not drop impeller).**
9. If impeller does not slide off crankshaft, place two crowbars between impeller and housing on opposite sides. Pry impeller away from engine until it loosens. *Using a penetrating oil can help loosen a stuck impeller.*
10. If the impeller cannot be loosened, obtain a 1" (25.4mm) longer bolt of the same diameter and thread type as the impeller bolt. Invert engine and impeller and support engine above ground to prevent recoil damage. Thread longer bolt by hand into the crankshaft until bolt bottoms. Using a suitable gear or wheel puller against the bolt head and the impeller back-plate (near the blades), remove impeller from shaft.

### CHIPPER BLADE REMOVAL AND SHARPENING

Chipper blades are normal replaceable wear items.



**DANGER** Chipper blade is sharp. Replace any damaged blade.

Depending on the type and amount of wood being chipped, the chipper blade will eventually get dull, losing its cutting ability. Evidence of a dull blade is a noticeably reduced chipping ability or a rough cut on end of branch.

**Note:** The chipper blade gap is factory set and should be checked each time impeller is removed from engine crankshaft and reset if required. If reassembly requires a different quantity of shim washers, Billy Goat® shim washer must be used.

11. Using a 3/16" Allen wrench and 1/2" open end wrench, remove chipper blade from impeller.
12. Sharpen blade by lightly grinding the cutting edge of the blade at **40 degrees** (see fig. 5). It is not necessary to remove all nicks from the cutting edge. **CAUTION:** Be careful to avoid heat buildup in the blade during sharpening. This will reduce its heat-treated hardness properties and will reduce blade life. Evidence of too much heat build-up is a change of color along sharpened edge.
13. The same chipper blade can be sharpened several times. However, blade replacement is required when blade no longer overhangs the chip relief hole in impeller back plate or if increased vibration occurs (see fig. 5).
14. Chipper blade installation is in reverse order of removal.

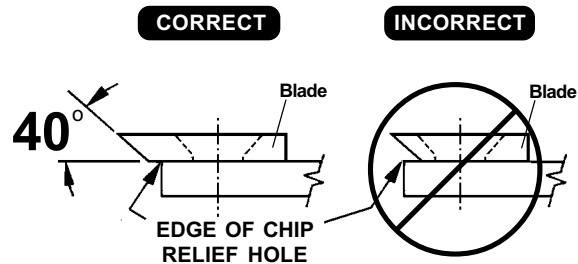


Fig. 5

15. To reinstall impeller, use a new impeller bolt and lockwasher and use exactly the same crankshaft impeller shim washers as were removed during disassembly (unless they were damaged). *However, your unit may or may not have required the use of shim washers.*
16. Tighten impeller bolt. Torque impeller bolt to 50 Ft. Lbs. (68 N-m) (see item 51 on page 11).
17. Slowly rotate impeller to insure proper chipper blade clearance. Check to see that gap between chipper blade and anvil surface (on lower side of housing top plate) measures between 0.040" (1.02mm) and 0.080" (2.03mm).
18. If gap is less than 0.040" (0.51mm), add shim washer 890130 (0.060" {1.52mm} thick) and/or 890131 (0.020" {1.02mm} thick), whichever is required. If gap is more than 0.080" (2.03mm), remove one or more shim washers as needed to obtain correct gap (see fig. 6 & fig. 7). The chipper will function at up to a maximum of 0.125" (3.18mm) gap.



**17.1 IMPELLER REMOVAL and CHIPPER**

19. If chipper blade properly clears anvil surface, proceed to step 20. If not, return to (step 14) and add or subtract shim washers as needed to obtain a correct gap.
20. Reinstall engine, impeller and jackshaft assembly components onto housing in reverse order of removal (see drive section on page 9).
21. Before connecting spark plug wire, slowly pull engine starting rope to insure that impeller rotates freely.
22. Reinstall spark plug wire.



fig. 6

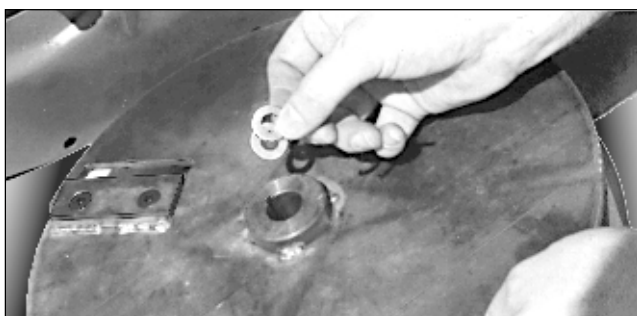


fig. 7

**17.3 DRIVE**

**Chains are normal replaceable wear items. A new chain should not be used on worn sprockets. Sprockets should be replaced when replacing chains.**



**Stop engine and disconnect spark plug wire before making adjustments.**

**CHAIN ADJUSTMENTS**

1. Remove chainguard (item 118) and 3 screws (item 81 & 71).
2. Inspect chains (items 87 & 88), for wear, (see chain replacement), lubrication and correct adjustment.
3. If adjustments are required, loosen 4 carriage bolts (item 90), that hold bearing brackets for jackshaft assembly.
4. Adjusting all (3) chains at same time is necessary and can be done by pulling jackshaft (item 93), up and forward.
5. Tension chains - similar to bicycle chain tightness with about 1/8" (3.2mm) deflection with light hand pressure mid-way between sprockets. A slightly loose chain is better than an over tightened chain. DO NOT over tighten.
6. With chains aligned and tensioned, and jackshaft (item 93), square and level, tighten carriage bolts (item 90).
7. Completely rotate drive wheels around several times to insure there are no excessively tight areas in the chain.
8. Repeat steps 4 thru 7 if chains need readjustment.
9. Reinstall chainguard (item 118).

**CHAIN REPLACEMENT**

1. With chain guard removed, loosen carriage bolts (item 90), that hold jackshaft (item 93), and bearing plates (item 101).
2. To replace inner chain (item 88), remove jackshaft assembly and install replacement chain.
3. To replace wheel chains (item 87), slide bearing plates (item 101), toward engine to loosen chains. Remove front wheels. Reinstall replacement chains with wheels and onto jackshaft sprockets.
4. See steps 4 thru 7 for chain alignment and adjustment.
5. Reinstall chainguard (item 118).

**CLUTCH ADJUSTMENT**

The clutch control cable is pre-adjusted at the factory, so when the bail is released, rod (item 115), engages clutch assembly (item 121), to stop forward drive motion and allow forward and backward free-wheeling. When the bail is held against handle, the clutch rod moves away from clutch assembly to allow drive engagement.

If drive will not disengage, adjust and align control bracket so that rod (item 115) fully contacts triangular plate on clutch assembly when bail is released (see fig. 8).

See lubrication intervals on Maintenance Schedule.



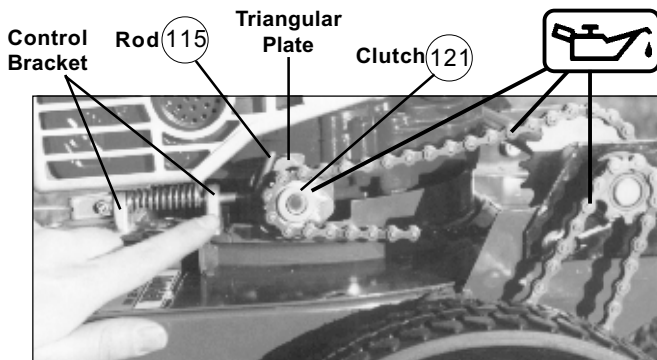


Fig. 8

**17.2 Maintenance Schedule**

Follow these hourly maintenance intervals.

| Maintenance Operation             | Every Use | Every 5 hrs or (Daily) | Every 10 hrs | Every 25 hrs |
|-----------------------------------|-----------|------------------------|--------------|--------------|
| Engine (See Engine Manual)        |           |                        |              |              |
| Check for excessive vibration     |           | ●                      |              |              |
| Clean Debris Bag                  | ●         |                        |              |              |
| Check bag strap tightness         | ●         |                        |              |              |
| Inspect for loose parts           |           | ●                      |              |              |
| Inspect for worn or damaged parts |           | ●                      |              |              |
| Lubricate Chains and Clutch       |           |                        | ●            |              |
| Inspect Chains and Clutch         |           |                        |              | ●            |

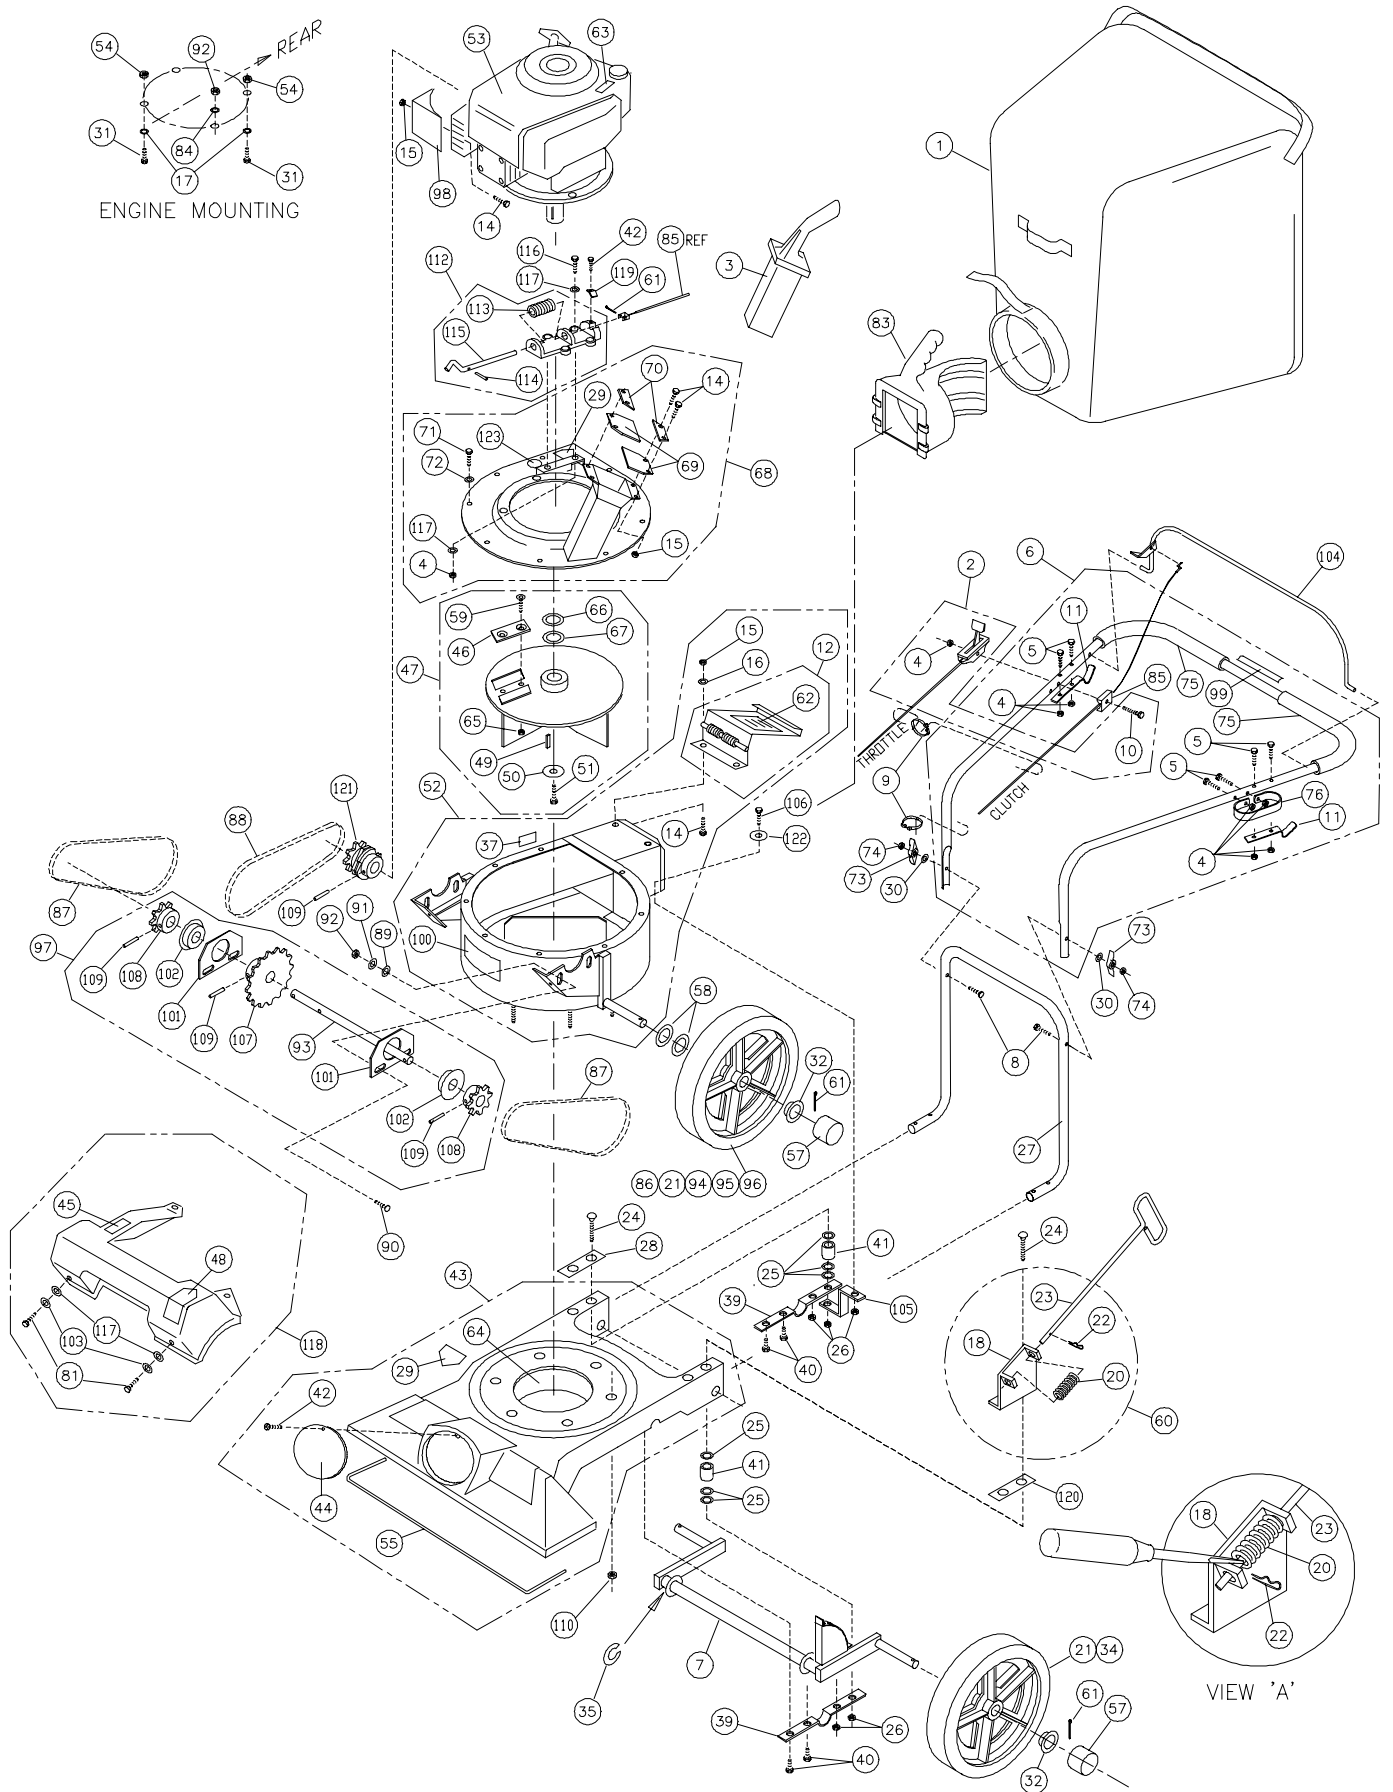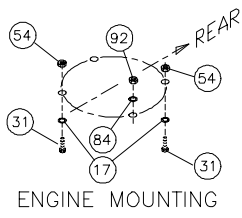

**18 PARTS DRAWING**  
**TKD505SPT**

| Item No. | 19 PARTS LIST | Description   | TKD505SPT | Qty. |
|----------|---------------|---|-----------|------|
|          |               |   | Part No.  |      |
| 1        |               | DEBRIS BAG TURF (service)                                       | 890307    | 1    |
| 2        |               | THROTTLE ASSEMBLY (INCL. 1 ea items 4, 10)                      | 900514-04 | 1    |
| 3        |               | TAMPER  | 890229    | 1    |
| 4        |               | NUT LOCK (1/4 - 20 )  | *8160001  | 7    |
| 5        |               | SCREW CAP ( 1/4 - 20 x 1-1/2 HEX )                              | *8041008  | 6    |
| 6        |               | HANDLE ASS'Y (incl. items 4(6), 5(4), 11(2), 75(2) & 76, 99)    | 900057    | 1    |
| 7        |               | AXLE REAR - FRAME W.A.  | 900956    | 1    |
| 8        |               | SCREW HANDLE 5/16 - 18 x 2-1/4                                  | 900547    | 2    |
| 9        |               | CLAMP CABLE PLASTIC 1"  | 900813    | 2    |
| 10       |               | SCREW CAP 1/4 - 20 x 2 1/4                                      | *8041011  | 1    |
| 11       |               | BAR SUPPORT BAG   | 900039    | 2    |
| 12       |               | DOOR EXHAUST ASS'Y (incl. item 62 )                             | 890148    | 1    |
| 13       |               |   |           |      |
| 14       |               | SCREW CAP #10 - 24 x 5/8  | *8059135  | 7    |
| 15       |               | NUT LOCK #10 NC   | *8164005  | 7    |
| 16       |               | WASHER #10 FC   | *8171001  | 2    |
| 17       |               | WASHER LOCK 3/8 INT.  | *8180011  | 2    |
| 18       |               | BRACKET - HEIGHT ADJUSTMENT                                     | 900932    | 1    |
| 19       |               |   |           |      |
| 20       |               | SPRING  | 900136    | 1    |
| 21       |               | TIRE - ONLY (PER ASSY) TREADED                                  | 900659    | 1    |
| 22       |               | PIN - HAIR COTTER   | 900471    | 1    |
| 23       |               | ROD SHORT HEIGHT ADJUSTMENT                                     | 890110    | 1    |
| 24       |               | BOLT - CARRIAGE 5/16 - 18 x 3-1/2                               | *8024050  | 4    |
| 25       |               | WASHER - FLAT 5/16 SAE  | *8172008  | 12   |
| 26       |               | NUT LOCK 5/16 - 18 HEX  | *8160002  | 5    |
| 27       |               | HANDLE LOWER KD505  | 900041    | 1    |
| 28       |               | PLATE HANDLE SUPPORT  | 900933    | 1    |
| 29       |               | LABEL DANGER CUT FINGER   | 400424    | 2    |
| 30       |               | WASHER FLAT CUT 5/16  | *8171003  | 2    |
| 31       |               | SCREW CAP 3/8 - 16 X 2 1/2 WASHER FACE                          | 900564    | 2    |
| 32       |               | WASHER HUB CAP 1/2 I.D.   | 900927    | 4    |
| 33       |               |   |           |      |
| 34       |               | WHEEL ASS'Y CAST (incl. items 21) TREADED                       | 900760    | 2    |
| 35       |               | WASHER 0.75 "C"   | 900997    | 1-0  |
| 36       |               |   |           |      |
| 37       |               | LABEL EAR EYE BREATHING   | 890254    | 1    |
| 38       |               |   |           |      |
| 39       |               | PLATE BRACE REAR  | 890189    | 2    |
| 40       |               | SCREW CAP 1/4 - 20 x 1/2  | *8041002  | 4    |
| 41       |               | SPACER  | 900926    | 4    |
| 42       |               | SCREW SELF TAPPING 10 - 24 x 1/2                                | *8123086  | 2    |
| 43       |               | NOZZLE MAINFRAME ASS'Y (incl. one of items 29, 44, 42, 55, 64 ) | 900966    | 1    |
| 44       |               | PLUG  | 900146    | 1    |
| 45       |               | LABEL OIL CHAIN   | 830502    | 1    |
| 46       |               | BLADE CHIPPER   | 890101    | 1    |
| 47       |               | IMPELLER ASS'Y (incl. items 46, 49, 50, 51, 59, 65, 66, 67 )    | 890208-S  | 1    |
| 48       |               | LABEL CHIPPER   | 890152    | 1    |
| 49       |               | KEY 3/16 SQ. x 1.25   | 9201080   | 1    |
| 50       |               | WASHER LOCK 3/8 TWISTED TOOTH                                   | 400502    | 1    |
| 51       |               | SCREW CAP 3/8 - 24 x 2" (HARDENED) (TORQUE 50 FT-LBS) (68 N·m)  | 810962    | 1    |
| 52       |               | HOUSING ASS'Y (incl. items 12, 14, 15, 16, 37, 100)             | 890202    | 1    |
| 53       |               | ENGINE 5.5 H.P. TECUMSEH PREMIER                                | 890228    | 1    |
| 54       |               | NUT LOCK 3/8 16   | *8160003  | 2    |
| 55       |               | ROD BUMPER  | 900939    | 1    |
| 56       |               |   |           |      |
| 57       |               | CAP HUB   | 900486    | 4    |
| 58       |               | WASHER FLAT 1/2 SAE   | *8172011  | 4    |
| 59       |               | SCREW SOCKET HD. 5/16 - 18 x 3/4 GR. 8                          | 890103    | 2    |
| 60       |               | HT ADJUST ASSY  | 890326    | 1    |
| 61       |               | PIN COTTER 3/32 x 3/4   | *8197016  | 5    |
| 62       |               | LABEL DANGER FLYING MATERIAL                                    | 810736    | 1    |
| 63       |               | LABEL HOT ENGINE  | 400268    | 1    |
| 64       |               | GUARD FOAM INSERT   | 900977    | 1    |
| 65       |               | NUT KEPS 5/16 -18   | 890104    | 2    |
| 66       |               | WASHER SHIM 0.060" (1.52mm)                                     | 890130    | 0-1  |
| 67       |               | WASHER SHIM 0.020" (0.51mm)                                     | 890131    | 0-2  |
| 68       |               | PLATE TOP ASS'Y (incl. items 14, 15, 29, 69, 70, 71, 72)        | 890188    | 1    |
| 69       |               | GUARD FLAPPER   | 890119    | 2    |
| 70       |               | PLATE FLAPPER ENTRANCE  | 890127    | 2    |
| 71       |               | SCREW CAP 5/16 - 18 x 1/2 HEX HD. GR. 5                         | 890149    | 9    |
| 72       |               | WASHER LOCK CONICAL 5/16  | 890150    | 9    |
| 73       |               | KNOB WING 5/16 - 18   | 890108    | 2    |
| 74       |               | NUT LOCK 5/16 - 18 THIN HT.                                     | *8161041  | 2    |
| 75       |               | GRIP HANDLE   | 400570    | 2    |
| 76       |               | BRACKET LOPPER LOOP   | 890167    | 1    |
| 77       |               |   | 900640    | 1    |
| 78       |               |   |           |      |
| 79       |               |   |           |      |
| 80       |               |   |           |      |
| 81       |               | SCREW CAP 1/4 - 20 x 3/4  | *8041004  | 2    |
| 82       |               |   |           |      |
| 83       |               | CONNECTOR QUICK   | 890176    | 1    |
| 84       |               | WASHER 5/16 EXT.  | *8181008  | 1    |
| 85       |               | CABLE ASS'Y CLUTCH  | 900207    | 1    |

\* Denotes standard hardware item that may be purchased locally.

19

Parts List  
continued from  
page 11.

| Item No. | Description  | TKD505SPT Part No. | Qty. |
|----------|--|--------------------|------|
| 86       | WHEEL WITH SPROCKET ASS'Y CAST (21, 94, 95, 96)        | 890242             | 2    |
| 87       | CHAIN 52 PITCH   | 890239             | 2    |
| 88       | CHAIN 40 PITCH   | 900323             | 1    |
| 89       | WASHER FLAT 5/16 (3/8 ID x 7/8 x 1/16)                 | *8171003           | 4    |
| 90       | BOLT CARRIAGE 5/16 -18 x 3/4                           | *8024039           | 4    |
| 91       | WASHER SPRING LOCK 5/16                                | *8177011           | 4    |
| 92       | NUT REGULAR 5/16-18                                    | *8142002           | 5    |
| 93       | JACKSHAFT  | 900320             | 1    |
| 94       | SPROCKET (PER ASSEMBLY) (SIZE # 65A26) 26 TEETH        | 890238             | 1    |
| 95       | SCREW SELF TAP 1/4-14 x 3/4 (PER ASSEMBLY)             | 800505             | 5    |
| 96       | WASHER LOCK EXTERNAL TOOTH (PER ASSEMBLY)              | *8181007           | 5    |
| 97       | JACKSHAFT ASS'Y (INCLUDE. 93, 101, 102, 107, 108, 109) | 890197             | 1    |
| 98       | SHIELD MUFFLER TKDSP                                   | 890190             | 1    |
| 99       | LABEL CLUTCH   | 830503             | 1    |
| 100      | LABEL-WARNING GUARDS                                   | 900327             | 1    |
| 101      | BEARING PLATE  | 900317             | 2    |
| 102      | BEARING BALL (WITH SNAP RING)                          | 900321             | 2    |
| 103      | WASHER LOCK 1/4  | *8177010           | 2    |
| 104      | ROD BAIL CLUTCH  | 900970             | 1    |
| 105      | BAR BRACE HANDLE                                       | 900768             | 1    |
| 106      | SCREW CAP 5/16-18 x 3/4                                | *8041026           | 1    |
| 107      | SPROCKET - 17 TOOTH                                    | 900303             | 1    |
| 108      | SPROCKET - 8 TOOTH                                     | 900302             | 2    |
| 109      | ROLL PIN 3/16 DIA. x 1 1/4 LG.                         | *8195166           | 4    |
| 110      | LOCKNUT 5/16 - 18 FLANGE                               | 850164             | 5    |
| 111      |  |                    |      |
| 112      | BRACKET CONTROL ASS'Y (INCL. 113, 114, 115)            | 900221             | 1    |
| 113      | SPRING   | 900136             | 1    |
| 114      | ROLL PIN 1/8" DIA. x 1 1/4 LG.                         | *9195106           | 1    |
| 115      | ROD CLUTCH   | 900208             | 1    |
| 116      | SCREW CAP 1/4-20 x 1" LG.                              | *8041006           | 2    |
| 117      | WASHER 1/4" FLAT (5/16 ID x 3/4 OD x 1/16)             | *8171002           | 6    |
| 118      | GUARD CHAIN ASS'Y TKDSP                                | 890195             | 1    |
| 119      | CLIP-CLUTCH CABLE                                      | 900999             | 1    |
| 120      | PLATE BRACE HT. ADJ. KD / TKD                          | 900756             | 1    |
| 121      | CLUTCH DOUBLE RELEASE                                  | 900307             | 1    |
| 122      | WASHER FENDER 5/16                                     | *8172020           | 1    |
| 123      | LABEL READ OWNER'S MANUAL                              | 890301             | 1    |

\* Denotes  
standard  
hardware item  
that may be  
purchased  
locally.

20

## TROUBLESHOOTING

Before Requesting Service Review These Suggestions



 
| Problem   | Possible Cause   | Solution   |
|---|--|--|
| Will not vacuum or has poor vacuum performance. | Dirty debris bag. Nozzle height set too high or too low. Hose kit cap missing. Clogged nozzle or exhaust. Excessive quantity of debris.                                | Clean debris bag. Shake bag clean or wash. Adjust nozzle height. Check for hose kit cap. Unclog nozzle or exhaust (see page 5).<br><b>Allow air to feed with debris.</b> |
| Poor chipping performance.                      | Extremely hard wood. Dull or damaged chipper blade.  | Avoid extremely hard wood. Sharpen or replace chipper blade (see page 8).  |
| Engine stalls or labors when chipping.          | Feeding branches into chipper too rapidly. Engine service may be required.   | Feed branches at a slower rate. Service engine.  |
| Abnormal vibration.                             | Loose or out of balance impeller or loose engine.  | Check impeller and replace if required. Check Engine.  |
| Engine will not start.                          | Throttle in off position. Out of gasoline. Bad or old gasoline. Spark Plug wire disconnected. Dirty air cleaner.   | Check stop switches, throttle, and gasoline. Connect spark plug wire. Clean or replace air cleaner. Or contact a qualified service person.                               |
| No self propelling.                             | Operator's bail not releasing clutch. Broken or out of adjustment clutch cable. Worn or broken clutch assembly. Bracket control assembly (item 112) out of adjustment. | Adjust clutch cable. Adjust bracket control assembly. Replace any worn or damaged or malfunctioning parts.   |
| Self propelled drive will not release.          | Clutch cable out of adjustment. Clutch not lubricated and is locked-up.  | Adjust clutch cable. See page 9 Clutch Adjustment. Oil clutch.   |
| Engine is locked, will not pull over.           | Debris locked in chipper blade, hopper or inside impeller. Engine problem.   | See page 5, Clearing a clogged chipper hopper. Contact an engine servicing dealer for engine problems.   |

22.1

**Engine Service and Warranty**  
Contact your nearest engine manufacturer's authorized servicing dealer.

21

**Serial Plate** Record your machine model, serial number and date-of-purchase and where purchased

|   |  |                        |
|---|--|------------------------|
| <br><b>97</b>  | <br>1803 S. Jefferson P.O. Box 308<br>Lee's Summit, MO 64063 / USA<br>(816) 524-9666 FAX (816) 524-6983 |                        |
|   | Model  | Serial No.             |
| <br><b>109</b> | Unit (weight)  | Engine Power           |
|   | lbs kg   | kW @ min <sup>-1</sup> |
| Operator  |  |                        |

Purchase Date \_\_\_\_\_ Purchased from \_\_\_\_\_

22

## WARRANTY PROCEDURE

Please fill in the WARRANTY CARD and send the upper part to Billy Goat. The WARRANTY terms are stated on the lower part which remains with the user. Whenever a Billy Goat Machine is faulty due to a defect in material and / or workmanship, the owner should make a warranty claim as follows:

The Machine should be taken to the dealer from whom it was purchased or to an authorized Billy Goat dealer.

The owner should present the remaining half of the Warranty Registration Card, or, if this is not available, the invoice or receipt.

The Warranty Claim will be filled in by the authorized Billy Goat Dealer, who will send it with the faulty part to Billy Goat headquarters.

The Quality / Service department at Billy Goat headquarters will study the claim and parts and will notify their conclusions.

The decision by the Quality / Service department at Billy Goat headquarters to approve or reject a Warranty claim is final and binding.

Note: To process a Warranty Claim, it is necessary to quote the Model & Serial number who are printed on the Billy Goat Serial Plate.



**BILLY GOAT INDUSTRIES INC.**  
P.O. BOX 308 (1803 S JEFFERSON) LEE'S SUMMIT, MO 64063 / USA  
PHONE: 816-524-9666 FAX: 816-524-6983

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>