

Quick Tips

Detachable Steam Pod

1. You may only use the Detachable Steam Pod when it is removed from the upright unit.
2. We recommend that you use it with one of the included attachments.



Red circular bathroom brush



Black circular kitchen brush



Grout brush



Flat surface microfiber cleaning tool

Cleaning with attachments

1. Attach the cleaning tool to the end of the hose
2. Clean by pressing the steam trigger to apply steam onto the area to be cleaned
3. Slowly scrub tool back and forth over the mess
4. When cleaning is complete, remove and rinse tool in warm water

Refer to the User's Guide for full instructions on how to clean, store and maintain your machine

For additional tips and troubleshooting

Please refer to User's Guide

Earn BISSELL rewards! Register your product today!

Visit: www.bissell.com

120-4367
© 2011 BISSELL Homecare, Inc.
BISSELL Homecare, Inc.
P.O. Box 1888
Grand Rapids, MI 49501

Download from www.Somanuals.com. All Manuals Search And Download.



LIFT-off[®] STEAM MOP™

39W7

BISSELL is happy to be of service.
Contact us directly at 1-800-237-7691 or
visit the website for helpful instructions at
www.bissell.com

PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE
PLEASE KEEP FOR FUTURE REFERENCE

Quick Start Guide

WARNING:

Refer to the enclosed user guide for complete instructions and important safety notices.

Package contents:

- | | |
|-------------------------|---------------|
| a. Detachable Steam Pod | d Handle |
| b Upright Unit | e Small screw |
| c Maneuverable Mop Head | f Mop Pads |

Phillips head screw driver is needed for assembly



Assembly

1. Attach lower body base that contains detachable steam pod to maneuverable swivel head.
2. Secure maneuverable swivel head with small screw and Phillips head screw driver. Tighten until secure.
3. Secure the handle by placing it in the lower body base and screw it clockwise until tight. Ensure that the upper handle is pointing to the rear.
4. Remove water tank and unscrew cap at the bottom. Fill with water. For best results, water should be at room temperature.
5. Replace cap and screw until tight.
6. Slide water tank onto detachable steam pod by lining up vertical guides and gently sliding tank into place.
7. Place steam mop pad on mop head.



Your assembly is now complete.

Ready to Steam Mop

1. Plug into electrical outlet and wait approximately 30 seconds for the "Ready Light to turn On."
2. To steam clean your floor, depress the steam on demand trigger and hold down until unit emits steam. You will hear a knocking noise, which means the pump is priming. This will only occur when you first use your steam mop or you replace your filter. For sanitization instructions see users guide.
3. Select the steam setting by turning the steam control knob from light, which is used for delicate flooring, to tough, which is used to clean hard to remove messes.
4. Begin mopping your floor when you hear steam generated at the mop head, depressing the steam on demand trigger to continuously generate steam.
5. To use the detachable steam pod, press, pull and release the PRESS GRAB & GO button. Twist the Quick Release cord wrap clock-wise to unwrap the cord.
6. Remove the hose by pressing on the blue button in the rear of the detachable pod.
7. Attach one of the attachments to the end of the hose.
8. To generate steam, press the blue steam trigger button, which is located at the top of the detachable pod.



For complete user's guide, visit www.bissell.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>