



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for BOSCH SMS40A08GB. You'll find the answers to all your questions on the BOSCH SMS40A08GB in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BOSCH SMS40A08GB
User guide BOSCH SMS40A08GB
Operating instructions BOSCH SMS40A08GB
Instructions for use BOSCH SMS40A08GB
Instruction manual BOSCH SMS40A08GB



en Operating instructions



[Your user manual](#)
[BOSCH SMS40A08GB](#)

Manual abstract:

An exact description can be found in the back of the envelope. – Do not allow children to play with or operate the appliance. – Keep children away from detergents and rinse aid. These may cause chemical burns in the mouth, throat and eyes or asphyxiation. – Keep children away from open dishwasher. The water in the rinsing compartment is not drinking water and could contain detergent residue. Ensure that children do not place fingers in the tablet collecting tray 12. Small fingers could become caught in the slots. – If the appliance is installed at eye-level, ensure when opening and closing the door that children are not caught or crushed between the appliance door and the cupboard door situated below. Installation Read the "Installation" chapter to learn how to install and connect the appliance correctly.

In daily use – This appliance is intended for use in the home and the home environment. – Use the dishwasher only in the household and only for its designed purpose: for washing domestic dishes. – Children or people whose physical, sensory or mental abilities prevent them from using the appliance safely must not use this appliance without supervision or instruction by a responsible person. – Do not lean or sit on the open door. The appliance could tip.

– Please note that free-standing appliances may tip over if the baskets are overloaded. – Do not add any solvents to the washing chamber. Danger of explosion! Childproof lock (door lock) * oD lckr The description of the childproof lock is at the back in the envelope. * depending on model 4 en Childproof lock (button lock) oukBtlnc You can secure your appliance from being unintentionally the programme terminated (e.g. improper operation by children). Activating the button lock: – Start the required programme. – Hold down the button + for approx. 4 sec. until this is indicated on the digital display. If any button is pressed while the programme is running, this is indicated on the digital display. It is not possible to end (Reset) the programme. Deactivating the button lock: – Hold down the button + for approx. 4 sec. until the display goes out.

When the programme ends (: on the digital display), the button lock is cancelled. If there is a power failure, the button lock is retained. Whenever a programme is restarted, the button lock must be reactivated. Getting to know your appliance Diagrams of the control panel and the interior of the appliance can be found in the envelope at the front. Individual positions are referred to in the text. Control panel (0 8 @ H P X `h)" ON/OFF switch Programme buttons ** Door opener Timer programming * Additional options ** START button Display "Check water supply" Salt refill indicator Rinse aid refill indicator Digital display Damage – The appliance may be repaired and opened up by a technician only. To do this, disconnect the appliance from the power supply. Pull out the mains plug or switch off the fuse. Turn off the tap. * depending on model ** Number depending on model Appliance interior 1" 1* 12 1: 1B 1J 1R 1Z 1b 1j 9" 9* 92 Top basket Knife shelf * Tablet collecting tray Top spray arm Bottom spray arm Dispenser for special salt Filters Cutlery basket Bottom basket Dispenser for rinse aid Detergent dispenser Lock for detergent dispenser Rating plate Disposal – Make redundant appliances unusable to prevent subsequent accidents.

– Dispose of the appliance in an environmentally friendly manner. ⚠=Warning Children could become locked in the appliance (risk of suffocation) or find themselves in other dangerous situations. Therefore: Pull out the mains plug, sever and dispose of the power cord. Destroy the door lock so that the door can no longer be closed. * depending on model 5 en Water softening system To ensure good washing results, the dishwasher requires soft water, i. e. containing low amounts of lime, otherwise white limescale will be deposited on the utensils and inner container. Tap water above 9° Clarke must be softened. The water is softened with salt (regeneration salt) in the water softening system of the dishwasher. The setting and therefore the required amount of salt depends on the degree of hardness of your tap water (see table).



[Your user manual](#)
[BOSCH SMS40A08GB](#)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>