

BOSE[®]




LIFESTYLE[®] 235 HOME ENTERTAINMENT SYSTEM
LIFESTYLE[®] V35/V25 HOME ENTERTAINMENT SYSTEMS
LIFESTYLE[®] T20/T10 HOME THEATER SYSTEMS


SAFETY INFORMATION


Please read this guide

Please take the time to follow the instructions in this guide carefully. They will help you set up and use your system properly so you can enjoy its advanced features. Please save all safety and operating instructions, including this guide, for future reference.

All Bose® products must be used in accordance with local, state, federal, and industry regulations.

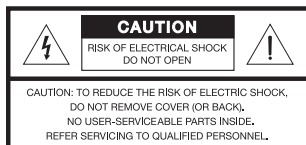

 The lightning flash with arrowhead symbol within an equilateral triangle alerts the user to the presence of uninsulated, dangerous voltage within the system enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

 The exclamation point within an equilateral triangle alerts the user to the presence of important operating and maintenance instructions in this guide.

WARNINGS:

- To reduce the risk of fire or electrical shock, do not expose the product to rain or moisture.
- Do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on or near the apparatus. As with any electronic products, use care not to spill liquids into any part of the system. Liquids can cause a failure and/or a fire hazard.
- Do not place any naked flame sources, such as lighted candles, on or near the apparatus.
- Contains small parts that may be a choking hazard. Not suitable for children under age 3.



CAUTIONS:

- Make no modifications to the system or accessories. Unauthorized alterations may compromise safety, regulatory compliance, and system performance, and may void the warranty.
- Long-term exposure to loud music may cause hearing damage. It is best to avoid extreme volume when using headphones, especially for extended periods.

Notes:

- Where the mains plug or appliance coupler is used as the disconnect device, such disconnect device shall remain readily operable.
- The product must be used indoors. It is neither designed nor tested for use outdoors, in recreation vehicles, or on boats.
- This product is intended to be used only with the power supply provided.
- The product label is located on the bottom of the product.
- The speaker wire and interconnect cables included with this system are not approved for in-wall installation. Please check your local building codes for the correct type of wire and cable required for in-wall installation.

Additional safety information

See the additional instructions on the *Important Safety Information* sheet enclosed in the shipping carton.

Batteries



Please dispose of used batteries properly, following any local regulations. Do not incinerate.



廢電池請回收



Bose Corporation hereby declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC and other applicable Directives. The complete Declaration of Conformity can be found at www.Bose.com/compliance.

Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a different circuit than the one to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by Bose Corporation could void the user's authority to operate this equipment.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For your records

Bose recommends that you record your system model information here, and the serial numbers both here and on your Product Registration Card.

Serial numbers are located on the bottom of the console, and on the connection panel of the Acoustimass® module.

System model name and number (on the carton):

LIFESTYLE® _____

Serial numbers:

Control console: _____

Acoustimass® module: _____

Retailer information:

Dealer name: _____

Dealer phone: _____

Purchase date: _____

Please keep your sales receipt and a copy of your Product Registration card together with this guide.

©2010 Bose Corporation. No part of this work may be reproduced, modified, distributed, or otherwise used without prior written permission.



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

Applicable only for LIFESTYLE® V25/V35/T10/T20 home entertainment systems



Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and the Symbol are

registered trademarks & DTS Digital Surround and the DTS logos are trademarks of DTS, Inc. Product includes software. ©DTS, Inc. All Rights Reserved.

Applicable only for LIFESTYLE® 235 home entertainment systems



Manufactured under license under U.S. Patent #'s: 5,956,674; 5,974,380 and 6,487,535 & other worldwide patents issued & pending. DTS, the

DTS Symbol and DTS+the DTS Symbol are registered trademarks & the DTS logos are trademarks of DTS, Inc. Product includes software. © 2010 DTS, Inc. All Rights Reserved.

Designed with UEI Technology™ Under License from Universal Electronics Inc. ©UEI 2000-2010.

HDMI and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

iPhone, iPod, iPod classic, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

Xbox is a trademark of Microsoft Corporation.

TiVo is a trademark of Tivo, Inc., or its subsidiaries.

Other trademarks are the property of their respective owners.

Applicable only for LIFESTYLE® 235 home entertainment systems



“Made for iPod” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has

been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

Made for:

iPod touch (1st and 2nd generation)

iPod nano (3rd, 4th, and 5th generation)

iPod classic

iPod with video

iPhone 3GS

iPhone 3G

iPhone



CONTENTS

INTRODUCTION	1	OPERATING YOUR CONNECTED DEVICES	7
Welcome	1	Selecting a connected device	7
System features	1	Watching TV	8
If you need help	1	Using a set-top box	8
YOUR REMOTE CONTROL	2	Using the tuner in your TV	8
YOUR CONTROL CONSOLE	5	Tuning to a TV station	8
POWER ON/OFF CONTROLS	6	Playing audio/video devices	9
Starting your system	6	Listening to a Bose link input device	9
Turning on your TV	6	Playing an iPod or iPhone mobile digital device (on 235, V35, and V25 systems only)	10
Shutting down your system	6	Using the front console inputs	11
		Front USB input	11
		Front Analog A/V input	12
		Front HDMI® input	12
		Changing the image view	12

*Not available on T20, T10 systems.

LISTENING TO THE RADIO

(ON 235, V25, AND V35 SYSTEMS ONLY) 13

Selecting the radio	13
Tuning to a station	13
Storing a preset station	13
Recalling a preset station	13
Deleting a preset station	13
Optional radio tuner settings	13

MORE BUTTONS AND SYSTEM OPTIONS 14

MORE buttons	14
Activating a MORE button function	14
Button function definitions	14
Changing system options	15
OPTIONS menu	16

REVIEWING YOUR SETUP SELECTIONS 18

Adjusting the system setup	18
Choices in the menu	18

ADDING SOUND TO ANOTHER ROOM 19

Expanding your 235, V35, or V25 system (Not available on T20, T10 systems, or in Japan.) . . .	19
Expansion guidelines	19

CARE AND MAINTENANCE 20

Replacing the batteries	20
Cleaning	20
Troubleshooting	21
Resetting the system	23
Pairing the remote with the console	23
Performing a system software update	23
Contacting customer service	23
Limited Warranty	24
Technical information	24

*Not available on T20, T10 systems, or in Japan.

Welcome

Thank you for choosing a Bose® LIFESTYLE® system for your home. This elegant and easy-to-use system delivers superior performance for both music and video.

By now you should have successfully set up your system, using the Unify™ intelligent integration system, and have calibrated the sound for your room, using the ADAPTiQ® audio calibration system.

This guide describes your new remote control and shows you how to operate your system and its connected devices.

System features

- Unify intelligent integration system to help you easily add devices to your system
- ADAPTiQ audio calibration system that optimizes system performance for your room
- RF remote control
- HDMI® connectivity
- Video up-conversion to 1080p
- Photo viewing using a USB flash drive
- Interface and dock compatible with iPod/iPhone devices (for 235, V25 and V35 systems only)

- AM/FM radio (for 235, V35 and V25 systems only)
- Can deliver sound in up to 14 additional rooms or locations (for 235, V35 and V25 systems only)

Note: Multi-room operation is not available on systems sold in Japan.

If you need help

If you have questions while operating your new LIFESTYLE® system, go to <http://owners.Bose.com> on the Internet for helpful operating information.

If you experience any operating difficulties, be sure to check the troubleshooting table on page 21. You can solve the most common operating problems using the helpful tips provided there.


IMPORTANT! – Please register your product right away!

Registering your product enables you to receive notifications of system software updates to keep your product performing optimally. It also allows us to send you information about new products and special offers from Bose.

Please follow the instructions on your Product Registration Card to register. Failure to register will not affect your limited warranty rights or your eligibility to obtain system software updates.

YOUR REMOTE CONTROL


This advanced radio frequency remote works throughout the room. You do not need to aim it at the control console.

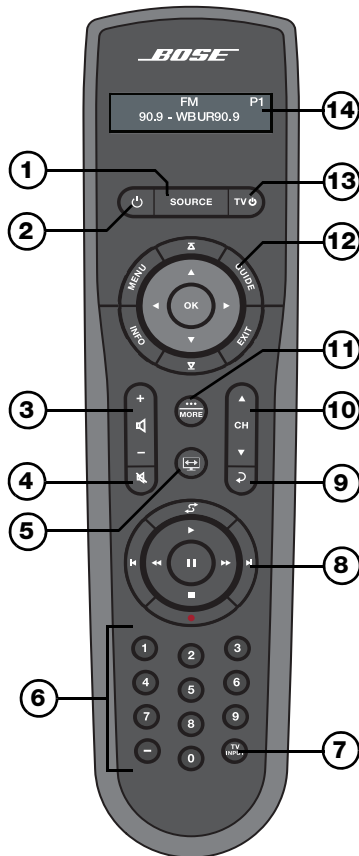

- ① **SOURCE** – Displays and selects connected devices from the source list on your TV
- ② **Power** – Turns your LIFESTYLE® system on or off (press and hold to turn off all rooms*)
- ③ **Volume Up/Down** – Increases (+) or decreases (-) the system volume
- ④ **Mute** – Mutes/unmutes system speakers (Press and hold to mute/unmute all rooms*)
- ⑤ **Image View** – Changes the way video appears
- ⑥ **Numeric Keypad** – Allows manual entry of channels and settings
- ⑦ **TV Input** – Changes inputs on your TV
- ⑧ **Playback Controls** – See page 3
- ⑨ **Last Channel** – Returns to last channel or preset
- ⑩ **Channel Up/Down** – Next or previous numbered channel or preset
- ⑪ **MORE** – Displays additional device-specific controls and information on your TV
- ⑫ **Navigation controls** – See page 3
- ⑬ **TV Power** – Turns your TV on or off
- ⑭ **Information Display**

*Not applicable to systems sold in Japan.


Navigation controls

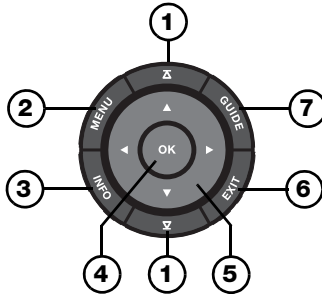

- ① **Page Up/Down** – Moves to next/previous page
- ② **MENU** – Displays the menu for a connected device
- ③ **INFO** – Displays program information
- ④ **OK** – Selects or confirms highlighted item
- ⑤ **Left/Right and Up/Down** – Navigation control
- ⑥ **EXIT** – Clears a menu or guide from your TV screen
- ⑦ **GUIDE** – Displays your set-top box or TV program guide, or Blu-ray Disc™ player pop-up menu

Note: See “Operating Your Connected Devices” on page 7 for more details on using navigation and playback controls with selected sources.

Playback controls

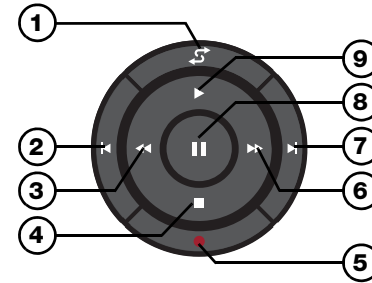

- ① **Shuffle**
- ② **Quick Replay/Skip Backward**
- ③ **Seek Backward/Rewind**
- ④ **Stop**
- ⑤ **Record**
- ⑥ **Seek Forward/Fast Forward**
- ⑦ **Quick Skip/Skip Forward**
- ⑧ **Pause**
- ⑨ **Play**

YOUR REMOTE CONTROL

Information display

(on 235, V25, and V35 systems only)

The display provides operating and system status information.

Examples:

- Source identification

Cable

- Volume

Cable
43

- Radio tuner

FM P1
90.9 - WBUR90.9

- iPod


iPod
Album

- Operating prompts

Hold number key
to set preset

Remote glow button

Pressing the glow button on the rear of the remote illuminates the remote buttons and display. The light turns off automatically after several seconds to prolong battery life.

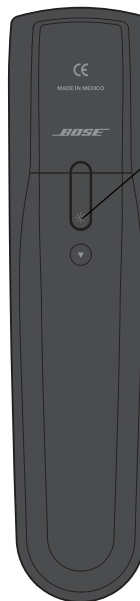

Glow button




To adjust the illumination level:

Note: If the currently selected source is AM or FM, switch to any other source before making the adjustment. This prevents unintentionally deleting a radio preset.

1. Press and hold the Glow and OK buttons at the same time for 5 seconds.
2. Press the up/down navigation button to select Brightness or Contrast.
3. Press the left/right navigation button to decrease or increase the illumination level.
4. Press either the OK or Glow button to return to normal operation.

YOUR CONTROL CONSOLE

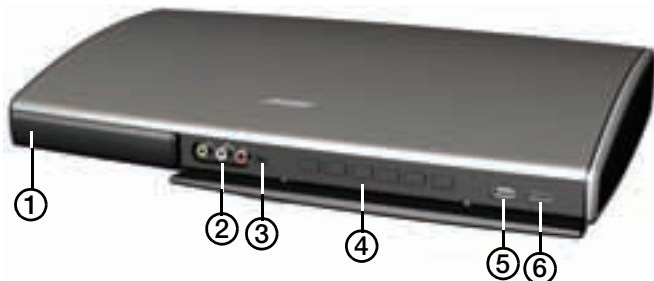


① Power light

- Red System is off (Standby)
- Blinking green System is starting
- Steady green System is on and ready to use in the main room or other rooms
- Amber System off and charging iPod

② Front A/V inputs


Used for temporarily connecting an audio/video device such as a camcorder.

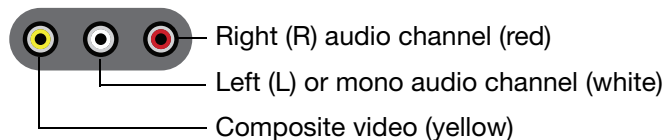


③ Headphones output


Accepts stereo headphones with a 3.5mm stereo plug. Volume level is set by the volume controls.


④ Control buttons

 Turns system power on or off

Source Lists system sources on your TV

 Mutes/unmutes the system speakers

 - Decreases system volume

 + Increases system volume

Setup Displays the Setup menu (press and release) or system information (press and hold)

⑤ Front USB input


Used for viewing photo files from a USB device including a digital camera. Also used for updating system software.

⑥ Front HDMI input

Used for temporarily connecting an HDMI device such as a video camera.

POWER ON/OFF CONTROLS

Starting your system

 Press the power button on the remote or on the console.


In several seconds, the power LED on the console changes from blinking to solid green. The system is now ready for use.

SOURCE


Pressing the remote SOURCE button also starts your system and displays the SOURCE menu on your TV screen.

Setup Pressing the Setup button on the console also starts your system and displays the Setup menu on your TV screen.

Turning on your TV

 If you programmed your remote in the Unify™ setup menu, press the TV power button on the remote control to turn on your TV. Otherwise, use the remote that came with your TV.

Shutting down your system

 Press the power button on the remote or on the control console. The system will shut down automatically after a few seconds.

However, if you decide to access the power controls for connected devices, automatic shutdown will be stopped and you must complete the shutdown using the onscreen controls.

OPERATING YOUR CONNECTED DEVICES

Selecting a connected device

The SOURCE menu allows you to select your connected devices.

1. Press the remote SOURCE button to display a list of connected devices on your TV. The currently selected device is highlighted as shown in the following example:



2. Keep pressing SOURCE to move the highlight down the list and select the source you want.
 - You can also use the up (▲) or down (▼) navigation buttons to select a source.
 - If you named a device during the setup process, the assigned name appears in the list. Unnamed devices appear as generic inputs such as “Input 1 (HDMI)” and “Input 2 (HDMI).”
 - If you select a device that is not turned on, a message will appear on the screen reminding you to make sure the device is turned on.

The Unify™ intelligent integration system sets the the Lifestyle® remote to control each of your devices.

If one or more of these devices does not respond to the Lifestyle® remote, refer to “Troubleshooting” on page 21.

OPERATING YOUR CONNECTED DEVICES

Watching TV

Your TV may be receiving its program content through a set-top box or the tuner built into your TV.

Note: Since most TVs come with an IR (infrared) remote, you may need to point the Bose® remote at your TV to operate it.

Using a set-top box

If you connected a cable, satellite, or other set-top box to the LIFESTYLE® control console, it will appear in the SOURCE menu under the name you assigned it during the setup process.

1. Press the remote SOURCE button and select the device that provides your TV programs.
2. Tune to a station. See “Tuning to a TV station.”

Using the tuner in your TV

If you are using the tuner in your TV to receive TV programs:

1. Press the remote SOURCE button and select TV.
2. Press the TV Input button to select the internal tuner in your TV.
3. Tune to a station. See “Tuning to a TV station.”

To return to using other sources, use the TV Input button to first select the input for the Bose system, then press the SOURCE button and select another source.

Tuning to a TV station

You can tune to a TV station using any of the following methods:



Enter the channel number on the keypad and press OK. Use the dash button for channel numbers using a dash or period.



Press Channel Up (▲) or Down (▼) to change channels.

Press ↻ to tune to last selected channel.




















Press GUIDE. Use the navigation, page up/down, and OK buttons to select a station from the program guide.

Playing audio/video devices

During the interactive setup process you may have connected an audio/video device such as a CD, DVD, DVR, or Blu-ray Disc™ player. These would typically be connected to inputs 1-5.

If you programmed the Bose® remote for the device, you can use the following controls to operate the selected device.

	MENU	Display device menu (if available) or system setup menu
	GUIDE	Display Blu-ray pop-up menu
	INFO	Display device information
	EXIT	Exit menu
		Up one item
		Down one item
		Move left
		Move right
		Select
		Next page, channel, or disc
		Previous page, channel, or disc

 	Play
	Pause
	Stop
	Record
	Fast forward or search forward
	Fast rewind or search reverse
	Quick skip or skip forward
	Quick replay or skip backward
	Shuffle mode

Listening to a Bose link input device

You can use this LIFESTYLE® system to listen to content from a Bose link-compatible system, such as another LIFESTYLE® system. Connect that system to the Bose link IN connector on the rear panel of the control console.

To listen to the Bose link source, press the SOURCE button and select Bose link.

Be sure to connect your Bose link device before attempting to select it. It will not appear in the SOURCE list until it is connected.


OPERATING YOUR CONNECTED DEVICES

Playing an iPod or iPhone mobile digital device (on 235, V35, and V25 systems only)

Your LIFESTYLE® system can play audio and video from your iPod or iPhone.

Be sure to dock your iPod or iPhone before attempting to select it. It will not appear in the SOURCE list until you dock it.

Your iPod or iPhone menus and content appear on the left side of your screen as shown in the following example. The “Now Playing” track appears on the right.

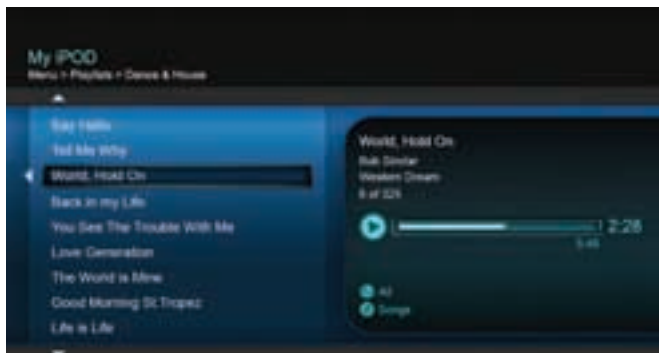

Note: For a list of compatible iPod and iPhone models, refer to page iv.

The following controls are available to operate your connected iPod or iPhone.

	Up one menu level
MENU	<ul style="list-style-type: none"> • Press and hold to go to top menu level. • For video, pause and return to menu.
	Up one page
	Down one page
	<ul style="list-style-type: none"> ▲ Up one menu item • Press and hold to scroll quickly.
	<ul style="list-style-type: none"> ▼ Down one menu item • Press and hold to scroll quickly.
	<ul style="list-style-type: none"> ▲ Up one menu level • For video, pause and return to menu.
	Down one menu level
	Down one menu level
	Play
	Pause
	Stop
	<ul style="list-style-type: none"> ▶ Next track or audio bookmark • Press and hold for next Playlist.
	<ul style="list-style-type: none"> ◀ Previous track or audio bookmark • Press and hold for previous Playlist.
	Fast forward
	Fast rewind
	Shuffle on/off


Using the front console inputs

The front of the console provides analog A/V inputs plus a USB and an HDMI® input. These inputs appear in the SOURCE menu as A/V (Front), USB, and HDMI (Front) only when a device is connected. These inputs are provided for temporarily connecting devices such as digital cameras and video cameras.

Front USB input

Your LIFESTYLE® system can display photo files (.jpg or .jpeg format only) from a USB storage device.

When selecting the USB source, folders appear at the top of the list on the left followed by single image files. Selecting a folder displays its contents.

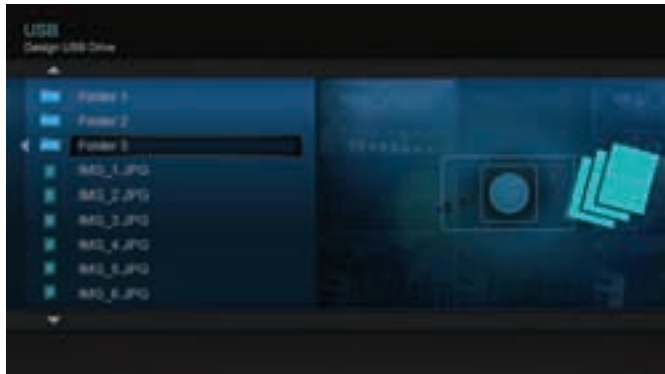

Use the following controls for viewing digital photos.

- ▲ Up one menu item
 - Press and hold to repeat.

- ▼ Down one menu item
 - Press and hold to repeat.

- ◀ Up one folder level
 - For a slideshow, exit and return to browsing folders

- ▶ Up one folder level
 - For a slideshow, exit and return to browsing folders



- ▶ Down one folder level

- OK
 - Down one folder level (if a folder is highlighted)
 - Play slideshow (if a photo file is highlighted)

- △ Up nine items

- ▽ Down nine items

- EXIT Exit slideshow and return to browsing folders

- ▶ Play slideshow of highlighted folder



- || Pause slideshow

- Exit slideshow and return to browsing folders

- ▶ Next image

- ◀ Previous image

OPERATING YOUR CONNECTED DEVICES

Front Analog A/V input

You can use this input for devices that have composite video and left/right audio outputs. The Bose® remote does not control a device connected to this input. You need to use the controls on the device itself or the remote that came with it.

Front HDMI® input

You can use this input for devices that have an HDMI output. The Bose remote does not control a device connected to this input. You need to use the controls on the device itself or the remote that came with it.

Changing the image view



Press the image view button to display a menu of video formatting choices. Continue to press this button to highlight your choice.

Your TV picture will change momentarily after you select a format.



Normal

Leaves original video image unchanged.



Auto-Wide

Fills width of the screen without cropping any content.



Stretch 1

Stretches video image evenly from the center.



Stretch 2

Stretches the edges of the video image much more than the center portion of the image.



Zoom

Enlarges the video image (press the up/down navigation buttons to vertically offset the image on your screen).



Gray Bars

Places vertical gray bars on the left and right of a standard-definition video image.

LISTENING TO THE RADIO (ON 235, V25, AND V35 SYSTEMS ONLY)

Selecting the radio

1. Press the SOURCE button.
2. Keep pressing the SOURCE button to select FM or AM in the SOURCE list.

Tuning to a station



- Press ► (increase) or ◄ (decrease) to tune up or down the frequency band.

 
OR

- Press ►► (seek next) or ◄◄ (seek previous) to find the next/previous strong station.

Storing a preset station

The built-in radio tuner can store up to 25 FM and 25 AM preset stations.

1. Tune to a radio station.
2. For presets 1-9, press and hold the number key. For 10-25, press and hold the OK button to store the station in the next available preset.



Recalling a preset station

To recall your stored presets:



- Press the channel up ▲ or down ▼ button to go to the next or previous preset.



- For quick access to presets 1-9, press the number key of the preset.

Deleting a preset station

1. Recall the preset station you want to delete.
2. Press and hold the OK button until the preset number disappears from the display.

Optional radio tuner settings

1. Press the MORE button and select OPTIONS.
2. Select an option to change from the menu (see "OPTIONS menu" on page 16 for details):
 - Current Station: Allow Stereo, Stereo Off
 - RDS: On, Off

MORE BUTTONS AND SYSTEM OPTIONS

MORE buttons



Press the MORE button to display additional button functions along the top of your TV screen for the current source. The functions that appear depend on the selected source. The following example shows how these buttons appear on your TV.



Activating a MORE button function

1. Press the remote MORE button.
2. Using the left (◀) and right (▶) navigation buttons, highlight the button function you want to activate.
3. Press the remote OK button.

Button function definitions



Turns the device power on/off.



 
Displays a list of favorite channels.



Enables or disables Teletext functions.



Enables or disables Internet functions.



Access Red, Green, Yellow, or Blue functions on Blu-ray Disc™ players, set-top boxes, and Teletext.



Displays the program guide for previous or next day.



Displays the playlist of recorded programs.



Activates picture-in-picture mode.



Accesses video-on-demand.



Switches your TV to live programming.



Switches between main features (from DVD to VCR, for example) on a combo device.



Moves to the “Home” state of the device.



Selects a repeat option on the current source.



Switches tuners on a multi-tuner device.








Switches between TV and radio on a set-top box that provides both.



Access device menus.



Access A, B, C, or D functions in an interactive program guide.


	Accesses Xbox functions.
	Accesses data broadcast on a tuner device (Japan only).
	Accesses PlayStation functions.
	Selects different types of video broadcast (EU only).
	See the following on “Changing system options.”

Changing system options

The number of items appearing in the OPTIONS menu depends on which source is currently selected.

1. Press the remote MORE button.
2. Using the left/right (◀ ▶) navigation buttons, highlight OPTIONS.

3. Press the remote OK button to display the OPTIONS menu for the current source.
The following is an example for a video device.

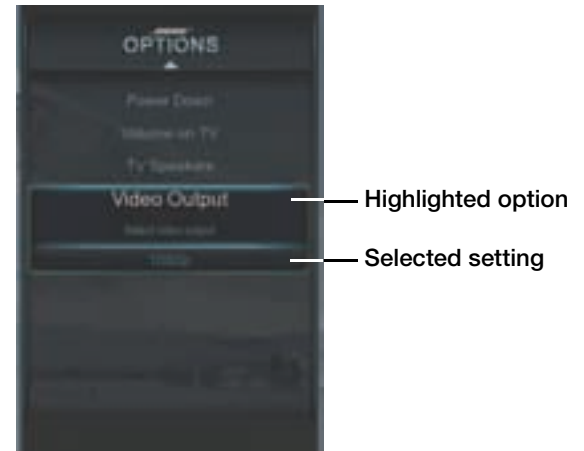

4. Using the up/down (▲▼) navigation buttons, highlight the option you want to change.
5. Using the left/right (◀▶) navigation buttons, select the setting.
6. Press the remote EXIT button when done.

MORE BUTTONS AND SYSTEM OPTIONS

OPTIONS menu

*indicates factory settings

Option	Available Settings
Sound <i>(Not available on a 235 system.)</i>	Original Plays stereo audio when stereo audio is received from the sound source. Recommended* Plays 5-channel audio whether or not 2- or 5-channel audio is received from the source. Alternative Plays 5-channel audio when either stereo or 5-channel audio is received from the source. Enhanced Mono Plays simulated surround sound when monaural audio is received from the source.
Current Station <i>(Not available on T20 or T10 systems.)</i>	Allow Stereo* Allows stereo sound from the current stereo FM radio station. Stereo Off Changes the current station to mono, which can help when tuning to a weak radio station.
RDS <i>(Not available on T20 or T10 systems.)</i>	On* Displays Radio Data System information (if it is available) on the remote. Off Does not display Radio Data System information on the remote.
Game Mode	On Produces improved video performance for game systems. Off* Provides normal video performance.
Audio Compression <i>(Not available for unnamed sources.)</i>	Enhance Dialog* Enhances sound output so you can hear movie dialogs more distinctly (only for source devices that have been named during the interactive setup process). Smart Volume Reduces the range of volume levels in a movie soundtrack so the difference between extremely loud outbursts and soft sounds is less noticeable. Off Makes no change to the source audio track.
Audio Track	Track 1* Selects track 1 from an external audio stream with multiple audio tracks. Track 2..... Selects track 2 from an external audio stream with multiple audio tracks. Both Tracks Selects tracks 1 and 2 from an external audio stream. Not Available Provides no options when only one track is received.
Volume Offset	Increases the volume level of the selected source relative to other sources (0* to 10).

Option	Available Settings
Source Overscan	OnApplies video overscan to the current video source. Off*Makes no change to the video source.
System Bass	Adjusts bass level. -9 to Normal* to +6 (After ADAPTiQ® calibration) -14 to Normal* to 14 (No ADAPTiQ calibration)
System Treble	Adjusts treble level. -9 to Normal* to +6 (after ADAPTiQ® calibration) -14 to Normal* to +14 (no ADAPTiQ calibration)
A/V Sync	Adjusts the audio delay to synchronize audio with the video. -2 to Normal* to +5
Rear Speakers <i>(Not available on the 235 system.)</i>	Adjusts the volume level of the rear speakers relative to the front speakers (-10 to Normal* to +6). This option is unavailable if the Speakers option is set to Stereo (2) or Front (3).
Center Speakers <i>(Not available on the 235 system.)</i>	Adjusts the volume level of the front center speakers relative to other speakers (-8 to Normal* to +8). This option is unavailable if the Speakers option is set to Stereo (2).
Speakers <i>(Not available on the 235 system.)</i>	Stereo (2)Activates only front left and right speakers. Front (3)Activates front left, right, and center speakers. Surround (5)Activates all front and rear speakers.
Volume on TV	On* Enables the system to display the volume level meter and mute indicator on your TV. Off Prevents the display of the volume level meter and mute indicator.
TV Speakers	On Sends HDMI® audio to your TV (audio from the TV is not affected by plugging headphones into the control console or by pressing Mute or Volume on the remote). Off* Sends HDMI audio to the LIFESTYLE® system speakers.
Video Output	Changes the resolution (Standard/720p/1080i/1080p) of the video signal sent to your TV (only settings supported by your TV appear as options.)

REVIEWING YOUR SETUP SELECTIONS

Adjusting the system setup

After performing the initial system setup using the Unify™ intelligent integration system, you can make additional changes to your system setup at any time.

Choices in the menu

To display the Unify menu on your TV, press the Setup button on the front of the control console. Using the navigation buttons on the remote, select the function you want and follow the instructions on the screen.

Menu item	What you can do
Resume initial setup (Note 1)	Return to the interactive setup process at the last completed event.
Restart initial setup (Note 1)	Start the interactive setup process from the beginning.
Language	Change the language of the on screen display.
ADAPTiQ®	Start the ADAPTiQ audio calibration process.
TV setup (Note 2)	<ul style="list-style-type: none"> • Program your remote to control your TV. • Replace your TV. • Add, change, or remove the TV audio connection.

Menu item	What you can do
Source setup (Notes 2 and 3)	<ul style="list-style-type: none"> • Change a device name. • Program your remote to control a device and add the IR emitter if needed. • Remove a device. • Add or change audio or video connections.
Add a device (Note 2)	Add another device or accessory to your system.
Homewide (Note 2) (Available only for 235, V35, and V25 systems.)	<ul style="list-style-type: none"> • Select the house code mode: Standard (16 house codes, 16 room codes) or Alternative (64 house codes, 4 room codes). • Change the room code. • For more information on Homewide expansion, see “Adding Sound to Another Room” on page 19.
Update	Perform a system software update (see “Performing a system software update” on page 23 for more information).
Teach mode (Note 2)	Send IR codes to program a learning remote.
Exit the Unify system	Returns you to the last source selected.

NOTES:

1. Appears only if initial setup is incomplete.
2. Appears only if initial setup is complete.
3. Appears for each source connected to the control console rear.

ADDING SOUND TO ANOTHER ROOM

Expanding your 235, V35, or V25 system (Not available on T20, T10 systems, or in Japan.)

Your LIFESTYLE® 235, V35 or V25 system can deliver Bose® quality sound in up to 14 additional rooms in your home. Connecting a Bose link-compatible product to the Bose link OUT connector on the control console enables you to listen to a different sound source in other rooms. For example, a DVD movie can be playing in the main room while you listen to the AM/FM radio in the other room.

For more information or to purchase additional products, contact your local Bose dealer.

Expansion guidelines

To set up a Bose link-compatible system in another room, follow the instructions included with the expansion product and be aware of the following:

- **Bose link connections** – Your system cannot operate with products connected to both the Bose link IN and Bose link OUT connectors.
- **Room codes** – The room code for the other speaker system and remote must match. See the owner's guide that came with the Bose link product for information on setting room codes.
- **House code** – The house code for the other remote and the control console must match. This enables the two systems to communicate.

Your system is set to house code 15 at the factory. To see the house code, select Homewide in the

Unify™ menu and select house code. On the screen, you will see the house code and a representation of how the second room remote control switches should be set to match the house code in the control console.

Your system has two house code modes. The Standard mode provides 16 house codes and 16 room codes. If you live in a multi-unit dwelling, you can select the Alternative mode that provides 64 house codes and 4 room codes.

Note: *Switching between Standard and Alternative house code modes resets the house code to zero (0).*


- **Audio connections for a second room** – To hear audio in another room from any device connected to HDMI® input 1, 2, or 3, you must also make an analog audio connection between the device and the left (L) and right (R) analog connections for that input. Likewise for any device with a digital audio connection to input 4 or 5 on the control console.
- **Radio operation** – Using an expansion room remote, you can select and control the radio that is built into the control console in the main room. However, if both rooms want to listen to the radio at the same time, they can only listen to the same station.

CARE AND MAINTENANCE

Replacing the batteries


Replace all four batteries when you notice a marked decrease in the range or response of your remote control, or when you see the low-battery indicator on the display.

Low-battery icon

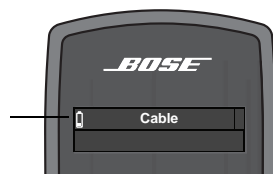

1. Slide the battery compartment cover off the back of the remote control.

AA (IEC-LR6) batteries (4)

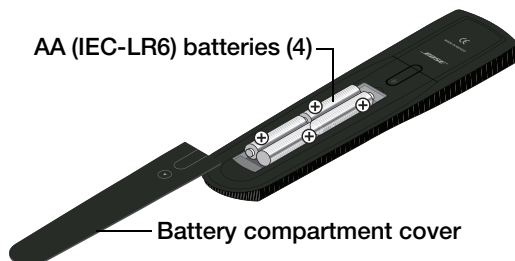

2. Remove the old batteries.
3. Install four new AA (IEC-LR6) 1.5V batteries, matching the polarity markings (+ and -) to the markings inside the battery compartment.
4. Slide the battery cover back into place.

Cleaning

You can wipe the outside surfaces using a soft, dry cloth. You can also lightly vacuum the speaker grilles.

- DO NOT use solvents, chemicals, or sprays.
- DO NOT allow liquids to spill or objects to drop into any openings.

Troubleshooting

Problem	What to do
The system is not responding to initial operation of my Bose® remote	<ul style="list-style-type: none"> • Make sure the control console is turned on. • Make sure batteries are in the remote. • Reset the system. See “Resetting the system” on page 23. • Press any remote key and watch the power light on the control console. It should blink with each press. If not, see “Pairing the remote with the console” on page 23 and follow the procedure.
The Bose remote does not control a device I added during the initial setup	<ul style="list-style-type: none"> • Try setting up the device again. Press the Setup button on the control console. Select the device setup and follow the onscreen instructions. • Use the manual option for setting up the device. Press the Setup button on the control console. Select the device options and follow the onscreen instructions for manual remote setup. • Your system may need a software update. See “Performing a system software update” on page 23.
One video connection is less than optimum	<ul style="list-style-type: none"> • To change a video connection, press the Setup button on the control console and select the device setup. Follow the onscreen instructions.
System doesn't do anything	<ul style="list-style-type: none"> • Make sure the AC power cord is inserted securely into the power supply and the power supply is firmly connected to the control console. • Make sure the Acoustimass® module and the power supply are fully plugged into a live AC (mains) outlet. • Press the remote SOURCE button and select a connected device from the SOURCE menu. • Reset the system. See “Resetting the system” on page 23.
No sound	<ul style="list-style-type: none"> • Make sure the Acoustimass module is plugged into a live AC (mains) outlet. • Make sure that the audio input cable is firmly plugged into the Acoustimass connector on the control console and the other end is firmly seated into the Media Center connector on the Acoustimass module. • Increase the volume. • Press the Mute button (🔇) and make sure your system is not muted. • Check the input connections on the control console. Make sure that you have selected the right source. • Check connections between the speakers and the Acoustimass module. • For radio operation, connect the FM and AM antennas. • Reset the system. See “Resetting the system” on page 23.

CARE AND MAINTENANCE

Problem	What to do
Sound is marred by a loud hum or buzz, which may be electrical in nature (not harmonic)	<ul style="list-style-type: none"> • Contact Bose® Customer Service to determine if and how other electrical devices in the room may be creating unwanted signals, and to obtain possible remedies.
Radio does not work (Not available on T20 and T10 systems.)	<ul style="list-style-type: none"> • Make sure antennas are connected properly. • Move AM antenna at least 20 inches (50 cm) from the control console and Acoustimass® module. • Adjust antenna position to improve reception. • Make sure the AM antenna is in an upright position. • Move antennas farther from control console, TV, or other electronic equipment. • Select another station. You may be in an area of weak signal coverage for some stations.
FM sound is distorted (Not available on T20 and T10 systems.)	<ul style="list-style-type: none"> • Adjust antenna position to reduce interference. • Fully extend the FM antenna.
Sound is distorted	<ul style="list-style-type: none"> • Make sure speaker cables are not damaged and the connections are secure. • Reduce the volume output level from any external devices connected to the control console.
No sound from a connected device	<ul style="list-style-type: none"> • Check the connections. • Make sure that device is turned on. • Refer to the owner's manual that came with the device.
No TV picture, but audio is heard	<ul style="list-style-type: none"> • Check the TV video input selection. Make sure it is correct for the video source. • Make sure video cables are securely connected.
A connected device does not respond consistently to remote commands	<ul style="list-style-type: none"> • Try connecting the included external IR emitter to the control console. For guidance, press the Setup button on the control console. Select the device setup and follow the onscreen instructions for setting up the remote.
Intermittent audio dropouts heard on coaxial digital audio inputs	<ul style="list-style-type: none"> • Contact Bose Customer Service to request a composite video cable that can be used for the coaxial digital audio connection.

Resetting the system

1. Press and hold the power button on the control console for 5 seconds or until the power light on the control console changes to red.
The power light on the control console changes to red when the system shuts down.
2. Press and release the power button on the control console to restart the system. The power light changes to blinking green and then solid green when the system is on and ready to use.
3. If you still cannot operate the system using the remote, try the next procedure to pair the remote with the control console.

Pairing the remote with the console

1. Make sure your system is on. If not, press the power button on the control console.
2. Hold the remote close to the control console.
3. Press and hold both the Mute button (🔇) on the control console and the OK button on the remote at the same time for five seconds. The power light blinks when pairing is complete.
4. Press any remote button and verify that the power light on the control console blinks with each button press.

Performing a system software update

System software updates are available periodically and can be downloaded over the Internet to the USB drive included with your system.

1. Press the Setup button on the front of the control console to display the Setup menu.
2. Using the remote navigation buttons, select Update.
3. Follow the instructions on the screen.

Note: To make sure your Bose® remote is updated, hold the remote near the front of the control console while it is being updated.

Contacting customer service

For additional help in solving problems, contact Bose Customer Service. See the address sheet included in the carton.

CARE AND MAINTENANCE

Limited Warranty

Your LIFESTYLE® home entertainment system is covered by a limited warranty. Details of the limited warranty are provided on the product registration card that is included in the carton. Please refer to the card for instructions on how to register. Failure to register will not affect your limited warranty rights.

What you must do to obtain Limited Warranty Service:

Return product, with proof of purchase from an authorized Bose dealer, using the following procedures:

1. Contact the Bose organization in your country/region (visit **Global.Bose.com/register** for Bose contact information in your country/region) for specific return and shipping instructions;
2. Label and ship the product, freight prepaid, to the address provided by the Bose organization in your country; and
3. Place any necessary return authorization number prominently on the outside of the carton. Cartons not bearing a return authorization number, where required, will be refused.

Technical information

Remote control

Frequency: 2.4 GHz
Range: 33 ft (10 m)

Control console power supply rating

AC input: 100-240V~ 50/60 Hz, 0.5A
DC output: 12V --- 20W Max.

Acoustimass® module rating

USA/Canada: 100-120V~ 50/60 Hz 350W
International: 220-240V~ 50/60 Hz 350W
Dual voltage: 100-120/220-240V~ 50/60 Hz 350W

Licensing information

This product contains one or more free or open source software programs originating from third parties and distributed as part of the STLinux software package. Visit www.stlinux.com/download for further details. This free and open source software is subject to the terms of the GNU General Public License, GNU Library/Lesser General Public License, or other different and/or additional copyright licenses, notices and disclaimers. To understand your rights under these licenses, please refer to the specific terms of the licenses, notices, and disclaimers, which are provided to you in an electronic file, named "licenses.pdf," located within the product's control console. To read this file, you will need a computer with a USB port and a software program that can view .pdf files. To download "licenses.pdf" from your product's control console:

1. Press and hold the Setup button on the front of the control console to display the System Information screen.
2. Insert a USB drive (there should be one included in your system package) into the USB input on the front of the control console.
3. Press the OK button on the remote control to copy the file to the USB drive. This download process should be completed within 30 seconds. You may then remove the USB drive.
4. To read the file "licenses.pdf," plug the USB drive into a computer with a USB port, navigate to the USB root directory, and open "licenses.pdf" with a software program that can view .pdf files.

To receive a copy of the source code for the open source software programs included in this product, please mail your written request to: Licensing Manager, Mailstop 6A2, Bose Corporation, The Mountain, Framingham, MA 01701-9168. Bose Corporation will distribute such source code to you on a disc for a charge covering the cost of performing such distribution, such as the cost of media, shipping and handling. All of the above referenced licenses, notices and disclaimers are reproduced and available with such source code. This offer is valid for a period of three (3) years following the date of distribution of this product by Bose Corporation.



328341-0010



BOSE[®]
Better sound through research[®]

©2010 Bose Corporation, The Mountain,
Framingham, MA 01701-9168 USA
AM328341 Rev.00

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>