

Breville

Breville is a registered trademark of Breville Pty. Ltd.
ABN 98 000 092 928

Breville Customer Service Centre

Australian Customers

✉ Breville Customer Service Centre
Locked Bag 2000
Botany NSW 2019
AUSTRALIA

☎ Customer Service: 1300 139 798

Fax (02) 9384 9601

Email Customer Service askus@breville.com.au

New Zealand Customers

✉ Breville Customer Service Centre
Private Bag 94411
Greenmount
AUCKLAND, NEW ZEALAND

☎ Customer Service: 09 271 3980

Fax 0800 288 513

Email Customer Service askus@breville.com.au

www.breville.com.au



© Copyright. Breville Pty. Ltd. 2003

Due to continual improvements in design or otherwise,
the product you purchase may differ slightly from
the one illustrated in this booklet.



PRINTED ON
RECYCLED PAPER

Model BT320/905
Issue 1/03

Breville

Freestyle

Toaster



INSTRUCTIONS FOR USE


CONTENTS

	Page
Breville Recommends Safety First	4
Know your Breville Toaster	5
Operating your Breville Toaster	6
Care and Cleaning	7

Freestyle Toaster

Congratulations

on your purchase of a new Breville Freestyle Toaster

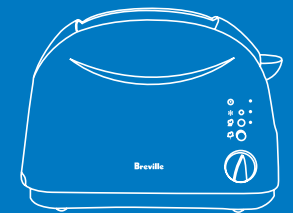

BREVILLE RECOMMENDS SAFETY FIRST

We at Breville are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer foremost in mind. In addition we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.

READ ALL INSTRUCTIONS BEFORE OPERATING AND SAVE FOR FUTURE REFERENCE

- This toaster should not be used near or below curtains or other combustible material and it should be supervised at all times when in use.
- Do not immerse appliance or cord in water or any other liquid.
- The appliance is not intended for use by young children or infirm persons without supervision.
- Do not leave the appliance unattended when in use. Young children should be supervised to ensure that they do not play with the appliance.
- Always use the appliance on a dry, level surface.
- Do not let the cord hang over the edge of a table or counter, become knotted or touch hot surfaces.
- Care must be taken not to touch any hot surfaces, do not store or cover the appliance until the unit has fully cooled down.
- Always switch the power off at the outlet and then remove the plug before attempting to move the appliance, when the appliance is not being used and before cleaning.
- Regularly inspect the supply cord, plug and actual appliance for any damage. If found damaged in any way, immediately cease use of the appliance and return the entire appliance to the nearest authorised Breville service centre for examination, replacement or repair.
- Ensure that bread to be toasted is the correct size for the toaster and does not protrude above the bread slice opening and is not too thick or long that it will jam or wedge the bread carriage.



NOTE!!

This Breville toaster is electronically controlled and will not lock down into the toast position until the toaster is plugged into a 230/240 volt power point and switched on.



NEVER OPERATE TOASTER ON ITS SIDE AND NEVER ADD ANY FOOD SUBSTANCE TO THE BREAD OR MUFFINS AS THIS CAN LEAD TO ELECTROCUTION OR FIRE.

KNOW YOUR BREVILLE TOASTER

2 slice electronic toaster with cool touch exterior (BT320)

Electronic browning control delivers consistent toasting results


Extra wide self-centring toasting slots adjust automatically to toast thick or thin bread

Electronic cancel, reheat and frozen bread settings

4 slice electronic toaster with cool touch exterior (BT905)

Toasting light

High lift lever raises muffins higher for safer removal

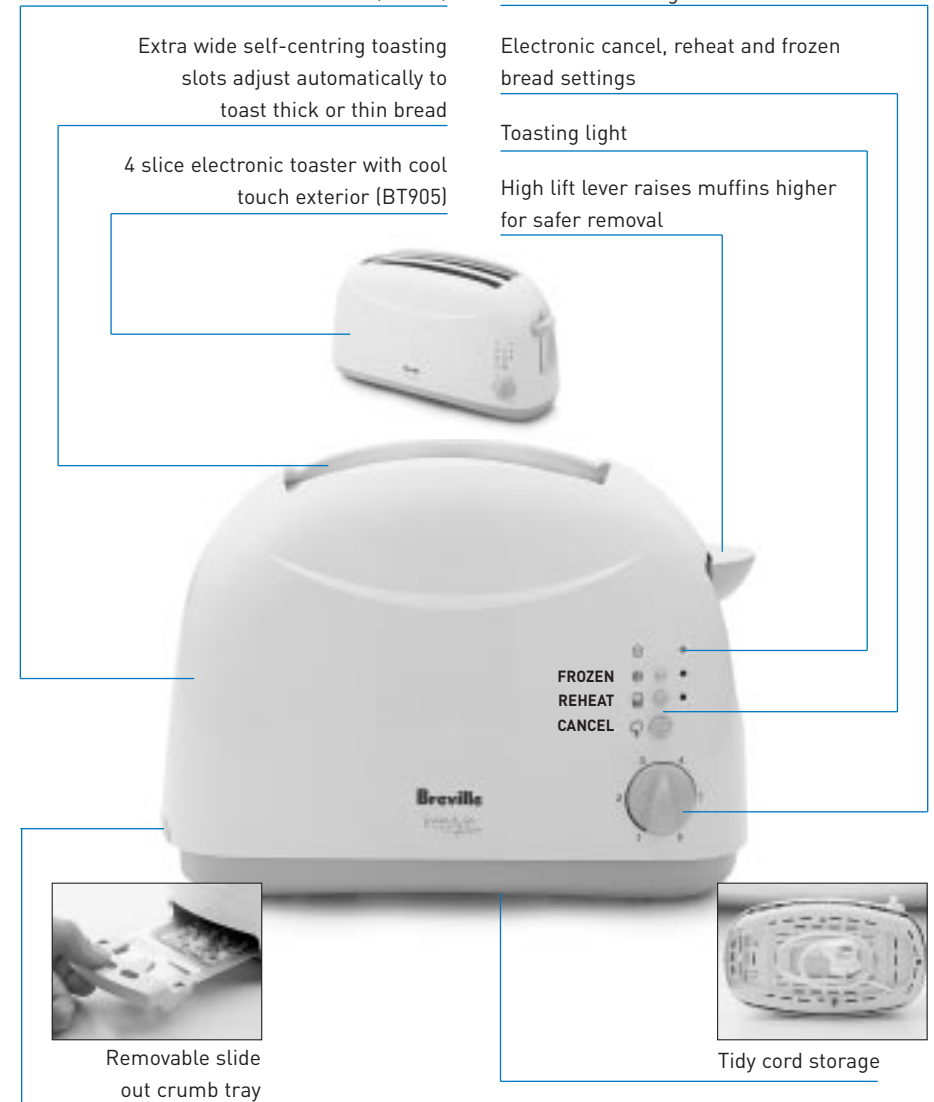

Removable slide out crumb tray



Tidy cord storage

OPERATING YOUR BREVILLE TOASTER

1. Insert the power plug into a 230/240 volt power outlet and then turn the power on.
2. Place bread, muffins or crumpets into the bread slots.
3. Select the desired browning setting on the browning control knob. (No.1 - lightest, No.6 - darkest).

When using the toaster for the first time, we suggest you toast on setting No.3.

Varying types of bread and personal preference may require a different browning setting, eg. raisin toast and white light-textured breads may require a lower setting, whilst heavier textured rye breads may require a darker setting.

4. Press the high lift lever down until it clicks into place. Toasting cycle will automatically commence.
5. The toaster turns off when the desired toast colour is achieved and automatically raises the toast. The toasting process can be stopped at any time by pressing the CANCEL button.

HIGH LIFT

To remove smaller items such as muffins, lift the high lift lever approximately 20mm above the starting position.

In the unlikely event that the bread or muffin becomes jammed, switch the power off at the power outlet. Remove the power plug from the power outlet and then carefully ease the bread out of the toaster, ensuring that you do not damage the element.

TOASTING FROZEN BREAD

To toast frozen bread, place the bread into the toasting slots, select the desired Browning Setting, lower the high lift lever until it clicks into place then press the Frozen Button.



REHEATING TOAST

This function allows you to reheat toast without additional toasting. To reheat, place toast into toasting slots, lower the high lift lever until it clicks into place and press the Reheat Button.

CARE AND CLEANING

The crumb tray should be cleaned regularly. Do not allow breadcrumbs to accumulate in the bottom of the toaster.

1. Always switch the power off at the outlet and then remove the plug before cleaning your toaster.
2. To remove any crumbs from the toaster, slide out the crumb tray from under the toaster, empty and replace it in the toaster before using again.

3. Wipe the outside of the toaster with a slightly dampened cloth and polish with a soft dry cloth.
4. To clean the interior, turn the toaster upside down over the sink and shake crumbs free.



NOTE!!

If the toaster is not plugged in and switched on at the power outlet the high lift lever will not click into place.



NEVER ATTEMPT TO EXTRACT JAMMED TOAST, MUFFINS OR ANY OTHER ITEM WITH A KNIFE OR ANY OTHER OBJECT, AS CONTACT WITH LIVE ELEMENTS MAY NOT ONLY DAMAGE THE ELEMENT, BUT CAUSE ELECTROCUTION.



DO NOT USE THE TOASTER WITHOUT THE SLIDE OUT CRUMB TRAY IN PLACE.



DO NOT ALLOW CRUMBS TO BUILD UP IN THE CRUMB TRAY. CRUMB TRAY SHOULD BE CLEANED REGULARLY.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>