



# System Remote Control SR-250 User Guide

## Introduction

Before you start to use the Control4® SR-250 (models C4-SR250-Z-B and C4-SR250B-Z-B), ensure that the devices in your Control4 system are added and configured. **Note:** The SR-250B runs on OS 2.0 and later.

## Uses and Features

The System Remote Control SR-250 (or SR-250) is intended to be used with a Control4 system. Use this guide along with the *Control4 System Quick Start Guide* and *Control4 System User Guide* online help for best results. These are located in [my.control4.com](http://my.control4.com).

Use the System Remote Control to:

- Navigate system menus and access media on a TV monitor using the On-Screen Navigator.
- Navigate system menus and access media using the System Remote Control's List Navigator.

This System Remote Control extends the capabilities of a 'universal' remote that simply learns the IR codes from TVs, VCRs, and CD/DVD players.

Features:

- Bi-directional communication with system components.
- Backlit display that converts the Control4 Navigator into a text format.
- 47 buttons total: 2 for quick access, 4 programmable, 8 transport control, plus alphanumeric keys.
- ZigBee wireless.
- Wake up when picked up or moved.

## Battery Maintenance

Refer to the System Remote Control SR-250 Setup Guide for instructions about how to install and maintain the batteries.

This device requires four (4) AAA batteries.

For battery safety information, see the *System Remote Control SR-250 Setup Guide*.

## System Remote Control (SR-250) Buttons

The list below show the buttons to use with your Control4 system.

**Room Off:** Turns off the devices in the room.

**Room and List Navigator:** Lists room, options, current time.

**List:** Displays system list in window. Use with arrow and Select buttons.

**Ambient Light Sensor:** Enables backlight on buttons when the room is dim.

**Watch/Listen:** Watch movies, TV. Listen to the radio, CDs, etc.

**4:** Press to turn on TV and the On-Screen Navigator.

**Programmable Buttons:** Have your Installer program these buttons for shortcuts. See "Programmable Buttons" below to identify and write down the functions.

**Guide:** Displays the channel guide (program lists) for the device's channels On-Screen. Also used to toggle List or Grid views.

**Prev:** Goes to the previous screen.

**PG Up/PG Dn:** Pages up or down for the device's menus.

**Vol +/ Vol -:** Increase or decrease the volume.

**Left/Right, Up/Down Arrows:** Moves through the List Navigator or On-Screen.

**Select:** Selects an option on the On-Screen or List Navigator.

**Ch +/ Ch -:** Move up or down channels.

**MUTE:** Mutes the audio.

**INFO:** Displays current channel/program info for the device.

**MENU:** Displays the menu for devices.

**CNCL:** Cancel last action for the device.

**Play:** Plays a movie or video.

**Skip Forward/Skip Back:** Skips through a movie or video.

**Pause:** Pauses the movie or video. Press Play to start.

**Fast Forward/Rewind:** Advances or rewinds the movie or video.

**DVR:** Plays the DVR (digital video recorder) or device.

**Stop:** Stops the movie or video. Press Play to start.

**Record:** Activates the current device's record function.

**Alphanumeric Keypad:** Use to type letters or numbers if you have an on-screen keyboard, or to change channels, set light levels, or enter text.



## Programmable Buttons

If your Installer programs the colored buttons, note here what they represent:

- Red: \_\_\_\_\_
- Green: \_\_\_\_\_
- Yellow: \_\_\_\_\_
- Blue: \_\_\_\_\_

---

## Quick Access Buttons

Use the Quick Access buttons (Watch and Listen) on the SR-250 to watch the TV or movies or listen to music by List or the last three (3) devices used. Can be configured by your Dealer.

---

## SR-250 and the On-Screen Navigator

To control devices from the SR-250 using the On-Screen Navigator:

1. On the SR-250, press the red **4** button to access the TV's On-Screen Navigator.
2. To navigate through the On-Screen Navigator and the Control4 system, press the **arrow** buttons, and then press the **Select** button to make your selection.
3. See the *Control4 System Quick Start Guide* and the *Control4 System User Guide* to learn how to navigate through the system and discover all of the cool features of the Navigators.

---

## SR-250 List Navigator

To control devices from the SR-250 OLED window:

1. On the SR-250, press the **List** button to access the SR-250's List Navigator. House, Lights, Music, Videos, and other options appear.
2. To navigate through the List Navigator and the Control4 system, press the **arrow** buttons to scroll through the list.
3. Keep pressing the arrow buttons until you get to your desired location.
4. Press the **Select** button to make your selection.
5. See the *Control4 System Quick Start Guide* and the *Control4 System User Guide* online help to learn how to navigate through the system and discover all of the cool features of the Navigator.

---

## Preferences

To set the preferences:

1. Press the **List** button on the System Remote Control.
2. Use the **arrow** keys to scroll down the list. Press **Select** to select Info. Scroll down to Config, and then press **Select** to set the LCD display preferences or to view the battery level:
  - **Display Brightness** (SR-250)—Use the Right or Left arrow keys to move the slider bar to brighten or dim display.
  - **Keypad Brightness** (SR-250)—Use the Right or Left arrow keys to move the slider bar to brighten or dim the keypad display.
  - **Motion Detect** (SR-250)—Use the **Up** or **Down** arrow buttons for Off (High, Medium, and Low intensity). Press **Select**.
  - **Battery Level** (SR-250)—View the battery level in percent.
  - **About**—Lists the software version, date and time.
  - **Set Contrast**—Use the arrow buttons to move slider bar to increase or decrease contrast. Press **Select**.
  - **Language (OS 2.0 and later)**— Use the **Up** or **Down** arrow buttons to locate the language. Press **Select**.

---

## About this Document

©2010 Control4. All rights reserved. Control4, the Control4 logo and InfinityEdge are registered trademarks or trademarks of Control4 Corporation in the United States and/or other countries. All other names or brands may be claimed as property by their respective owners. Pricing and specifications subject to change without notice. Part Number: 200-00152 Rev A, 8/23/2010

---

**Disclaimer** Control4 makes no representations or warranties with respect to this publication, and specifically disclaims any express or implied warranties of merchantability or fitness for any particular purpose. Control4 reserves the right to make changes to any and all parts of this publication at any time, without any obligation to notify any person or entity of such changes.

**Trademarks** Control4 and the Control4 logo are registered trademarks of Control4 Corporation. Other product and company names mentioned in this document may be the trademarks or registered trademarks of their respective owners.

**Copyright** © 2010 Control4. All rights reserved. Control4, Control4 logo and InfinityEdge are registered trademarks or trademarks of Control4 Corporation in the United States and/or other countries. All other brands or names may be claimed as property by their respective owners. Pricing and specifications subject to change without notice.

No part of this publication may be reproduced, photocopied, stored on a retrieval system, or transmitted without the express written consent of the publisher.

Contact Information  
Control4 Corporation  
11734 S. Election Road  
Salt Lake City, UT 84020 USA  
<http://www.control4.com>  
Part Number: 200-00152

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>