

CREATIVE®

User's Guide



PRODIKEYS™ PC-MIDI

User's Guide

Creative Prodikeys PC-MIDI

Information in this document is subject to change without notice and does not represent a commitment on the part of Creative Technology Ltd. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose without the written permission of Creative Technology Ltd. The software described in this document is furnished under a license agreement and may be used or copied only in accordance with the terms of the license agreement. It is against the law to copy the software on any other medium except as specifically allowed in the license agreement. The licensee may make one copy of the software for backup purposes.


The Software License Agreement is found in a separate folder on the installation CD.

Copyright © 1998-2005 Creative Technology Ltd. All rights reserved.

Version 1.0

August 2005

 The Creative logo, Sound Blaster, Blaster and Prodikeys are trademarks or registered trademarks of Creative Technology Ltd in the United States and/or other countries. Microsoft, MS-DOS, Windows and the Windows logo are registered trademarks of Microsoft Corporation. Intel and Pentium are registered trademarks of Intel Corporation. All rights reserved. All other products are trademarks or registered trademarks of their respective owners.

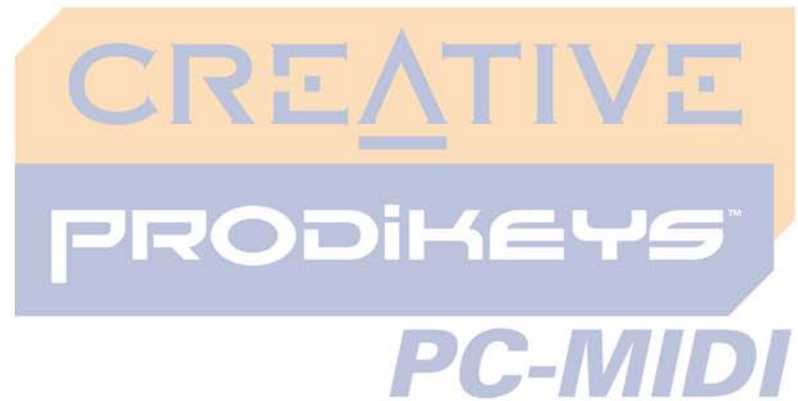

Creative Prodikeys PC-MIDI User's Guide

Creative Prodikeys PC-MIDI User's Guide

I Introduction

Minimum System Requirements	1-1
More Help	1-1
Getting More Information	1-2
Document Conventions	1-2

2 About Your Creative Prodikeys PC-MIDI

Parts of your Prodikeys PC-MIDI	2-1
Removing the Music Keyboard Cover	2-2
Maintaining Prodikeys PC-MIDI	2-2

3 Setting Up Your Creative Prodikeys PC-MIDI

Installing Hardware	3-1
Installing Software	3-2

4 Getting Started

Launching Prodikeys PC-MIDI applications	4-1
Product Tutorial	4-2
Mini Keyboard	4-3
FunMix	4-4
EasyNotes	4-5
HotKeys Manager	4-6

Appendixes

A General Specifications

Hardware Features	A-1
Software Features	A-1

B Troubleshooting

Problems installing Prodikeys PC-MIDI	B-1
---	-----

CREATIVE
PRODiKEYS™
PC-MIDI

1

Introduction

Introduction

Creative Prodikeys® PC-MIDI is a multi-functional keyboard that lets you do more with your computer.

Prodikeys PC-MIDI boasts the standard favorite keyboard features such as programmable hot keys*, Enhanced F-Keys**, media playback and volume control. It also has 37 music keys neatly tucked away under the palm rest, which acts as a support for your wrists when you are typing.

Prodikeys PC-MIDI comes with a suite of software that lets you customize the Music HotKeys and Button Hotkeys as well as explore music-making on your computer.

Minimum System Requirements

Your Prodikeys PC-MIDI requires at least:

- Genuine Intel® Pentium® III or AMD® Athlon processor
- Intel, AMD or 100%-Intel compatible motherboard chipset
- Microsoft® Windows® XP or Windows 2000
- Available USB port
- 128 MB RAM (256 RAM recommended)
- 360 MB of free hard disk space (for software installation)
- Audio device (Sound Blaster® audio card recommended)
- Speakers or headphones
- CD-ROM drive for software installation

More Help

Run the Product Tutorial to get started with your Prodikeys PC-MIDI and learn how to use the included applications for a fun-filled music-making experience on your computer.

You can also click the Help button on each application for more specific help about that application.

* Hot Keys enable one-touch access to programs and files you use most.

** Enhanced F-Keys allow you to perform common commands from your keyboard.

Getting More Information

Visit www.creative.com or www.prodikeys.com for the latest news and updates on your Prodikeys PC-MIDI. You can download additional content such as Mixes and Learnable Songs from the websites.

Document Conventions



Tip. This tells you about short cuts or hints relating to a feature.



 
Note. This highlights additional or important information about a feature.



Caution! This highlights proper usage of your product. Use this information to avoid risky situations.



Warning! This warns you of possible hazards to yourself or your product, that may result in injury or damage.

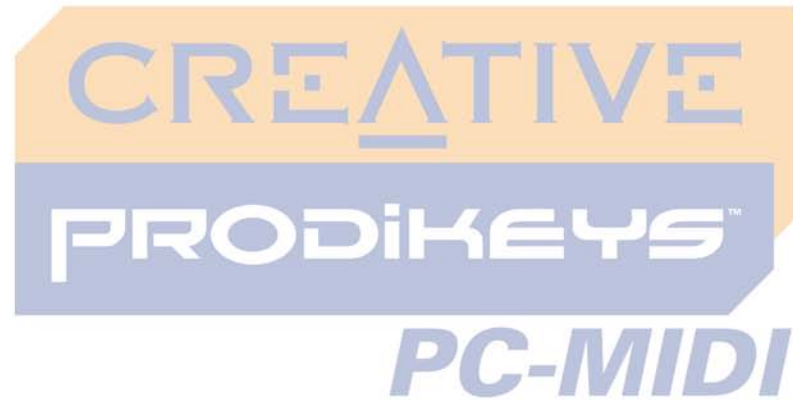

2

About Your Creative Prodikeys PC-MIDI

About Your Creative Prodikeys PC-MIDI

In this chapter, we will familiarize you with the different parts of your Prodikeys PC-MIDI, so that you can follow the instructions in the other chapters easily.

Parts of your Prodikeys PC-MIDI



- To program Music HotKeys and Button HotKeys, use the **HotKeys Manager** software in the Prodikeys PC-MIDI program group.
- When using MIDI applications, the Communications buttons act as Sustain and Octave Shift buttons.

Communications buttons
 Press to launch the default email application, Web browser or instant messaging application.

Sustain/Octave Shift (when using MIDI applications)
 Adds Sustain effect and extends the music key range for playing when used with MIDI music software.

Music button
 Press to activate the music keys and show the Prodikeys Launcher.

Volume Control wheel
 Use this to adjust or mute the volume.

Snap-on color faceplate

Music keyboard
 Play using the included applications or with third-party applications. The 37 keys are touch-sensitive — the harder you strike the keys, the louder the sound.

Organizer buttons
 Press to launch **Calculator, Calendar and Address Book.**

My Favorites buttons
 Press to launch **My Documents, My Pictures, or My Music** folders.

System buttons
 Press to lock your computer. Press to put your computer in Standby mode.

Media Playback buttons
 Press to control media playback directly.

Enhanced F-Keys
Enhanced F-Key Lock
 Press to enable or disable commonly used keyboard commands on F-Keys.

Standard QWERTY keyboard

Palm Rest
 Provides support for your wrists for typing comfortably.

Figure 2-1: Parts of your Prodikeys PC-MIDI

Removing the Music Keyboard Cover

The music keyboard on your Prodikeys PC-MIDI is protected by a cover that also acts as a palm rest when you type. To use the music keyboard, you need to remove the cover.

To remove the palm rest: Press down the upper corners of the cover and slide it out, as shown below.


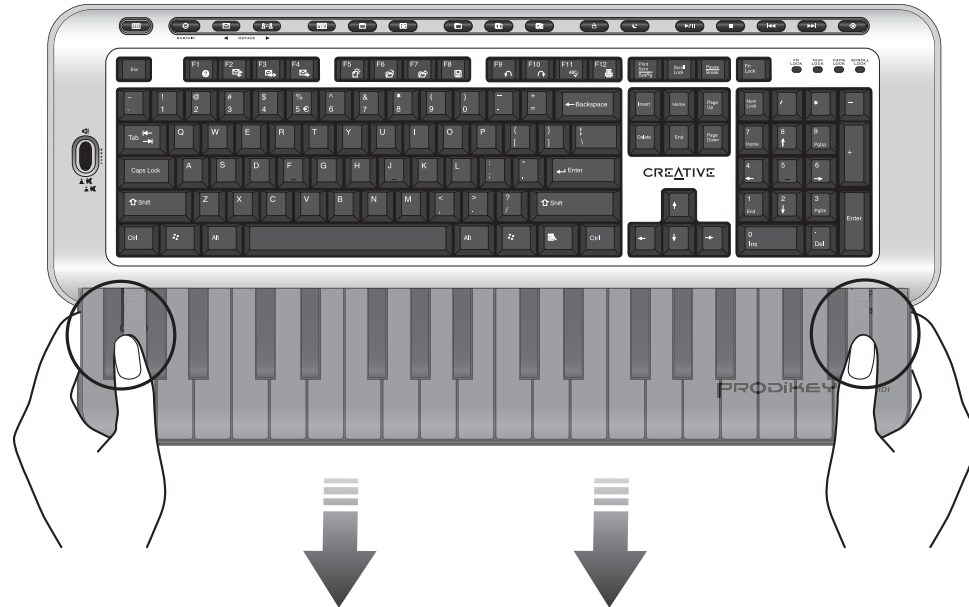 


Figure 2-2: Removing the palm rest.

Maintaining Prodikeys PC-MIDI

 To clean your Prodikeys PC-MIDI, use a soft, damp cloth to clean the exterior. Do not use any liquid or aerosol cleaners, as these may damage your keyboard.

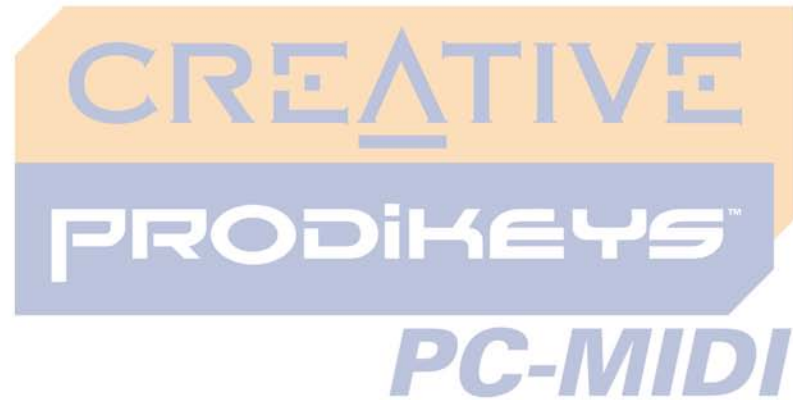

3

Setting Up Your Creative Prodikeys PC-MIDI

Setting Up Your Creative Prodikeys PC-MIDI

Installing Hardware



If you have an existing Prodikeys series software installed on your computer, you must first uninstall this software, turn off your computer, and disconnect any Prodikeys series hardware from your computer. For more information, see "Problems installing Prodikeys PC-MIDI" on page B-1.

1. Before setting up your Prodikeys PC-MIDI, turn off your computer and disconnect your existing keyboard.
2. Connect your Prodikeys PC-MIDI to your computer's USB port (see Figure 3-1).
3. Turn on your computer.

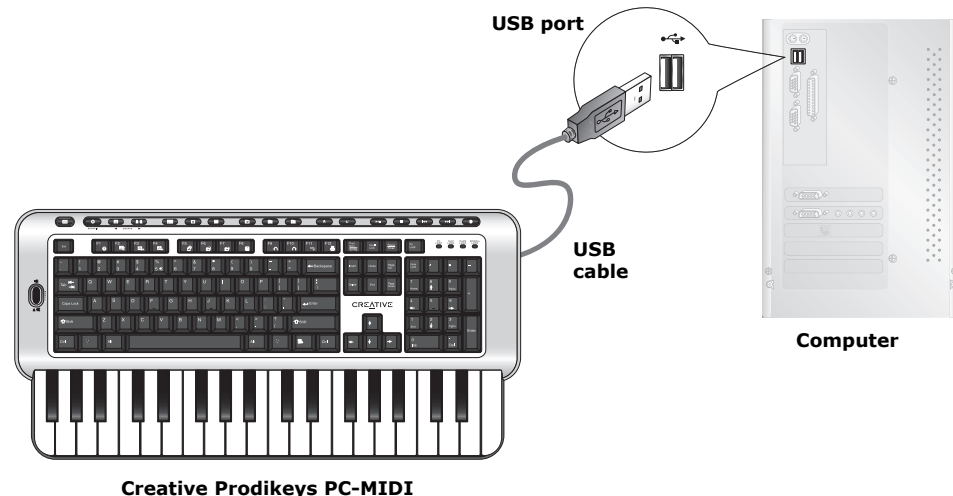 


Figure 3-1: Connecting Prodikeys PC-MIDI to your computer's USB port.

Installing Software



You have to install the included drivers for your Prodikeys PC-MIDI to function as a music keyboard. Third-party MIDI software can also be used.

1. Insert the Creative Prodikeys PC-MIDI software Installation CD into your CD-ROM drive. Your CD should start automatically. If it does not, follow the steps below:
 - i. Double-click the **My Computer** icon.
Alternatively, click **Start** → **My Computer**.
 - ii. Right-click the **CD-ROM/DVD-ROM drive** icon, and then click **AutoPlay**.
2. Follow the instructions on the screen to complete the installation.
3. Restart the computer when prompted to do so.

CREATIVE
PRODiKEYS™
PC-MIDI

4

Getting Started

Getting Started

Launching Prodikeys PC-MIDI applications

Your Prodikeys PC-MIDI comes with applications that enable you to learn how to play music or create fun mixes. You can launch the included applications using Prodikeys Launcher.

 


Figure 4-1: Prodikeys PC-MIDI.


1. Press the **Music**  button on your Prodikeys PC-MIDI keyboard, or go to **Start → Programs → Creative → Creative Prodikeys PC-MIDI**. Prodikeys Launcher appears.



Figure 4-2: Prodikeys Launcher


2. Select a program to launch. Double-click an application icon. Refer to the following sections to find out what each application does.

Product Tutorial

The Product Tutorial is an interactive demo to show you what you can do with your Prodikeys PC-MIDI keyboard and the included applications.

Mini Keyboard



For more help on individual applications, click the **Help**  button in the application you would like help on.

Creative Mini Keyboard gives you access to an extensive collection of instruments to experiment and play with. You can play anything from the accordion to the xylophone, and have hours of creative fun!

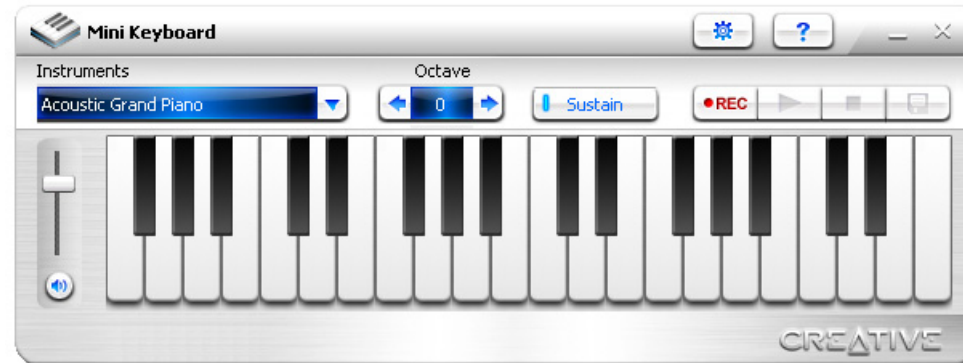 


Figure 4-3: Creative Mini Keyboard

FunMix

Creative FunMix comes with a library of pre-arranged mixes, in various genres, assigned to music keys. You can experiment with the instrumental loops and effects and record your own music easily.

To create your own mix, select a pre-arranged mix from the menu, then press and hold combinations of different keys.

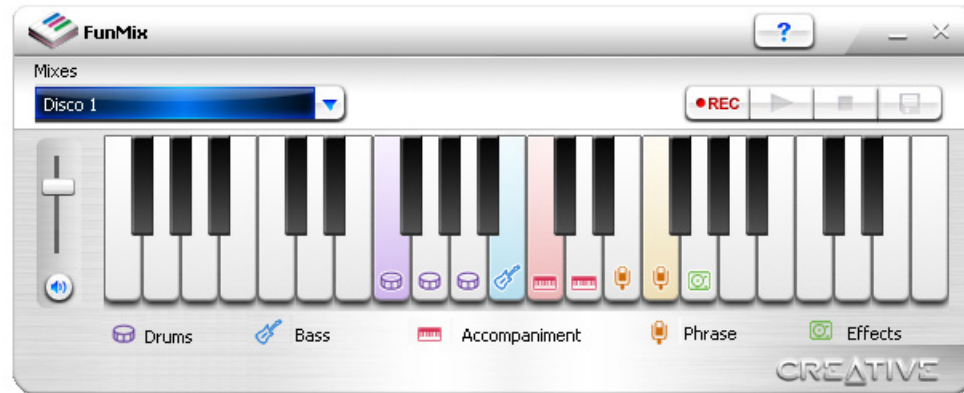 


Figure 4-4: Creative FunMix

EasyNotes

Creative EasyNotes lets you learn to play any song at your own pace. To start a lesson, select a song and lesson from the menus, and then press the SPACEBAR.

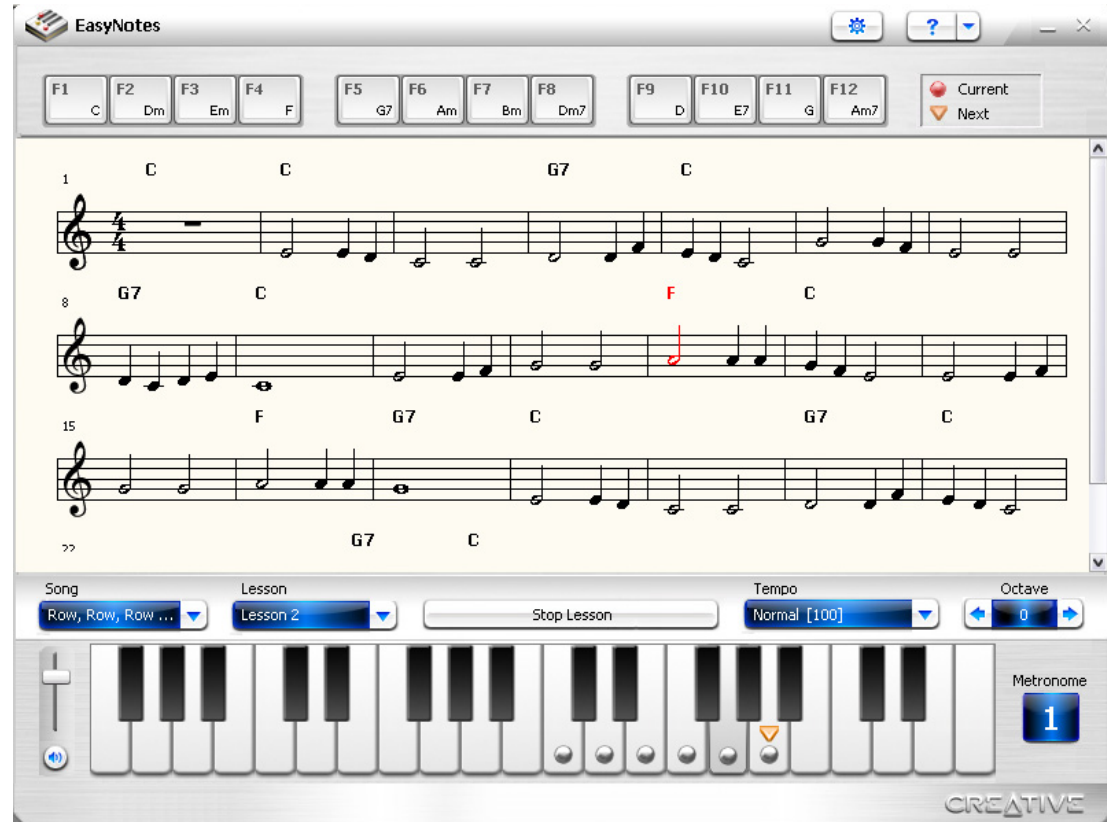 


Figure 4-5: Creative EasyNotes

HotKeys Manager

HotKeys Manager lets you customize the different hot keys on your keyboard. Select a button and assign your favorite application, website or keystroke to it. You can also customize the music keys as hot keys when you are not using them to play music.

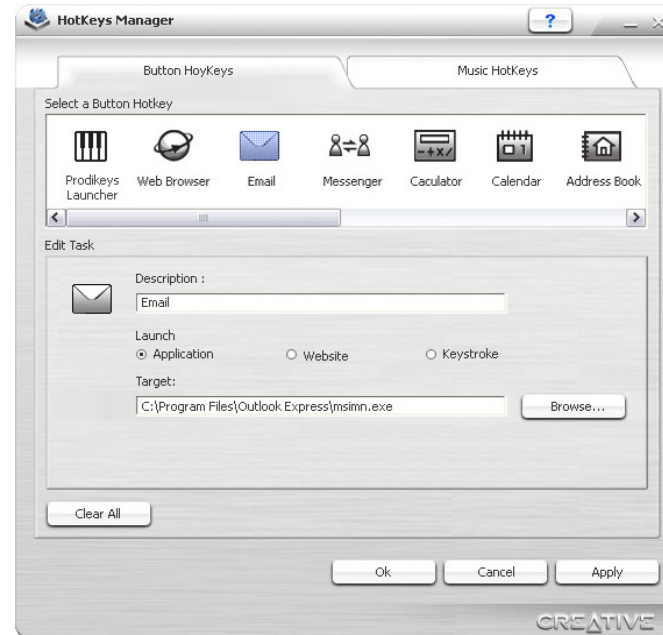 


Figure 4-6: Creative HotKeys Manager

CREATIVE
PRODiKEYS™
PC-MIDI

A

General Specifications

General Specifications

Hardware Features

- Standard IBM compatible USB computer keyboard
- 37 mini-sized music keys with touch-sensitivity
- Removable palm rest
- MUSIC button
- Enhanced F-Key lock
- Customizable Hot Keys
- System Hot Keys
- Media Playback buttons
- Volume Control wheel

Size

- 50.5 cm (19.88") x 24.5cm (9.64") x 3.5 cm (0.88")

Weight

- approximately 1.5 kg (52.91 ounces)

Construction

 
- Creative Prodikeys PC-MIDI with an attached USB cable

Port compatibility

- Universal Serial Bus (USB) 1.1

Software Features

- Prodikeys Launcher for accessing included applications
- HotKeys Manager for customizing hot keys on keyboard
- Product Tutorial for an interactive step-by-step guide
- FunMix for mixing and creating music instantly
- Mini Keyboard for exploring different instrument sounds
- EasyNotes for learning to play any song easily

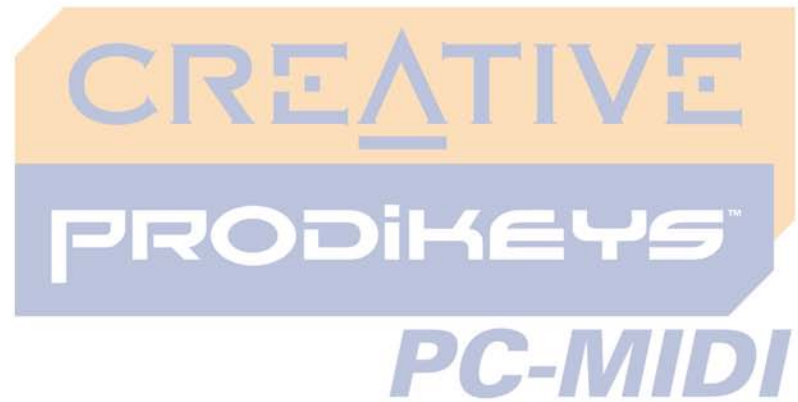

B

Troubleshooting

Troubleshooting

Problems installing Prodikeys PC-MIDI

Prodikeys PC-MIDI cannot be detected, even after the connections are checked and the software is installed.

- There may be a conflict with a USB Legacy Device setting on your computer's motherboard. Refer to your computer's motherboard manual to disable the USB Legacy Device setting.
- Operating multiple Prodikeys keyboards with your computer may introduce usability issues. If you have an existing Prodikeys keyboard, uninstall it first.

To uninstall an existing Prodikeys device:

1. Click **Start** → **Settings** → **Control Panel** (or **Start** → **Control Panel**).
2. Double-click the **Add or Remove Programs** (or **Add/Remove Programs**) icon.
3. Click the **Install/Uninstall** tab (or **Change or Remove Programs** button).
4. Select the **Creative Prodikeys PC-MIDI** entry, and then click the **Add/Remove** (or **Change/Remove**) button.
5. Shut down and turn off your computer when you are prompted to restart your computer.
6. Disconnect your existing Prodikeys series hardware from your computer. For information on setting up your Prodikeys PC-MIDI, see "Setting Up Your Creative Prodikeys PC-MIDI" on page 3-1.

If you have installed Prodikeys PC-MIDI software without uninstalling the existing Prodikeys keyboard, do the following:

1. Follow the steps above to uninstall the new Prodikeys PC-MIDI software.
2. Disconnect your existing Prodikeys series hardware from your computer.
3. Reinstall the Prodikeys PC-MIDI software. For more information, see "Installing Software" on page 3-2.



During the software installation, the existing Prodikeys software is replaced by the newer version.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>