


OPERATING INSTRUCTIONS

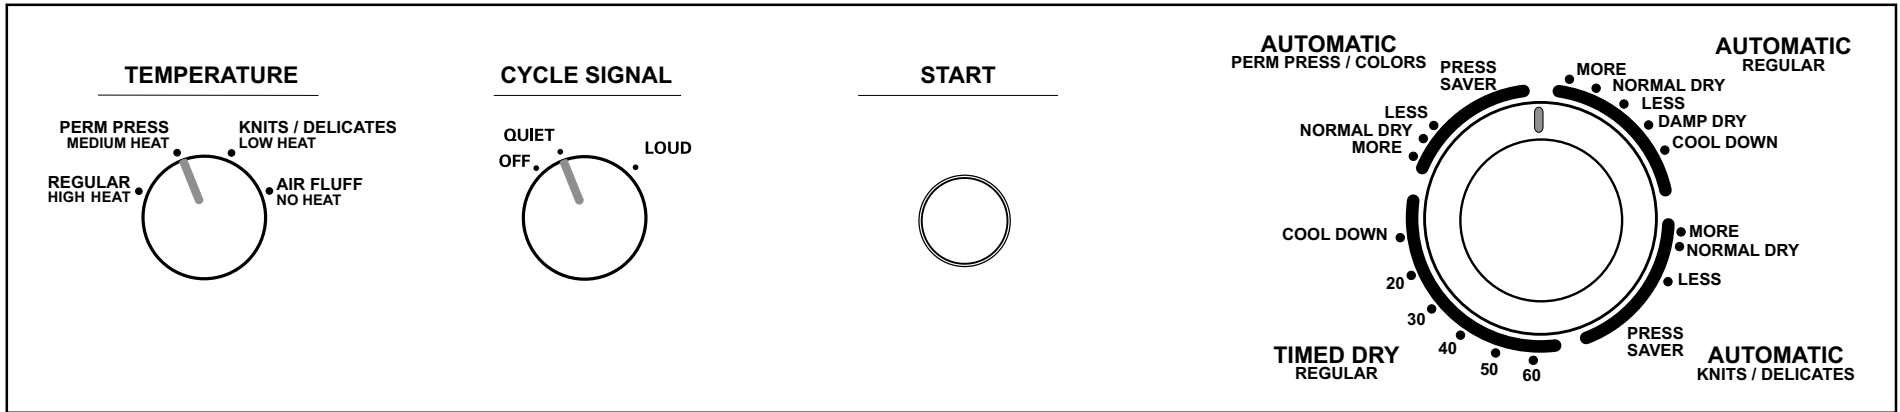

Versión en español

Si desea obtener una copia en español de estas Instrucciones de Funcionamiento, sírvase escribir a la dirección que se incluye a continuación. Solicite la P/N 131921200.

Spanish Owner's Guides
Frigidaire Home Products
P. O. Box 212378
Augusta, GA 30917

Before Operating Your Dryer

Read your dryer Owner's Guide. It has important safety and warranty information. It also has many suggestions for best drying results.

⚠ WARNING To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS in your dryer owner's guide before operating this appliance.

Operating Steps

Read Drying Procedures in your Owner's Guide. It explains these operating steps in detail.

1. Prepare items for drying.

Printed in U.S.A.

2. Check that lint screen is clean and in place.
3. Load the dryer. If desired, add a dryer fabric softener sheet.
4. Close the dryer door.
5. Set Temperature and Cycle Signal (some models) controls.
6. Turn cycle selector clockwise to desired setting.
7. Start dryer. Push START button for 2 seconds or turn the START knob clockwise to ON, hold for 1-2 seconds and release.
8. When the Cycle Signal control (some models) has been turned on, a signal will sound when the cycle ends.
9. Remove items immediately and hang or fold.
10. Clean lint screen after every load.

Temperature Selection

Always follow directions on fabric care labels.

⚠ WARNING To avoid fire hazard, do not use heat to dry items containing feathers or down, foam rubber,

plastics, or similarly textured, rubber-like materials. Use Air Fluff-No Heat setting only.

The **REGULAR-HIGH HEAT**, **PERM PRESS-MEDIUM HEAT**, and **KNITS/DELICATES-LOW HEAT** temperature settings may be used with any cycle setting. The **AIR FLUFF-NO HEAT** setting can be used only in the Timed Dry cycle.

AIR FLUFF-NO HEAT setting tumbles the load without heat. Use Air Fluff to freshen clothing, pillows or blankets, or to dust draperies.

Cycle Selection


Turn cycle selector clockwise to desired cycle and setting.

Each cycle ends with a cool down period. The heat automatically turns off and the load continues to tumble during the cool down period. This reduces wrinkling and makes items easier to handle during unloading.

Drying time varies depending on size and dampness of load, weight and fabric type. Room temperature and humidity, type of installation and electrical voltage or gas pressure can also affect drying time.

(continued, reverse side)

P/N 131921100(9912)

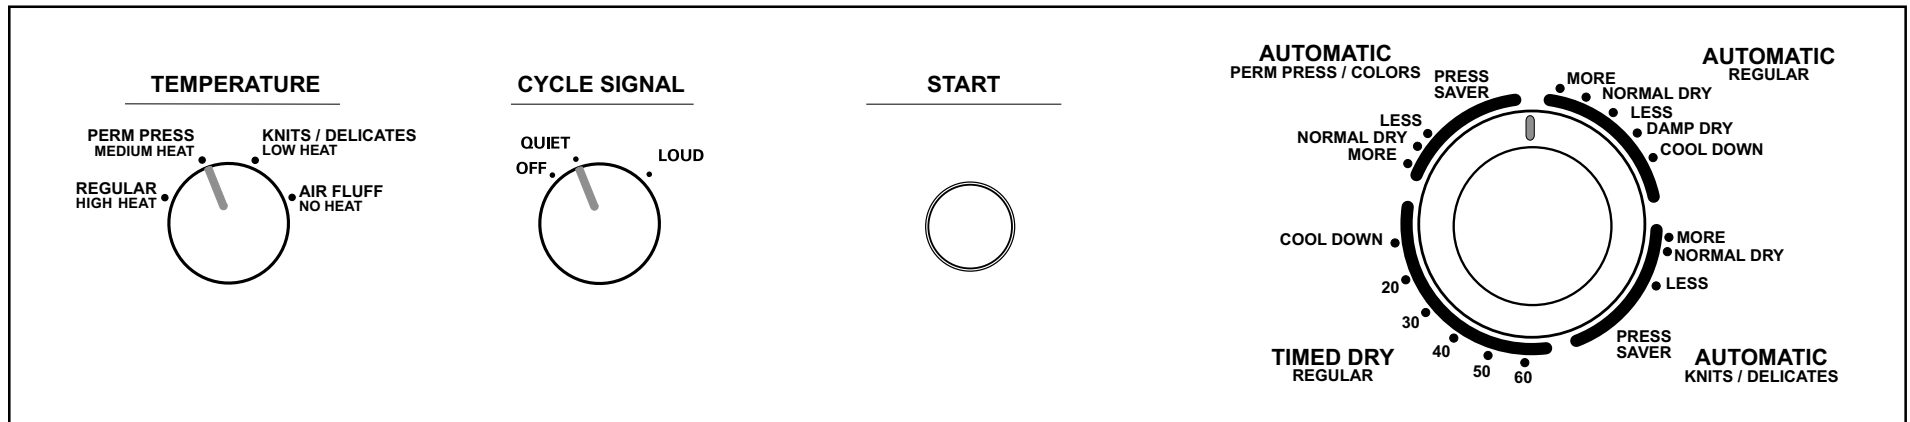

Cycle Selection (continued)

Automatic Regular Cycle

This cycle is best for cotton items that can be tumble dried. Drying time is determined automatically at the temperature selection of your choice.

- Initially set cycle selector on **NORMAL DRY**.
- For items requiring more drying time, set cycle selector on **MORE/HEAVY**.
- For items requiring less drying time, set cycle selector on **LESS**.
- Select **DAMP DRY** to remove some moisture from items to be line dried, dried flat, or ironed. (some models)

Automatic Delicate Cycle

This cycle is best for knit and delicate items. Drying time is determined automatically at the temperature selection of your choice.

- Low heat is suggested for knit and delicate items.
- Initially set cycle selector on **NORMAL DRY**.
- For items requiring more drying time, set cycle selector on **MORE**.
- For items requiring less drying time, set cycle selector on **LESS**.
- If the dried load cannot be removed promptly, the

cycle selector will advance to the **Press Saver/ Fabric Sentry** setting.

- Unheated tumbling continues during the **Press Saver/ Fabric Sentry** for 22 minutes to help reduce wrinkling.
- When the Cycle Signal (some models) is on, it will sound briefly every 5 minutes as a reminder to remove the load.

Timed Dry Regular Cycle

This cycle provides up to 60 minutes of drying time at the temperature selection of your choice.

Automatic Perm Press Cycle

This cycle is best for permanent press items. Drying time is determined automatically at the temperature selection of your choice.

- Medium heat is suggested for permanent press items.
- Initially set cycle selector on **NORMAL DRY**.
- For items requiring more drying time, set cycle selector on **MORE**.
- For items requiring less drying time, set cycle selector on **LESS**.
- If the dried load cannot be removed promptly, the cycle selector will advance to the **Press Saver/ Fabric Sentry** setting.

• Unheated tumbling continues during the **Press Saver/ Fabric Sentry** for 22 minutes to help reduce wrinkling.

- When the Cycle Signal (some models) is on, it will sound briefly every 5 minutes as a reminder to remove the load.

Energy Saving Tips

- Keep the lint screen clean and exhaust the dryer correctly.
- Sort laundry properly and select proper temperature and cycle settings. Choose an automatic dry cycle whenever possible for accurate drying time.
- Dry only full loads. Single items and small loads usually take longer to dry.
- Avoid overloading, adding wet items to a partially dry load, and overdrying.
- Dry one load after another to take advantage of a warm dryer.
- Opening the door needlessly causes warm air to escape, which prolongs drying time.
- If possible, use the dryer on low humidity days.
- Install the dryer in an area where the room temperature is at least 45°F (7°C).

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>