



HP V5061u / V5061Au

Digital Camcorder

 
Quick Start Guide

For more details about the camcorder operation and troubleshooting, please read the User Manual located on the CDROM disc included with your camcorder or visit <http://www.hp.com/support> and download it for the camcorder support page.

1 Getting Started

1.1 Charging the Battery

It is recommended that the NP-40 Lithium Battery be fully charged before use. First, connect the external battery charger to the AC power source (wall outlet or power strip). Next, plug the battery into the external charger as illustrated below. The battery may take up to 2 1/2 hours to charge. When the light on the charger turns green, remove the battery and use when ready.

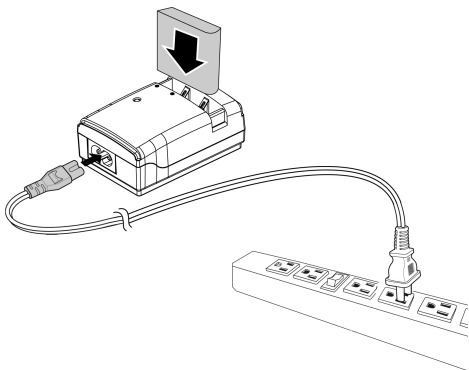

Note:

Do not leave the battery in the charger for extended periods of time after it has been fully charged.

 
 
1.2 Loading the Battery

Please use only the battery provided or recommended by the manufacturer or dealer.


Note:

Incorrectly inserting the batteries could result in non-repairable damage.

1. Open battery cover.

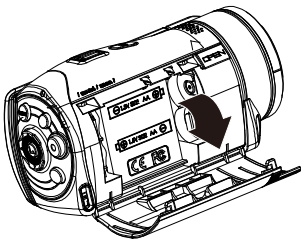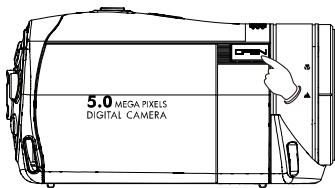


 2. Insert the battery according to the illustration. The electrode is inside of the camcorder.

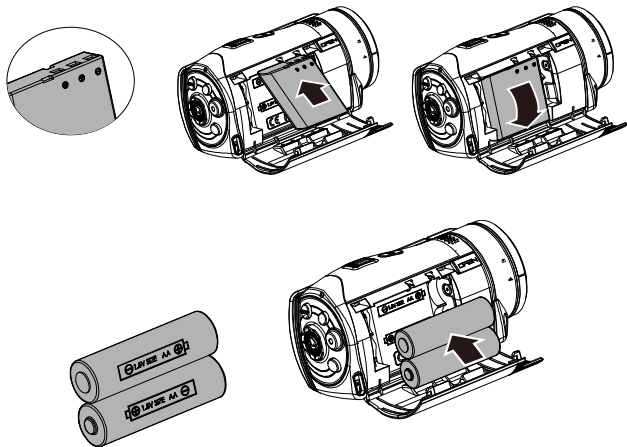


* **DO NOT** use NiMH AA batteries.

 3. Close the battery cover.

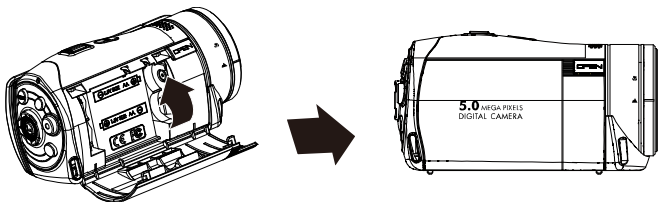

1.3 Inserting SD Card

 1. Open the Insert an SD card and make sure facing the touching face downward.

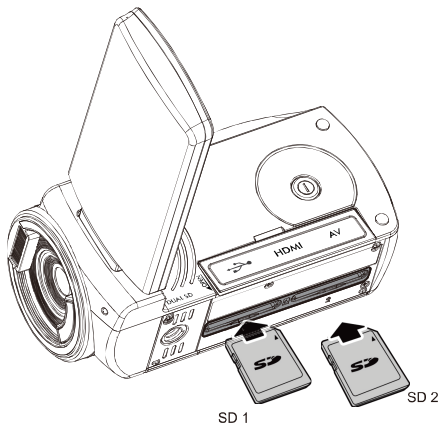


Note:


Please be careful to insert the SD card(s) as illustrated above so that damage to the SD card(s) and camcorder does not occur. To avoid damaging photos and video files, do not remove or insert the SD card while the camcorder is powered on.

1.4 Exterior Views

 
Front View

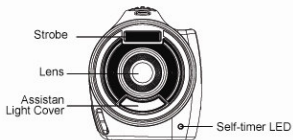


Right View

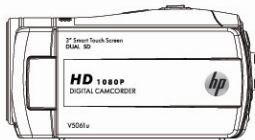 


Top View

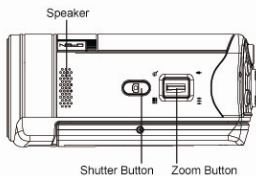 


Bottom View

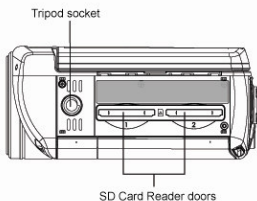 



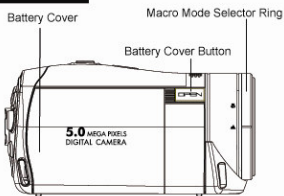 


Left View


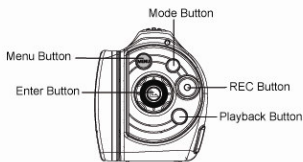 





Rear View

 

 
 
1.5 Buttons & Functions

Description	Button	Function
Power button		Press the power button to turn the Digital Camcorder ON/OFF. Opening and closing the LCD panel will also power ON/OFF as well.
Menu button		Press the button to display the main menu.
MODE button		There are three operating modes for the Digital Camcorder: Video mode, Photo mode, and Audio mode. Press the Mode switch to cycle through the different modes.
SET button		Confirmation for various setting of functions
4-Way Direction button		Press the 4-Way Direction Button UP to change the flash options: off, auto, fill-in in Photo mode Press DOWN to delete a photo or video in Playback mode. You can pull in the focusing distance to 10 cm. (Normal focus range: 0.8M ~ infinity) Press RIGHT and LEFT to make adjustments to the Exposure Value (EV) compensation.

Description	Button	Function
Zoom toggle		<p>This Digital Camcorder has 4X Digital zoom (in Video mode of HD1080p resolution only has 2X digital zoom).</p> <p>Move the Zoom toggle to the right (▲) to zoom in, or move to the left (▲▲▲) to zoom out.</p>
Shutter button		<p>Press the button to capture a photo.</p>
Recording button		<p>Press the button to record a video in Video mode and activate audio recording in Audio mode.</p>
Playback button		<p>Press the Playback button to enter Playback mode and playback the last file recorded.</p>
Macro mode selector		<p>The Macro function is used to capture Photos and Videos at very close distances. Rotate the lens ring to select Macro mode (🌸) to focus on objects about 20 cm (8 inches) from the camcorder. The icon "🌸" will be displayed on the LCD screen when the Macro mode is selected. Normal mode (▲) is used to focus on objects more than 1.2 m (4 feet) away.</p>

1.6 Adjusting LCD Display


To begin capturing photos and videos, open the LCD display panel as illustrated below.

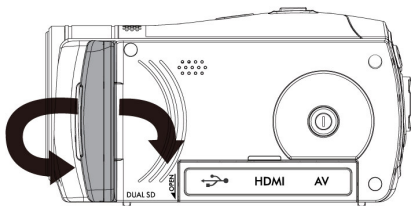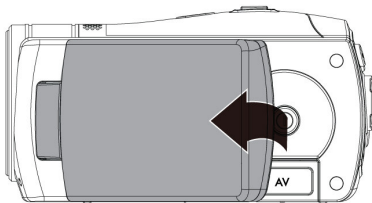  


1.7 Initial Settings Before Use

1.7.1 Setting Date and Time

 1. The initial power up of this camcorder should display the Date and Time setup menu as shown below.

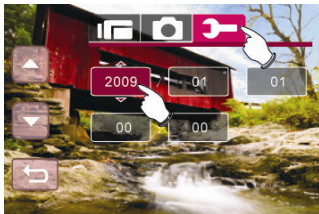

 2. Touch the desired field on the LCD panel or press LEFT/RIGHT on the 4-Way Direction button to navigate through the date and time field.
3. Touch the up/down icons on the LCD panel or press the 4-Way Direction Button Up/Down to adjust the value. Press the Set (L) button or touch the Return icon (↵) to store the value you have changed.

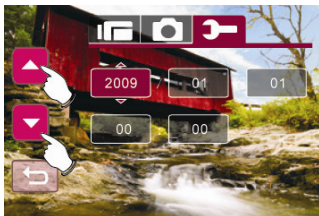





1.8 Using the Touch Screen

1.8.1 Single Touch

Single touch to activate hotkeys on LCD screen.

Example, in Video/Photo Mode:

1. Touch the  icon to enter the Setup menu.
2. Touch the  icon to zoom in and touch the  icon to zoom out.
3. Touch the  icon to set the camcorder in playback mode.



 
1.8.2 Slide

While in Playback mode, touch and slide right or left to view the previous or next Video/Photo.






1.8.3 Rotate

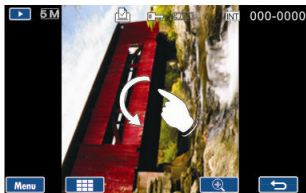While in Playback mode, touch the photo and slide in a half circle motion (as illustrated below) to rotate 90 with each motion.

 
 


2 Modes

 
2.1 Video Mode

1. By default, this camcorder will power up to Video mode . If the camcorder is not in Video mode, press the  until this mode is selected.
2. Press the  button to start or stop video recording.
3. The Digital Camcorder will store the movie clip automatically on the SD card when the recording stopped.



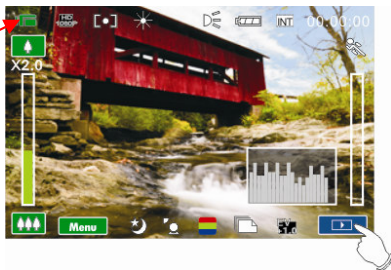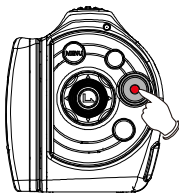



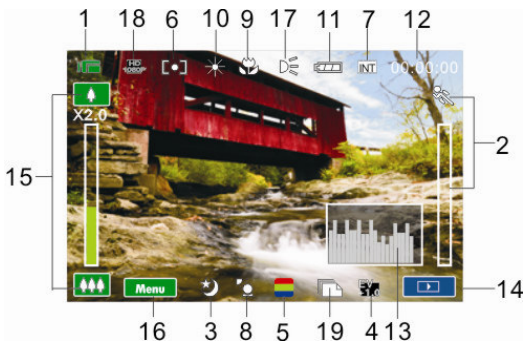



Video mode Indicator



The following table describes all the icons that are displayed when the Digital Camcorder is in Video mode (📹).



1		Video mode
2		Motion Detection mode
3		Night mode indicator
4		Exposure Compensation indicator
5		Artistic Effect indicator
6		Metering mode
7		Memory Status indicator : SD card 1 indicator : SD card 2 indicator : Internal memory indicator (displayed when there is no SD card in camcorder)

8		Backlight indicator
9		Macro Focus indicator
10		White Balance indicator
11		Battery status indicator
12	00:00:00	Remaining recording time indicator
13		Histogram indicator
14		Enter Playback mode touch icon
15		Zoom ratio bar indicator
16	Menu	Enter Menu touch icon
17		Assist LED light button (On, Off)
18		Resolution indicator
19		Burst mode

2.2 Photo Mode



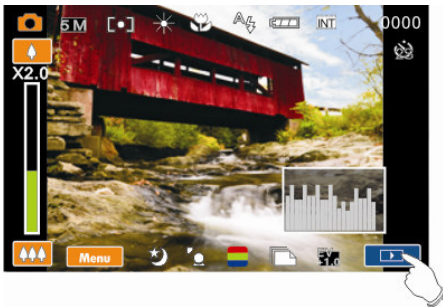 
 
1. Power up the camcorder and press the  button to select Photo mode .
2. Press the Shutter button to capture a photo.










Photo Mode
Indicator






The following table describes all the icons that are displayed when the Digital Camcorder is in Photo mode (📷).




1		Photo mode indicator
2		Night mode indicator
3		EV Compensation indicator
4		Artistic Effect indicator
5		Metering mode
6		Memory Status indicator : SD card 1 indicator : SD card 2 indicator : Internal memory indicator (displayed when there is no SD card in camcorder)
7		Backlight indicator
8		Macro Focus indicator


9		White Balance indicator
10		Battery status indicator
11	0000	Shots remaining, indicates the remaining shots available.
12		Histogram indicator
13		Enter Playback mode touch icon
14		Zoom ratio bar indicator
15		Enter Menu touch icon
16		Flash mode selection (off, auto, fill-in)
17	5 M	Resolution indicator
18		Burst mode
19		Self-timer indicator





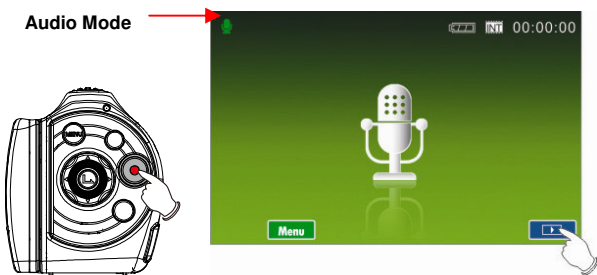 

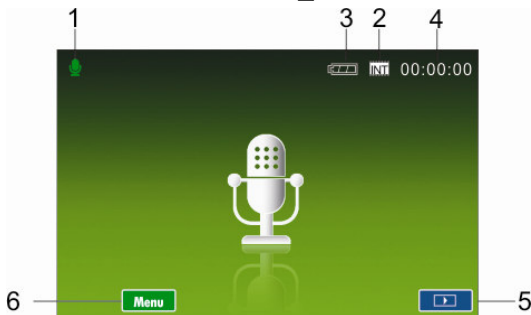 

2.3 Audio Mode

1. Power up the camcorder and press the  until the Audio Mode  is selected.
2. Press the  button to start or stop audio recording.



The following table describes all the icons that are shown when the Digital Camcorder is in Audio mode (🎤).










1		Audio mode
2		Memory Status indicator  : SD card 1 indicator  : SD card 2 indicator  : Internal memory indicator (displayed when there is no SD card in camcorder)
3		Battery status indicator
4	00:00:00	Remaining recording time indicator
5		Enter Playback mode touch icon
6		Enter Menu touch icon

2.4 Video Playback Mode

Please refer to the following table regarding the description of each icon and symbol in video playback.



1		Playback mode icon
2	000-0000	Folder and file number
3		File Protect indicator
4		Memory Status indicator : SD card 1 indicator : SD card 2 indicator : Internal memory indicator (displayed when there is no SD card in camcorder)
5		Battery status indicator
6	00:00:00/00:00:00	Playback progress length / file total length
7		Sound volume touch icons






8		Return touch icon
9		Fast forward Playback touch icon
10		Playback/Pause touch icon
11		Fast Rewind Playback touch icon
12		Enter Menu touch icon
13		Resolution indicator
14		Slow Motion Playback touch icon

2.5 Photo Playback Mode

Please refer to the following table for descriptions of the icons and symbols in photo playback.












1		Playback mode icon
2		DPOF (Digital Print Order Format) indicator
3		File Protect indicator
4		Memory Status indicator : SD card 1 indicator : SD card 2 indicator : Internal memory indicator (displayed when there is no SD card in camcorder)
5		White Balance indicator
6		Battery status indicator
7	000-0000	Folder and file number





8		Return touch icon
9		Magnification indicator touch icon
10		Minification indicator touch icon
11		Enter Menu touch icon
12		Resolution indicator

2.6 Audio Playback Mode

Please refer to the following table regarding the description of each icon and symbol in audio playback.



1		Playback mode icon
2		File Protect indicator
3		Battery status indicator
4		Memory Status indicator  : SD card 1 indicator  : SD card 2 indicator  : Internal memory indicator (displayed when there is no SD card in camcorder)
5	000-0000	Folder and file number
6	00:00:00/00:00:00	Playback progress length / file total length
7		Return touch icon
8		Fast forward Playback touch icon

9		Playback/Pause touch icon
10		Fast Rewind Playback touch icon
11		Enter Menu touch icon
12		Sound (Volume adjustment) touch icon

3 Getting Help

Should you have a technical support question or your HP Digital Camcorder requires service within the warranty period, please contact the original point of purchase if necessary, issue a Return Material Authorization (RMA) number in order to replace your HP Branded Product. For warranty claims, you will be required to provide a copy of your original dated sales receipt as proof of purchase and the issued RMA number. You will be responsible for shipping charges when shipping the product to the service center. The service agent will provide you with an address and you will also be responsible for any shipping charges to the warranty service center. Once your product is received by this service center, a replacement unit will be shipped back to you, typically within 5 business days.

E-mail Support:

Language	Address
English	english@hpodd.com
Deutsch (German)	deutsch@hpodd.com
Español (Spanish)	espanol@hpodd.com
Français (French)	francais@hpodd.com
Italiano (Italian)	italiano@hpodd.com
Nederlansk (Dutch)	hollands@hpodd.com
Nihongo (Japanese)	nippon@hpodd.com
Português (Portuguese)	portugues@hpodd.com
한국어 (Korean)	korean@hpodd.com
漢語 (Chinese Traditional)	trad.chinese@hpodd.com

Phone Support:

Country	Phone number	Hours of support
North America		
United States	1-866-694-7633	M-F 9-6 PST
Canada	1-866-694-7633	M-F 9-6 PST
Europe, Middle East, Africa		
Belgium (België/Belgique/Belgien)	+ 32 2700 1724	9 :00 – 17:00 CET
France (France)	+ 33 171230454	9 :00 – 17:00 CET
Germany (Deutschland)	+ 49 6950073896	9 :00 – 17:00 CET
Ireland (Éire)	+ 353 1850882016	9 :00 – 17:00 CET
Italy (Italia)	+ 39 269682189	9 :00 – 17:00 CET
Spain (España)	+ 34 914533458	9 :00 – 17:00 CET
Asia Pacific		
Japan (日本国)	+ (81) 3 - 5816-4111	9:00 - 17:00 (GMT +9)
Hong Kong	+ (852) 232 98 102	9:00 - 17:00 (GMT +8)
Latin America		
Argentina	+54 11 60912399	M-F 9:00-18:00 PST
Brazil	+55 11 55046633	M-F 9:00-18:00 PST
Chile	+56 2 5814977	M-F 9:00-18:00 PST
Colombia	+57 1 5082325	M-F 9:00-18:00 PST
México (Mexico City)	+52 55 12048185	M-F 9:00-18:00 PST
México (Guadalajara)	+52 33 10313872	M-F 9:00-18:00 PST
México (Monterrey)	+52 81 11072639	M-F 9:00-18:00 PST
Peru	+51 1 7056232	M-F 9:00-18:00 PST
Venezuela	+58 212 3354574	M-F 9:00-18:00 PST

Web Site:

Language	Address
Available in 31 languages based on country.	http://www.hp.com/support

P/N: 7525C00148A

Download from [Www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>