



PR06500 Portable Generator Illustrated Parts List




**BRIGGS & STRATTON POWER PRODUCTS GROUP, LLC
JEFFERSON, WISCONSIN, U.S.A.**

Model 030381 Manual No. 204728A Revision - (12/19/2007)

Exploded Views and Parts Lists

EXPLODED VIEW - MAIN UNIT

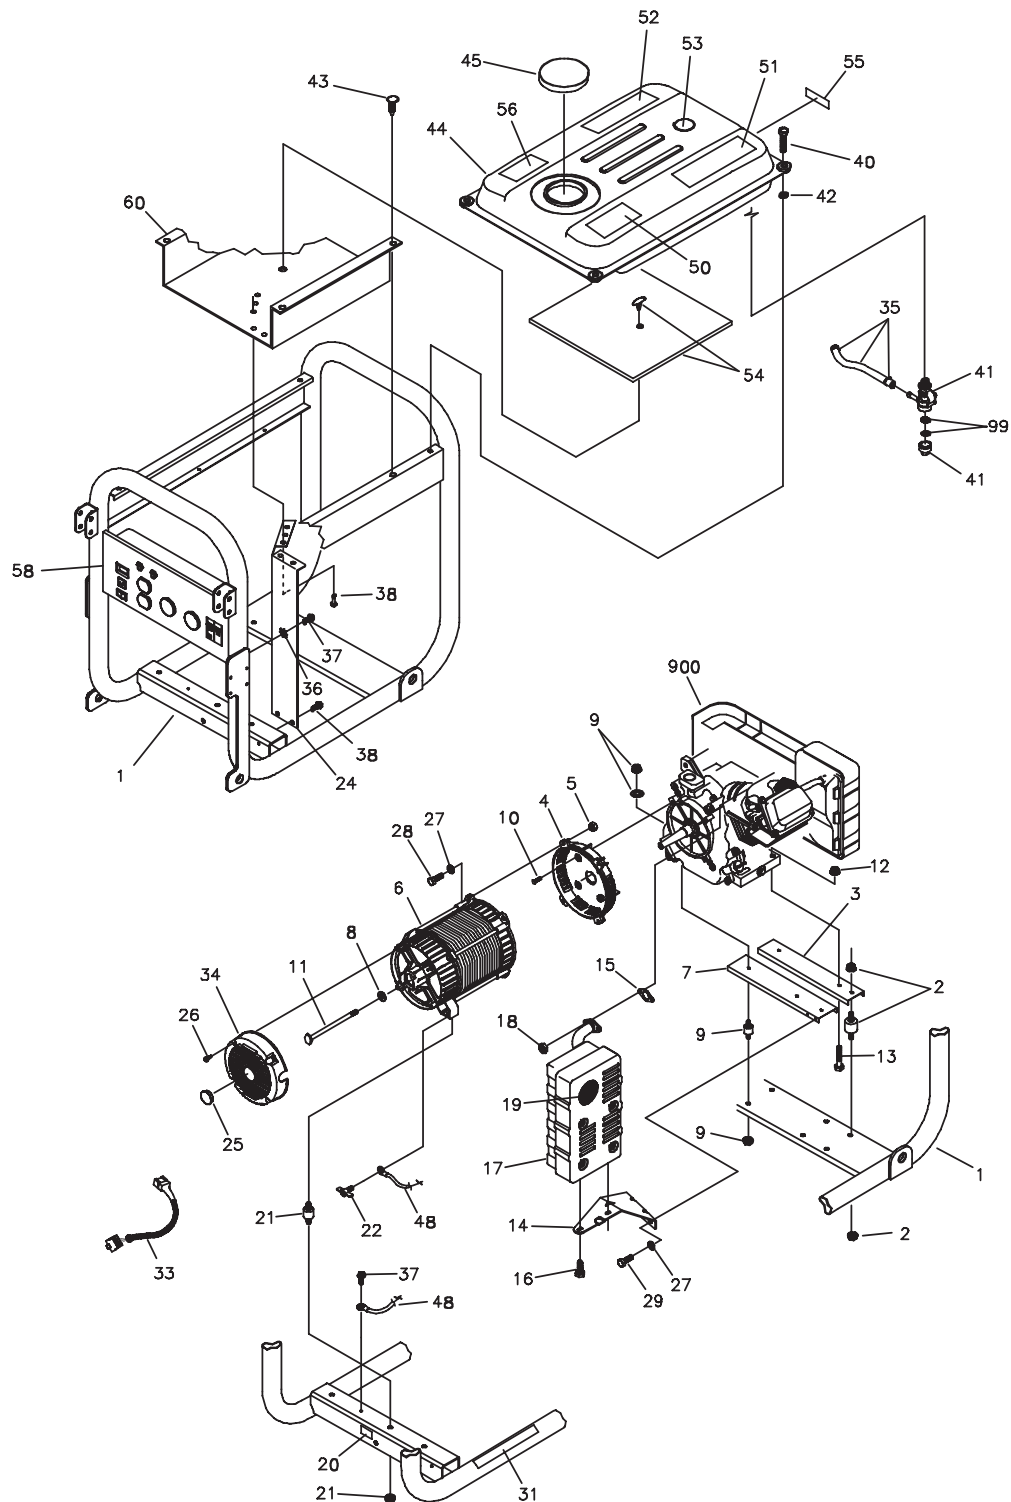

Copyright © 2007 Briggs & Stratton Power Products Group, LLC. All rights reserved. No part of this material may be reproduced or transmitted in any form by any means without the express written permission of Briggs & Stratton Power Products Group, LLC.

Exploded Views and Parts Lists

PARTS LIST - MAIN UNIT

Item	Part #	Description	Item	Part #	Description
1	B204631GS	CRADLE (Includes Items 20 & 31)	41	193272GS	VALVE, Fuel (Includes Item 99)
2	194218GS	MOUNT, Vibration	42	193588GS	SPACER
3	B92531GS	SUPPORT, Engine	43	B1797GS	CLIP, Tree
4	190220GS	HOUSING, Engine Adapter	44	196035GS	ASSY, Fuel Tank, 7-Gal (Includes 41, 50, 51, 52, 53, 55 & 56)
5	*	NUT, Hex, M8 - 1.25	45	189135GS	CAP, Fuel
6	NSP	ASSY, Alt (see page 5)	48	195373GS	WIRE, Ground
7	B190723GS	SUPPORT, Eng/Muffler	50	188333GS	DECAL, Instruction, Fuel Level
8	96796GS	WASHER, 8.4 x 22.2 x 3	51	194984GS	DECAL, Warning
9	194219GS	KIT, Vibration Mount	52	94480GS	DECAL, Start Instructions
10	190274DGS	SBHCS, 3/8-16 x 7/8"	53	192724GS	GAUGE, Fuel
11	187365JGS	HHCS, 5/16-24 x 7.75	54	194448GS	KIT, Insulation w/ Clip
12	189160GS	NUT, 5/16-18 Serrated Flange	55	197797GS	DECAL, Fuel Shut-off
13	*	HHCS, 5/16-18 x 1-3/4"	56	202997GS	DECAL, Warning CO
14	92532GS	BRACKET, Muffler	58	202531GS	ASSY, Control Panel
15	710250	GASKET, Muffler	60	J194389GS	SHIELD, Heat
16	*	HHCS, M6- 1.0 x 12	76	195459GS	DECAL, Neutral Ground
17	B4206GS	MUFFLER	77	195940GS	DECAL, Ground French
18	67989GS	NUT, Flange Serrated	99	189759GS	KIT, Fuel Valve Repair
19	83083GS	SCREEN, Spark Arrest	900	§	ENGINE
20	B4986GS	DECAL, Ground			
21	194153GS	KIT, Vibration Mount			
22	86494GS	SCREW, M6-1.0 x 16 Wing			
24	J194390GS	SHIELD, Heat			
25	191190GS	CAP			
26	74908GS	TAPTITE, M5-0.8 x 10			
27	*	WASHER, 5/16 - M8, Lock			
28	*	HHCS, M8-1.25 x 25			
29	*	HHCS, 5/16-18 x 3/4			
31	200310GS	DECAL, Warning, Exhaust			
33	193157GS	HARNESS, Wire, Power			
34	195422GS	COVER, RBC, Plastic w/Cap			
35	791745	KIT, Fuel Line (cut to fit)			
36	*	WASHER, Ext #10, Shakeproof			
37	B2153GS	SCREW, 12-14 x 7/8 Self Drill			
38	192376GS	SCREW, 12-24 x 1/2 Thd Forming			
40	*	HHS, 5/16 - 18 x 1, Trilobular			

Parts Not Illustrated


204728GS	MANUAL, Operator's
43438GS	PLUG, 120/240V, 30A
BB3061BGS	OIL BOTTLE
202179GS	DECAL, Family EVP
65787GS	CABLE, Battery Charge
100523GS	PLUG, 125V, 30A
205350GS	KIT, Decals

* - Items without part numbers are common fasteners and are available at your local hardware store.

§ - Contact Engine Manufacturer

Exploded Views and Parts Lists


CONTROL PANEL EXPLODED VIEW & PARTS LIST

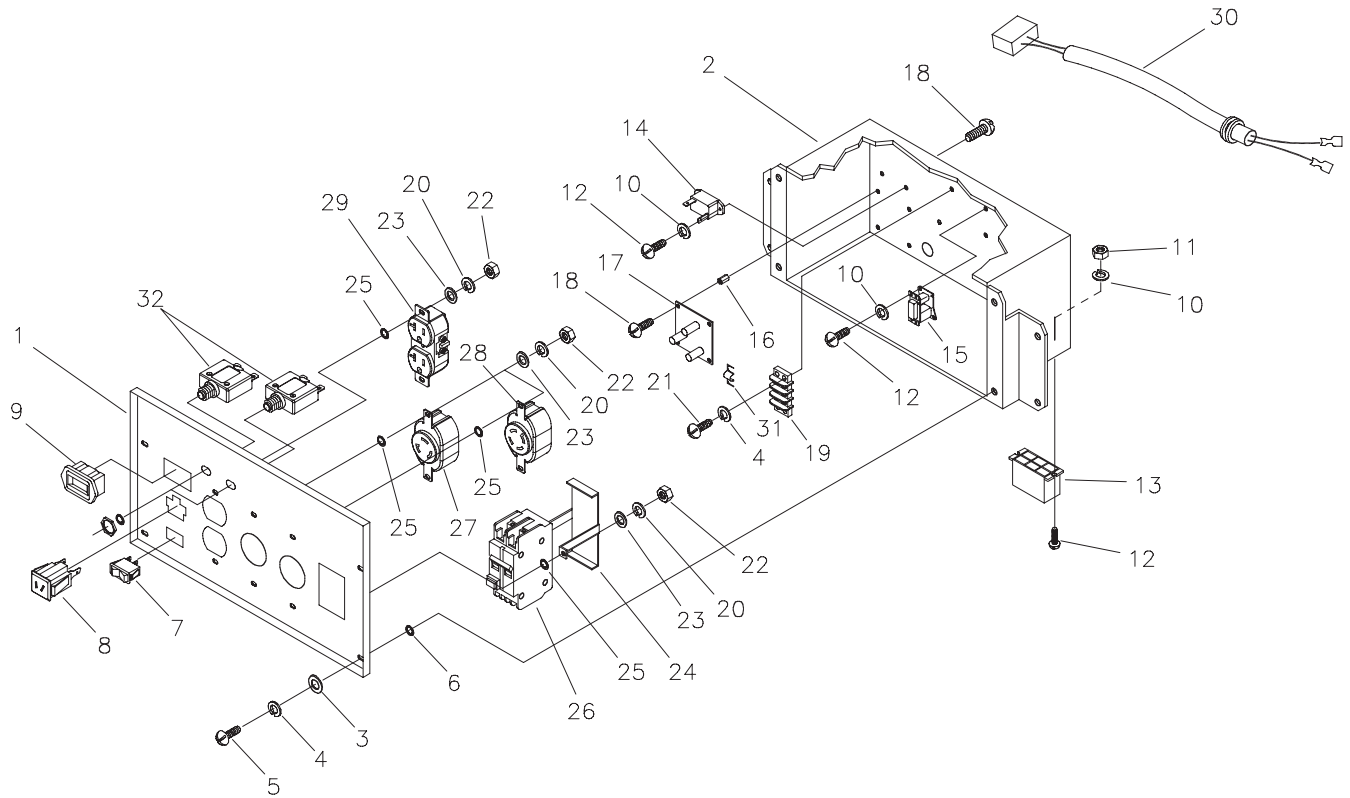

Item	Part #	Description	Item	Part #	Description
1	B192833GS	PANEL, Control	19	193077GS	STRIP, Terminal
2	B192836GS	BOX, Control Panel	20	*	LOCKWASHER, M4
3	*	WASHER, Flat, #10 - M5	21	*	PPHMS, M5 - 0.8 x 20
4	*	LOCKWASHER, M5	22	*	NUT, M4 - 0.7
5	*	PPHMS, M5 - 0.8 x 12	23	*	WASHER, Flat, M4
6	*	WASHER, M6 - 1/4, Int. Shakeproof	24	192931GS	BRACKET, GFCI Breaker
7	82538GS	SWITCH, Rocker	25	*	WASHER, Shakeproof, Int. #8
8	90418GS	OUTLET, 12VDC, Snap	26	192828DGS	BREAKER, Circuit, GFCI, 30A
9	202602GS	HOUR METER	27	68868GS	OUTLET, 120V, 30A
10	*	LOCKWASHER, M3	28	43437GS	OUTLET, 120/240V, 30A
11	*	NUT, M3 - 0.5	29	68759GS	OUTLET, 120V, 20A, Duplex
12	*	PHMS, M3 - 0.5 x 10	30	193036GS	HARNES, Wire
13	22694GS	HOUSING, Receptacle	31	193095GS	JUMPER, Terminal Block
14	87962GS	BREAKER, Circuit, 10A, 12V	32	202394GS	BREAKER, Circuit, 20A with hardware
15	84028GS	TRANSFORMER, Idle Control			
16	64525GS	STANDOFF, Hex			
17	193362GS	PCB, Idle Control			
18	*	PHTS, #6-32 x 3/8			

* - Items without part numbers are common fasteners and are available at your local hardware store.


ALTERNATOR EXPLODED VIEW & PARTS LIST

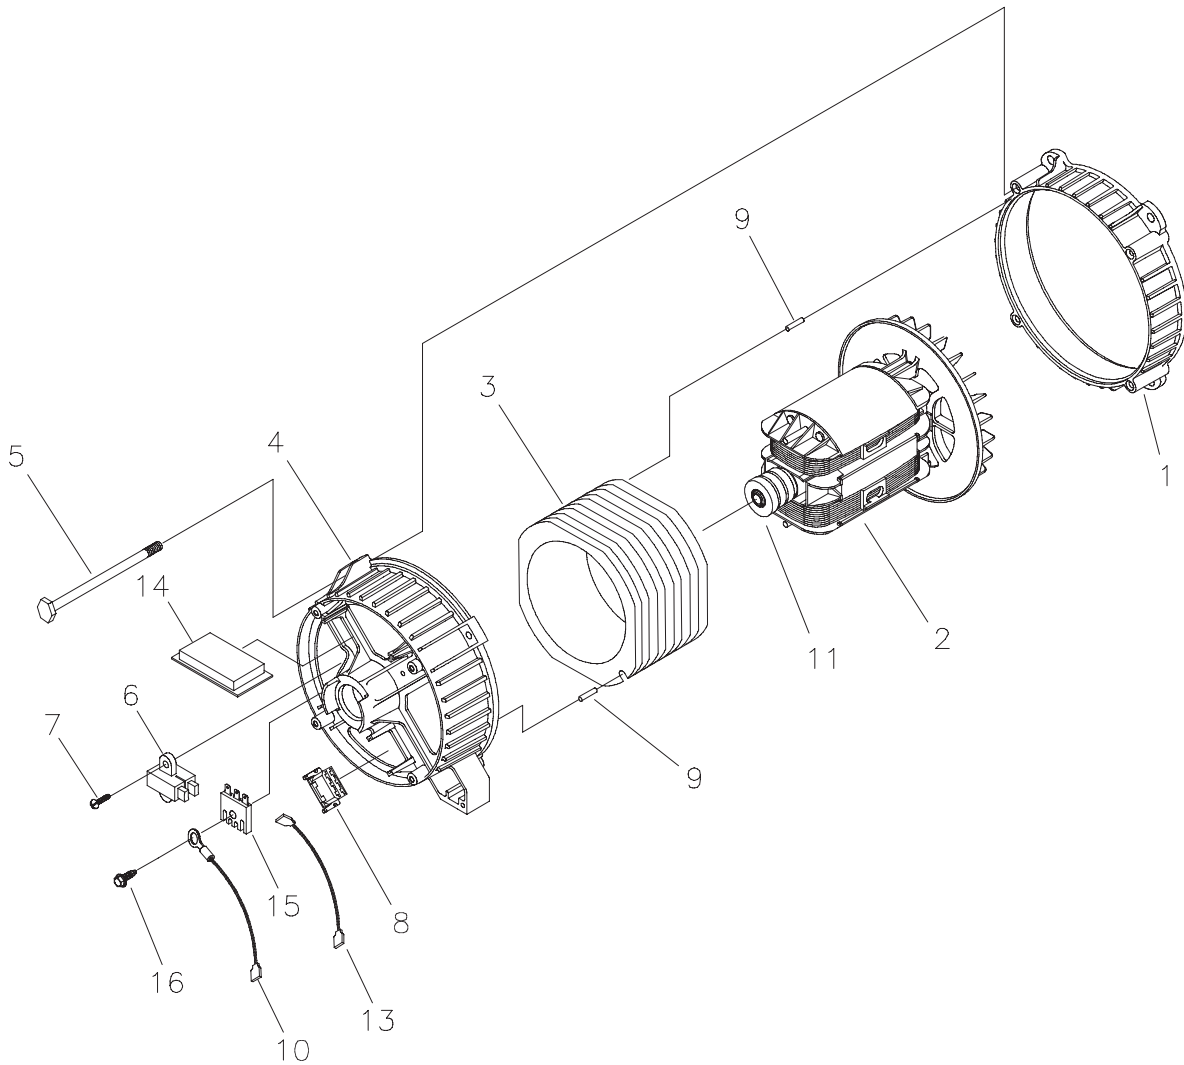

Item	Part #	Description
1	186059GS	ADAPTER, Mounting, Alternator
2	192919GS	ROTOR
3	192920AGS	STATOR
4	193336GS	RBC, (with O-Ring, p/n 189197GS)
5	86308HGS	HHCS, M6 - 1.0 x 140 SEMS
6	66386GS	ASSEMBLY, Holder, Brush
7	66849GS	TAPTITE, M5 - 0.8 x 16
8	22694GS	RECEPTACLE, 6 pin
9	81917GS	PIN, Roll, 4mm x 10
10	193428AGS	WIRE-A, Ground
11	65791GS	BEARING
13	192403XGS	WIRE, Ground
14	189769GS	REGULATOR, Voltage, AVR
15	65795GS	RECTIFIER
16	66849AGS	TAPTITE, M5 - 0.8 x 20

Exploded Views and Parts Lists

WHEEL KIT EXPLODED VIEW & PARTS LIST

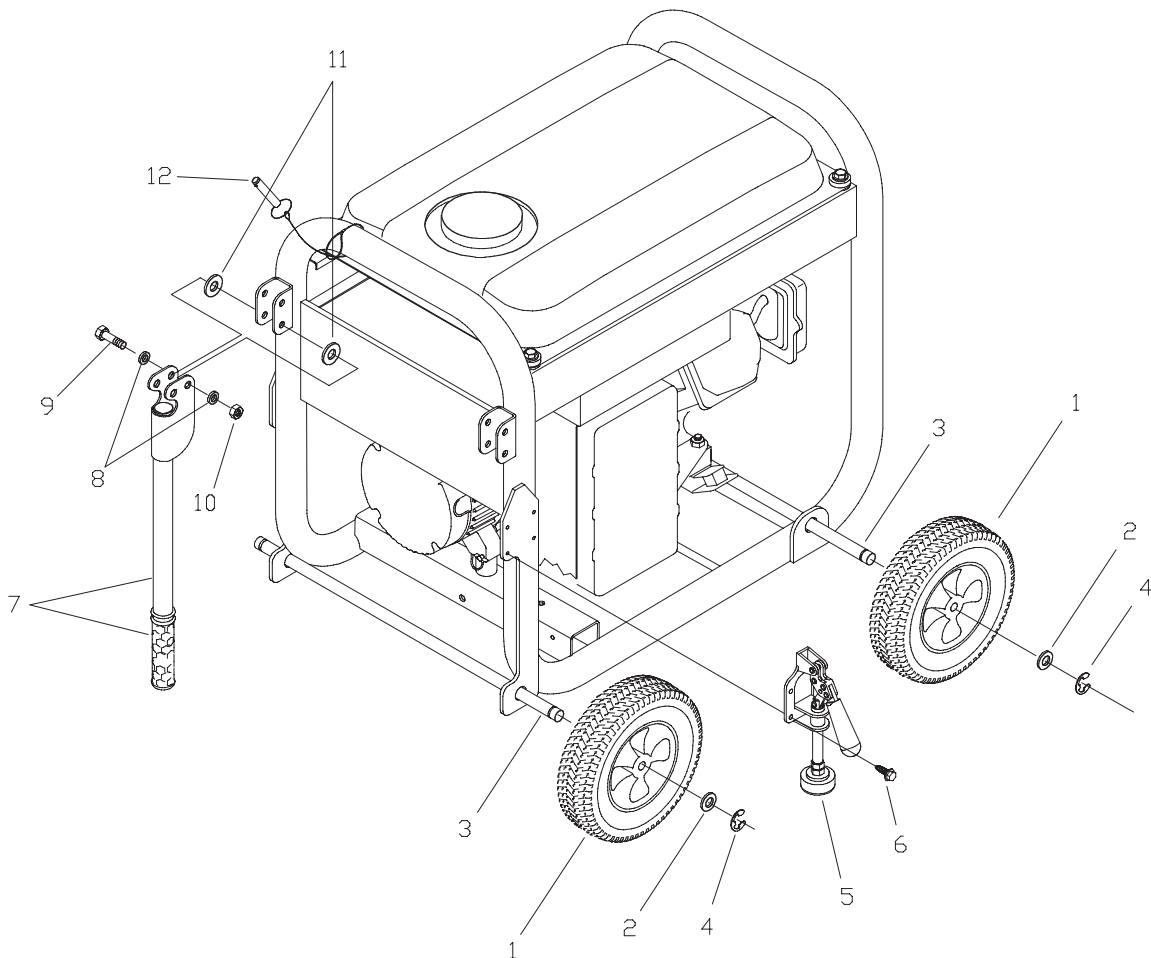

Item	Part #	Description
1	203273GS	WHEEL
2	*	WASHER, 5/8"
3	191267KGS	AXLE
4	191265GS	E-RING
5	205135GS	ASSY, Brake
6	*	SCREW, 1/4-20 x 3/8
7	B193200GS	ASSY, Handle w/Grip
	198669GS	GRIP
8	*	WASHER, Flat, 5/16 - M8
9	*	NUT, M8 - 1.25, Nylok
10	*	HHCS, M8 - 1.25 x 45
11	*	WASHER, 1.2 x 0.346 x 0.03, Nylon
12	B4135GS	PIN, Handle

Items Not Illustrated

205183GS SUBKIT, Hardware

* - Items without part numbers are common fasteners and are available at your local hardware store.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>