



**COBRA™ Energy Recovery Units
48/50HJ004-014 with 62AQ060-300
Single-Package Rooftop Units
with Energy Recovery Capability**

Installation, Start-Up, and Service Supplement

IMPORTANT: This is a supplemental instruction for the 48/50HJ and the 62AQ Installation, Start-Up and Service Instructions. It is not intended to take the place of either instruction or to be a complete piece in itself.

CONTENTS

	Page
SAFETY CONSIDERATIONS	1
GENERAL	1
INSTALLATION	2-29
Step 1 — Inspect Shipment	2
Step 2 — Provide Unit Support	2
• ROOF CURB	
Step 3 — Field Fabricate Ductwork	3
Step 4 — Rig and Place Unit	6
• POSITIONING	
Step 5 — Install Flue Hood (48HJ Only)	11
Step 6 — Install Gas Piping (48HJ Only)	11
Step 7 — Install External Trap for Condensate Drain	11
Step 8 — Make Electrical Connections	11
• FIELD POWER SUPPLY	
• FACTORY-SUPPLIED NON-FUSED DISCONNECT	
• FIELD CONTROL WIRING	
• HEAT ANTICIPATOR SETTINGS	
Step 9 — Assemble and Mount Supply-Air Hood	28
Step 10 — Mount the Barometric Relief Damper	28
Step 11 — Set the Outdoor Cooling and Heating Thermostats	29
LIGHT COMMERCIAL THERMIDISTAT ACCESSORY	30-34
General	30
Power	30
Dehumidification Equipment and Connections	30
Step 1 — Select Light Commercial Thermidistat Location	30
Step 2 — Set DIP Switches	30
Step 3 — Install Light Commercial Thermidistat	31
Step 4 — Set Light Commercial Thermidistat Configuration	31
Step 5 — Conduct Light Commercial Thermidistat Start-Up and Checkout	33
Step 6 — Make Final Settings	34
OPERATIONAL INFORMATION	34
PRE-START-UP	35
START-UP	35
SERVICE	35-37
TROUBLESHOOTING	38-41
ROOFTOP UNIT AND ENERGY\$RECYCLER2 START-UP CHECKLIST	CL-1, CL-2

SAFETY CONSIDERATIONS

Installation and servicing of air-conditioning equipment can be hazardous due to system pressure and electrical components. Only trained and qualified service personnel should install, repair, or service air-conditioning equipment.

Untrained personnel can perform basic maintenance functions of cleaning coils and filters and replacing filters. All other operations should be performed by trained service personnel. When working on air-conditioning equipment, observe precautions in the literature, tags and labels attached to the unit, and other safety precautions that apply.

Verify that the power source supplied to the unit matches the voltages and amperages listed on the unit rating plate.

Follow all safety codes. Wear safety glasses and work gloves. Use quenching cloth for unbrazing operations. Have fire extinguishers available for all brazing operations.

⚠ WARNING



Disconnect gas piping from unit when leak testing at pressure greater than $\frac{1}{2}$ psig. Pressures greater than $\frac{1}{2}$ psig will cause gas valve damage resulting in hazardous condition. If gas valve is subjected to pressure greater than $\frac{1}{2}$ psig, it *must* be replaced before use. When pressure testing field-supplied gas piping at pressures of $\frac{1}{2}$ psig or less, a unit connected to such piping must be isolated by manually closing the gas valve.

⚠ WARNING

Before performing service or maintenance operations on unit, turn off main power switch to unit and install a lock-out tag. Electrical shock could cause personal injury.

GENERAL

Carrier's factory-installed optional COBRA Energy Recovery units precondition ventilation air for the rooftop unit during winter and summer operation and recover energy from the building exhaust air. These units are designed to satisfy the higher ventilation requirements and other building codes while minimizing energy costs.

Factory installation of the energy recovery section provides the benefit of reduced field-installation time, single point power connections, and the assurance of a factory test for the complete COBRA Energy Recovery unit. The energy recovery section requires less maintenance than other energy recovery systems and can be serviced by any qualified refrigeration technician.

NOTE: Because of the location of the energy recovery section, the unit nameplate has been moved to the opposite end of the rooftop section, on the upper, right-hand part of the panel.

Manufacturer reserves the right to discontinue, or change at any time, specifications or designs without notice and without incurring obligations.

Book 1 | 1 | 4 | 4
Tab 1a | 1b | 6a | 6b

PC 111

Catalog No. 534-80122

Printed in U.S.A.

Form 48/50HJ,62AQ-2SIS

Pg 1 9-02

Replaces: 48/50HJ,62AQ-1SIS

INSTALLATION

Step 1 — Inspect Shipment — File a claim with the shipping company if shipment is incomplete or damaged. See Fig. 1 for a typical shipping packaging for a COBRA™ energy recovery unit.

Step 2 — Provide Unit Support

ROOF CURB — The COBRA energy recovery unit can use a full-perimeter roof curb or a standard roof curb for the rooftop section of the unit with a supplemental equipment support for the

energy recovery section. The supplemental equipment support is not required. The standard rooftop unit roof curb is capable of supporting both the rooftop unit section and the energy recovery section. Assemble and install accessory roof curb in accordance with instructions shipped with curb. See Fig. 2A-4. Install insulation, cant strips, roofing felt, and counter flashing as shown. *Ductwork must be attached to curb, not to the unit. The accessory thru-the-bottom power and gas connection package must be installed before the unit is set on the roof curb.*


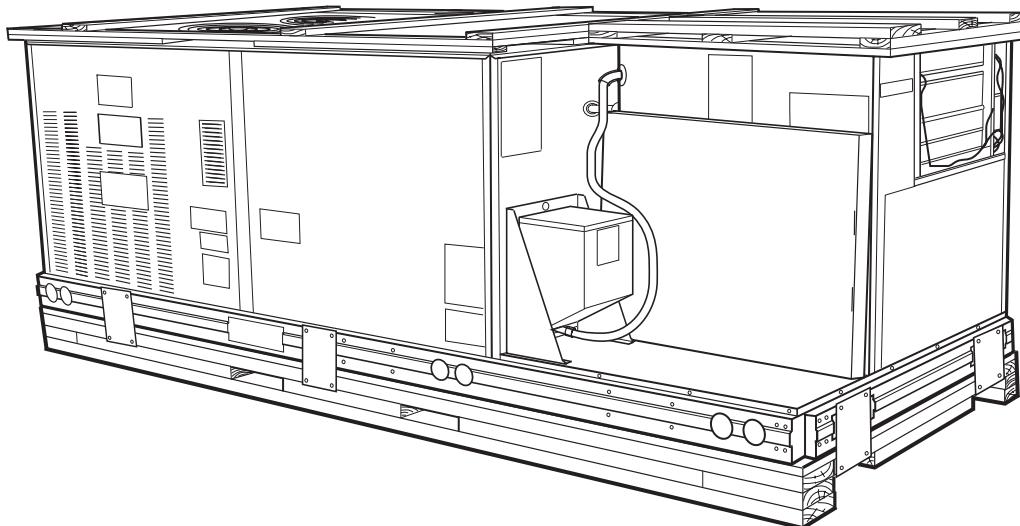



Fig. 1 — Shipping Packaging (48/50HJ004-006 Shown)

DUCT OPENING SIZES		
Supply = 13 7/8" x 20 1/4"		
R1 = 13 5/8" x 17 3/4"		
R2 = 13 5/8" x 12 5/16"		

R1 = Return from building to HVAC
R2 = Return from building to 62AQ

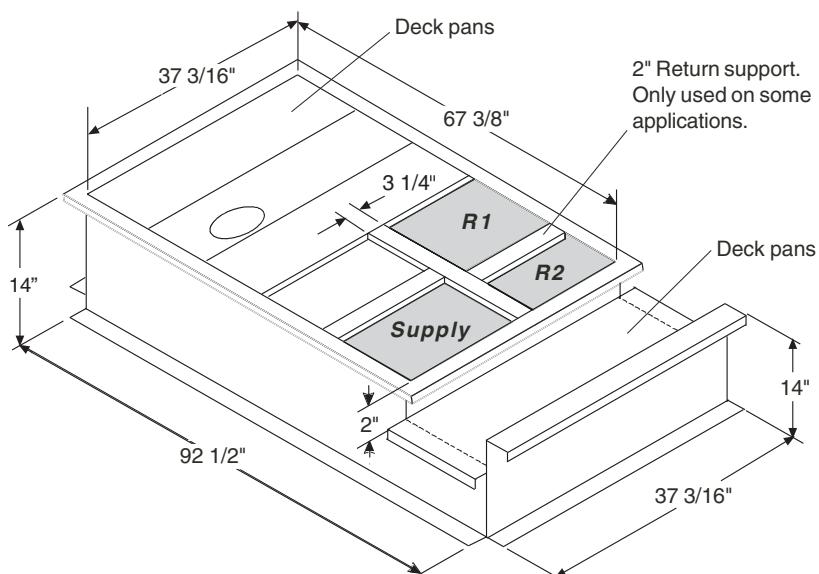

SIDE VIEW

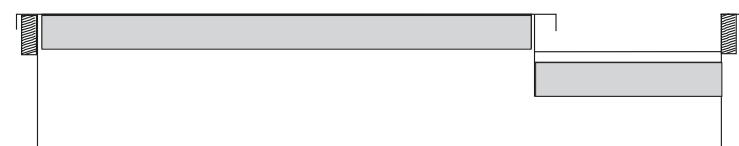

END VIEW


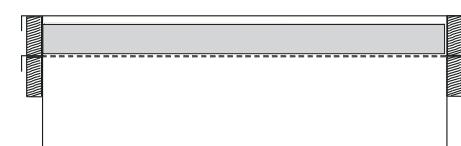



Fig. 2A — COBRA Energy Recovery Unit Full-Perimeter Roof Curb — 48/50HJ004-007 with 62AQ060,100

DUCT OPENING SIZES	
Supply = 15 11/16" x 31 3/8"	
R1 = 15 5/16" x 29 1/16"	
R2 = 15 5/16" x 9"	

R1 = Return from building to HVAC
R2 = Return from building to 62AQ

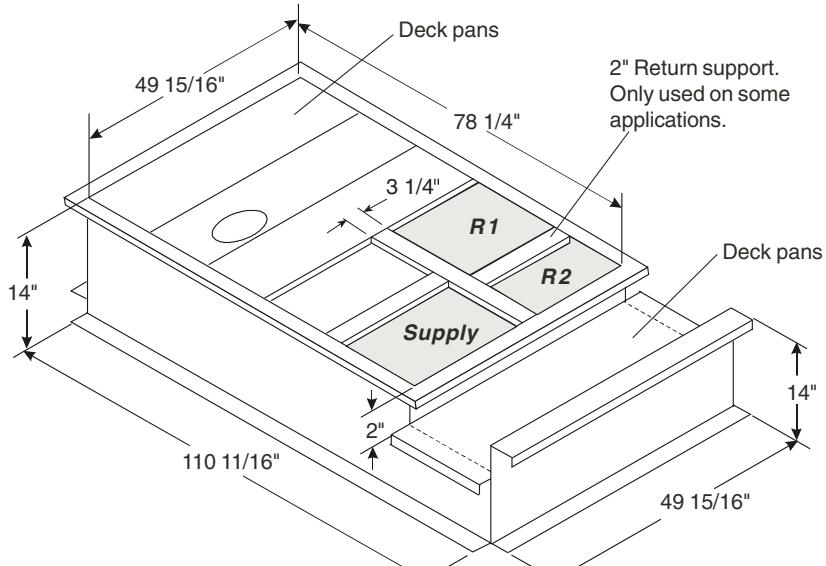

SIDE VIEW

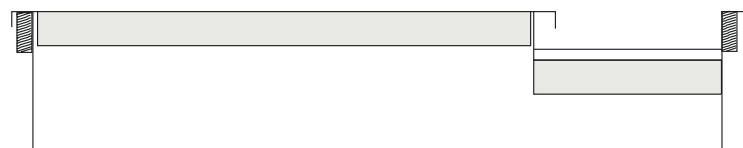

END VIEW

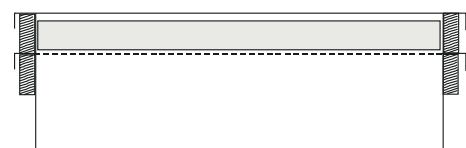


Fig. 2B — COBRA™ Energy Recovery Unit Full-Perimeter Roof Curb — 48/50HJ008-014 with 62AQ200,300

If electric control power or gas service is to be routed through the basepan, a field-installed accessory thru-the-bottom connection must be used. Attach the accessory to the basepan per the information in the accessory installation instructions. Thru-the-bottom connections must be installed before unit is set on roof.

If the combined unit roof curb is not being used, additional support may be desired under the energy recovery section of the unit. An accessory support and pad for the energy recovery section can be used. See Fig. 4. Place the protective rubber pad on the roof so that the edge near the unit is located about 6-in. from the end of the energy recovery section. Measure the distance from the bottom of energy recovery rails to the pad. Adjust the energy recovery equipment support to match the measured distance and screw into place with the 4 screws provided. See Fig. 4. Place the support underneath the energy recovery unit and on the protective rubber pad. This is done by lifting the end of the energy recovery section slightly above level and then sliding the support underneath the rails.

IMPORTANT: The gasketing of the unit to the roof curb is critical for a watertight seal. Install gasket supplied with the roof curb as shown in Fig. 3A and 3B. Improperly applied gasket can result in air leaks and poor unit performance.

Curb should be level. This is necessary for unit condensate drain to function properly. Refer to Accessory Roof Curb Installation Instructions for additional information as required.

Step 3 — Field Fabricate Ductwork — Secure all ducts to roof curb and building structure. *Do not connect ductwork to unit.* Insulate and weatherproof all external ductwork, joints, and roof openings with counter flashing and mastic in accordance with applicable codes. See Fig. 5A and 5B for duct dimensions.

Ducts passing through an unconditioned space must be insulated and covered with a vapor barrier. If a plenum return is used, the return should be ducted through the roof deck to comply with applicable fire codes.

A minimum clearance is not required around ductwork.

These units are designed for a minimum continuous heating return-air temperature of 50 F (dry bulb), or an intermittent operation down to 45 F (dry bulb), such as when used with a night set-back thermostat. To operate at lower return-air temperatures, a field-supplied outdoor-air temperature control must be used to initiate both stages of heat when the temperature is below 45 F. Indoor comfort may be compromised when these lower air temperatures are used with insufficient heating temperature rise.

CONNECTOR PKG. ACCY.	B	C	D ALT DRAIN HOLE	GAS	POWER	CONTROL
CRBTMPWR001A00				$\frac{3}{4}$ " [19] NPT	$\frac{3}{4}$ " [19] NPT	$\frac{1}{2}$ " [12.7]
CRBTMPWR002A00					$\frac{11}{4}$ " [31.7]	
CRBTMPWR003A00	1'-9 $\frac{11}{16}$ " [551]	1'-4" [406]	1 $\frac{3}{4}$ " [44.5]	$\frac{1}{2}$ " [12.7] NPT	$\frac{3}{4}$ " [19] NPT	$\frac{1}{2}$ " [12.7]
CRBTMPWR004A00				$\frac{3}{4}$ " [19] NPT	$\frac{11}{4}$ " [31.7]	

ROOF CURB ACCESSORY	A	UNIT SIZE
CRRFCURB001A00	1'-2" [356]	48/50HJ 004-007
CRRFCURB002A00	2'-0" [610]	

NOTES:

1. Roof curb accessory is shipped disassembled.
 2. Insulated panels.
 3. Dimensions in [] are in millimeters.
 4. Roof curb: galvanized steel.
 5. Attach ductwork to curb (flanges of duct rest on curb).
 6. Service clearance: 4 ft on each side.
 7. Direction of airflow.
 8. Connector packages CRBTMPWR001A00 and 002A00 are for thru-the-curb type gas. Packages CRBTMPWR003A00 and 004A00 are for thru-the-bottom type gas connections.

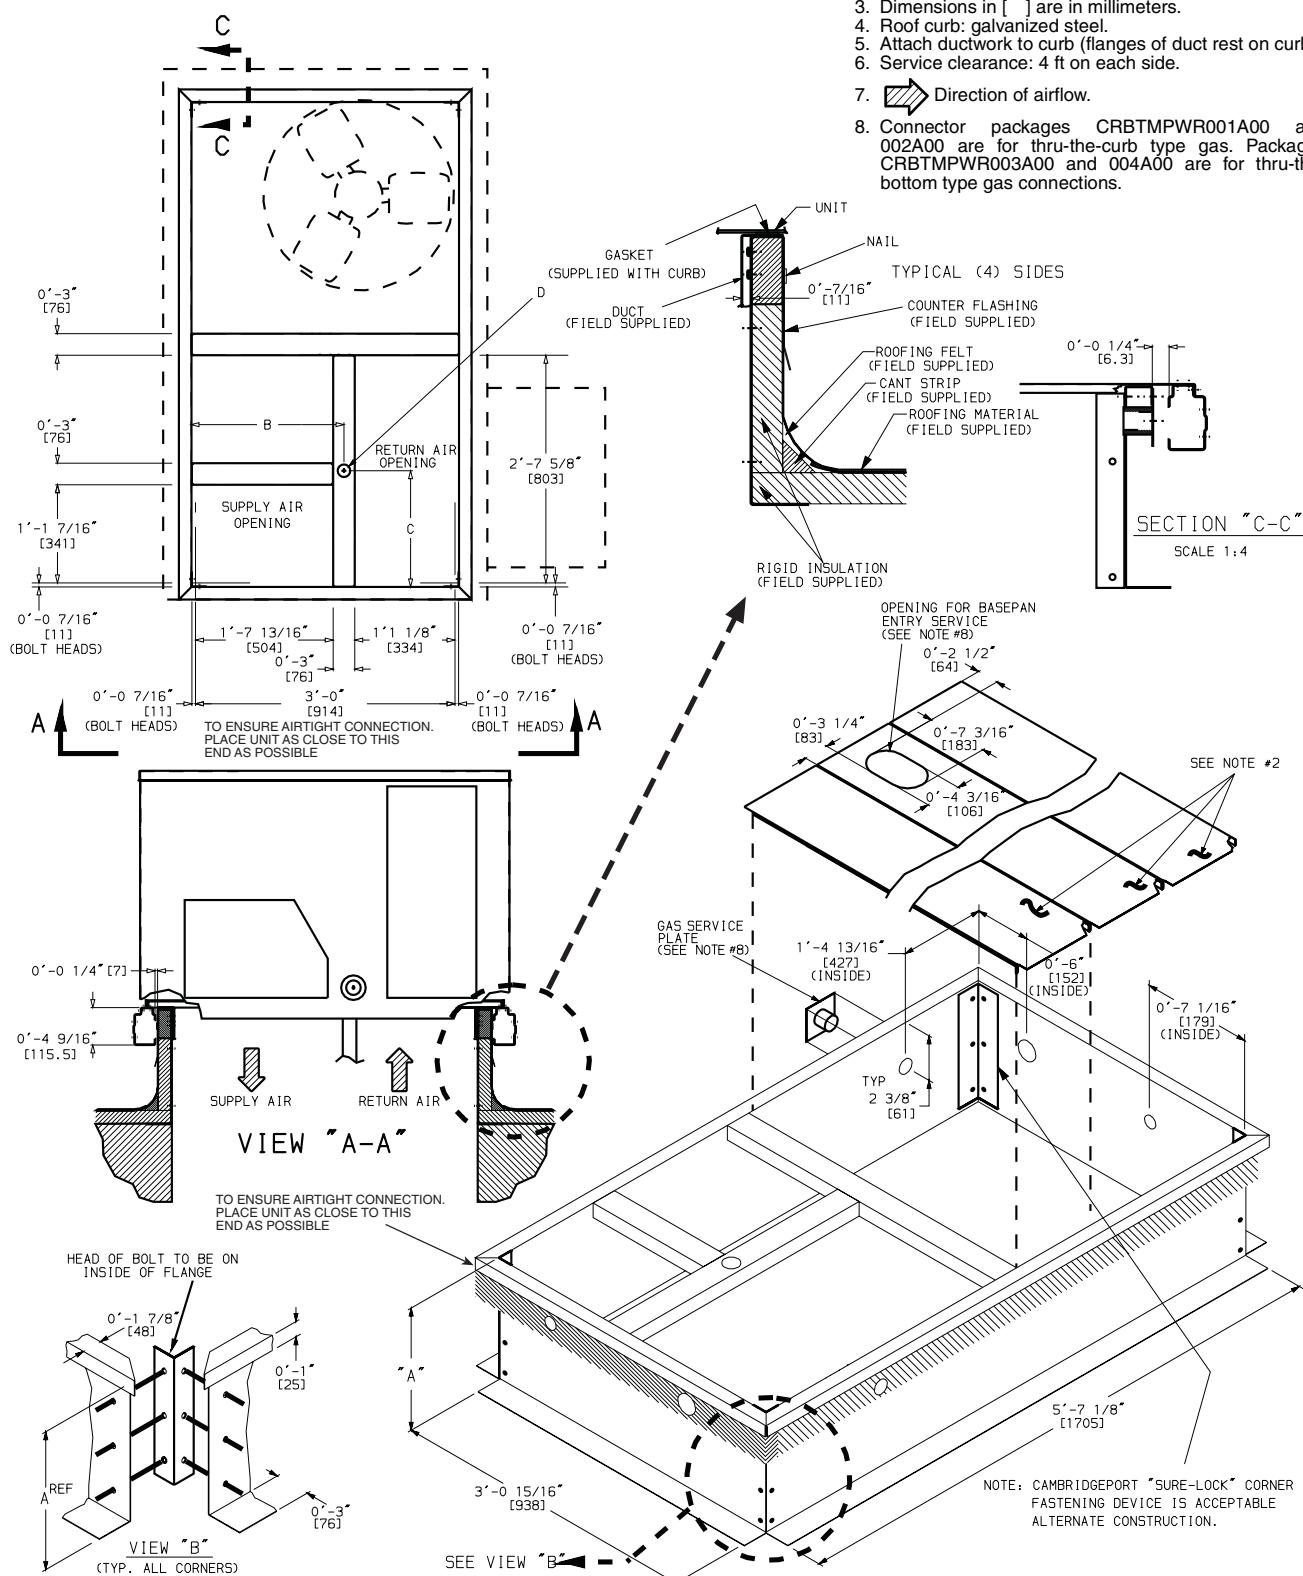


Fig. 3A — Roof Curb Details (48/50HJ004-007 Section Only)

CONNECTOR PKG. ACCY.	B	C	D ALT DRAIN HOLE	GAS	POWER	CONTROL
CRBTMPWR001A00				$\frac{3}{4}''$ [19] NPT	$\frac{3}{4}''$ [19] NPT	$\frac{1}{2}''$ [12.7] NPT
CRBTMPWR002A00				$\frac{1}{2}''$ [12.7] NPT	$\frac{3}{4}''$ [19] NPT	$\frac{1}{2}''$ [12.7] NPT
CRBTMPWR003A00	2'-8 $\frac{1}{16}$ " [827]	1'-10 $\frac{15}{16}$ " [583]	1 $\frac{3}{4}$ " [44.5]	$\frac{3}{4}''$ [19] NPT	$\frac{1}{2}''$ [12.7] NPT	
CRBTMPWR004A00				$\frac{3}{4}''$ [19] NPT	$\frac{1}{2}''$ [12.7] NPT	

ROOF CURB ACCESSORY	"A"	UNIT SIZE 48/50HJ
CRRFCURB003A00	1'-2" [356]	008-014
CRRFCURB004A00	2'-0" [610]	

NOTES:

1. Roof curb accessory is shipped disassembled.
2. Insulated panels: 1-in. thick polyurethane foam, 1 $\frac{3}{4}$ lb density.
3. Dimensions in [] are in millimeters.
4. Roof curb: 16-gage steel.
5. Attach ductwork to curb (flanges of duct rest on curb).
6. Service clearance 4 ft on each side.
7. Direction of airflow.
8. Connector packages CRBTMPWR001A00 and 2A00 are for thru-the-curb gas type. Packages CRBTMPWR003A00 and 4A00 are for thru-the-bottom type gas connections.


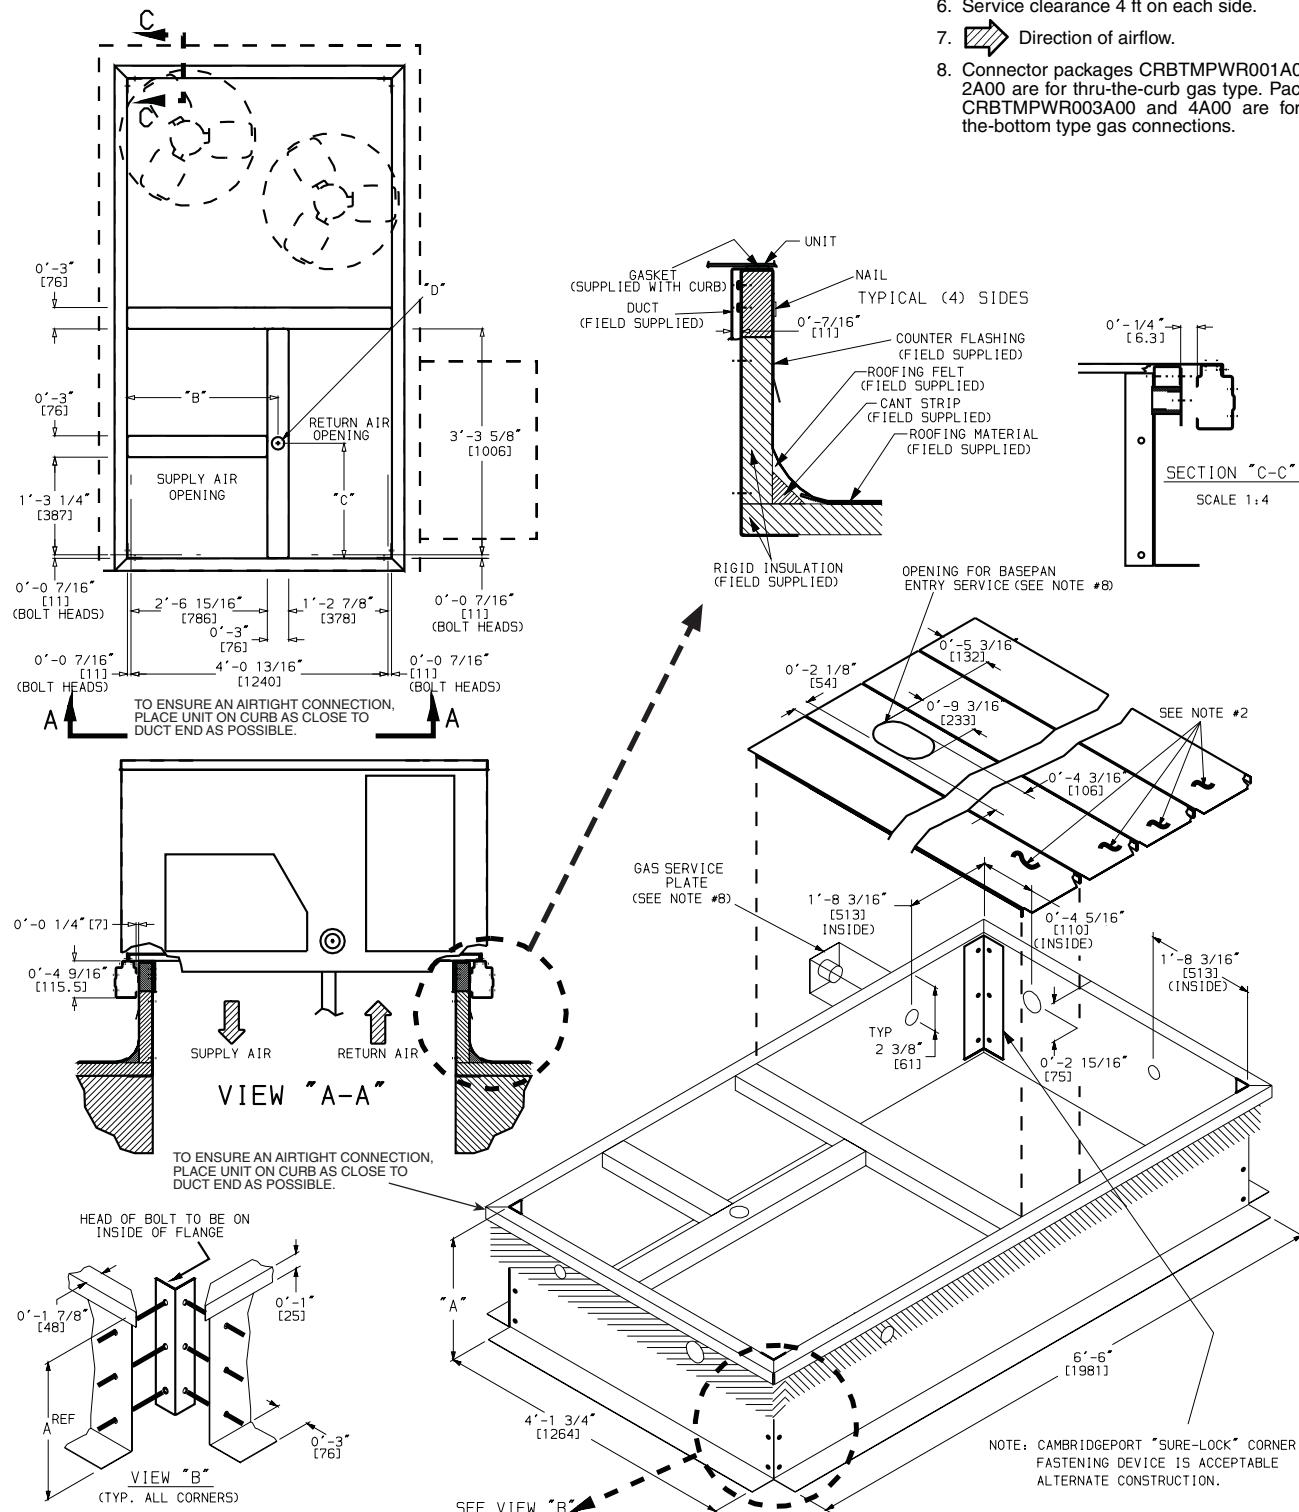


Fig. 3B — Roof Curb Details (48/50HJ008-014 Section Only)

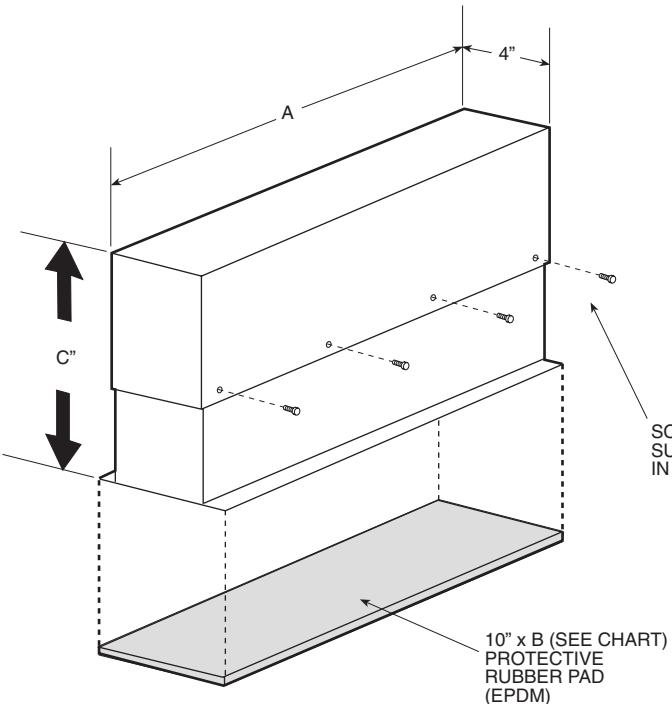

UNIT SIZE	EQUIPMENT SUPPORT PART NUMBER	DIMENSIONS (in.)		
		A	B	C
3-6 Ton	CRAQSUPT001A00	36.9	40	8 to 14
	CRAQSUPT002A00	36.9	40	14 to 24
7½-12½ Ton	CRAQSUPT003A00	49.7	54	8 to 14
	CRAQSUPT004A00	49.7	54	14 to 24

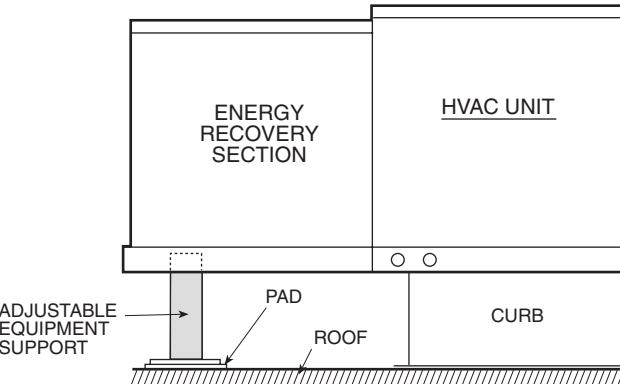


Fig. 4 — Supplemental Energy Recovery Section Equipment Support

Step 4 — Rig and Place Unit — Keep unit upright and do not drop. Spreader bars are not required if top crating is left on unit. Rollers may be used to move unit across a roof. Remove the bottom wooden skids that are under the unit by removing the wooden plates that hold the bottom wooden frame to the unit. Level by using unit frame as a reference. Lifting holes are provided in base rails as shown in Fig. 6A and 6B. Refer to rigging instructions on unit.

⚠ CAUTION

All panels must be in place when rigging.

POSITIONING — Maintain clearance around and above unit to provide minimum distance from combustible materials, proper airflow, and service access. A properly positioned unit will have the following clearances between unit and roof curb: 1/4-in. clearance between roof curb and base rails on each side and duct end of unit; 1/4-in. clearance between roof curb and condenser coil end of unit.

Do not install unit in an indoor location. Do not locate unit air inlets near exhaust vents or other sources of contaminated air.

Be sure that unit is installed such that snow will not block the combustion intake or flue outlet.

Unit may be installed directly on wood flooring or on Class A, B, or C roof-covering material when roof curb is used.

Although unit is weatherproof, guard against water from higher level runoff and overhangs.

Flue vent discharge must have a minimum horizontal clearance of 4 ft from electric and gas meters, gas regulators, and gas relief equipment.

Minimum distance between unit and other electrically live parts is 48 inches.

Flue gas can deteriorate building materials. Orient unit such that flue gas will not affect building materials. Locate mechanical draft system flue assembly at least 48 in. from an adjacent building or combustible material.

Adequate combustion- and ventilation-air space must be provided for proper operation of this equipment. Be sure that installation complies with all local codes and Section 5.3, Air for Combustion and Ventilation, NFGC (National Fuel Gas Code), and ANSI (American National Standards Institute) Z223.1, and NFPA (National Fire Protection Association) 54 TIA-54-84-1. In Canada, installation must be in accordance with the CAN1-B149 installation codes for gas burning appliances.

After unit is in position, remove rigging skids and shipping materials.

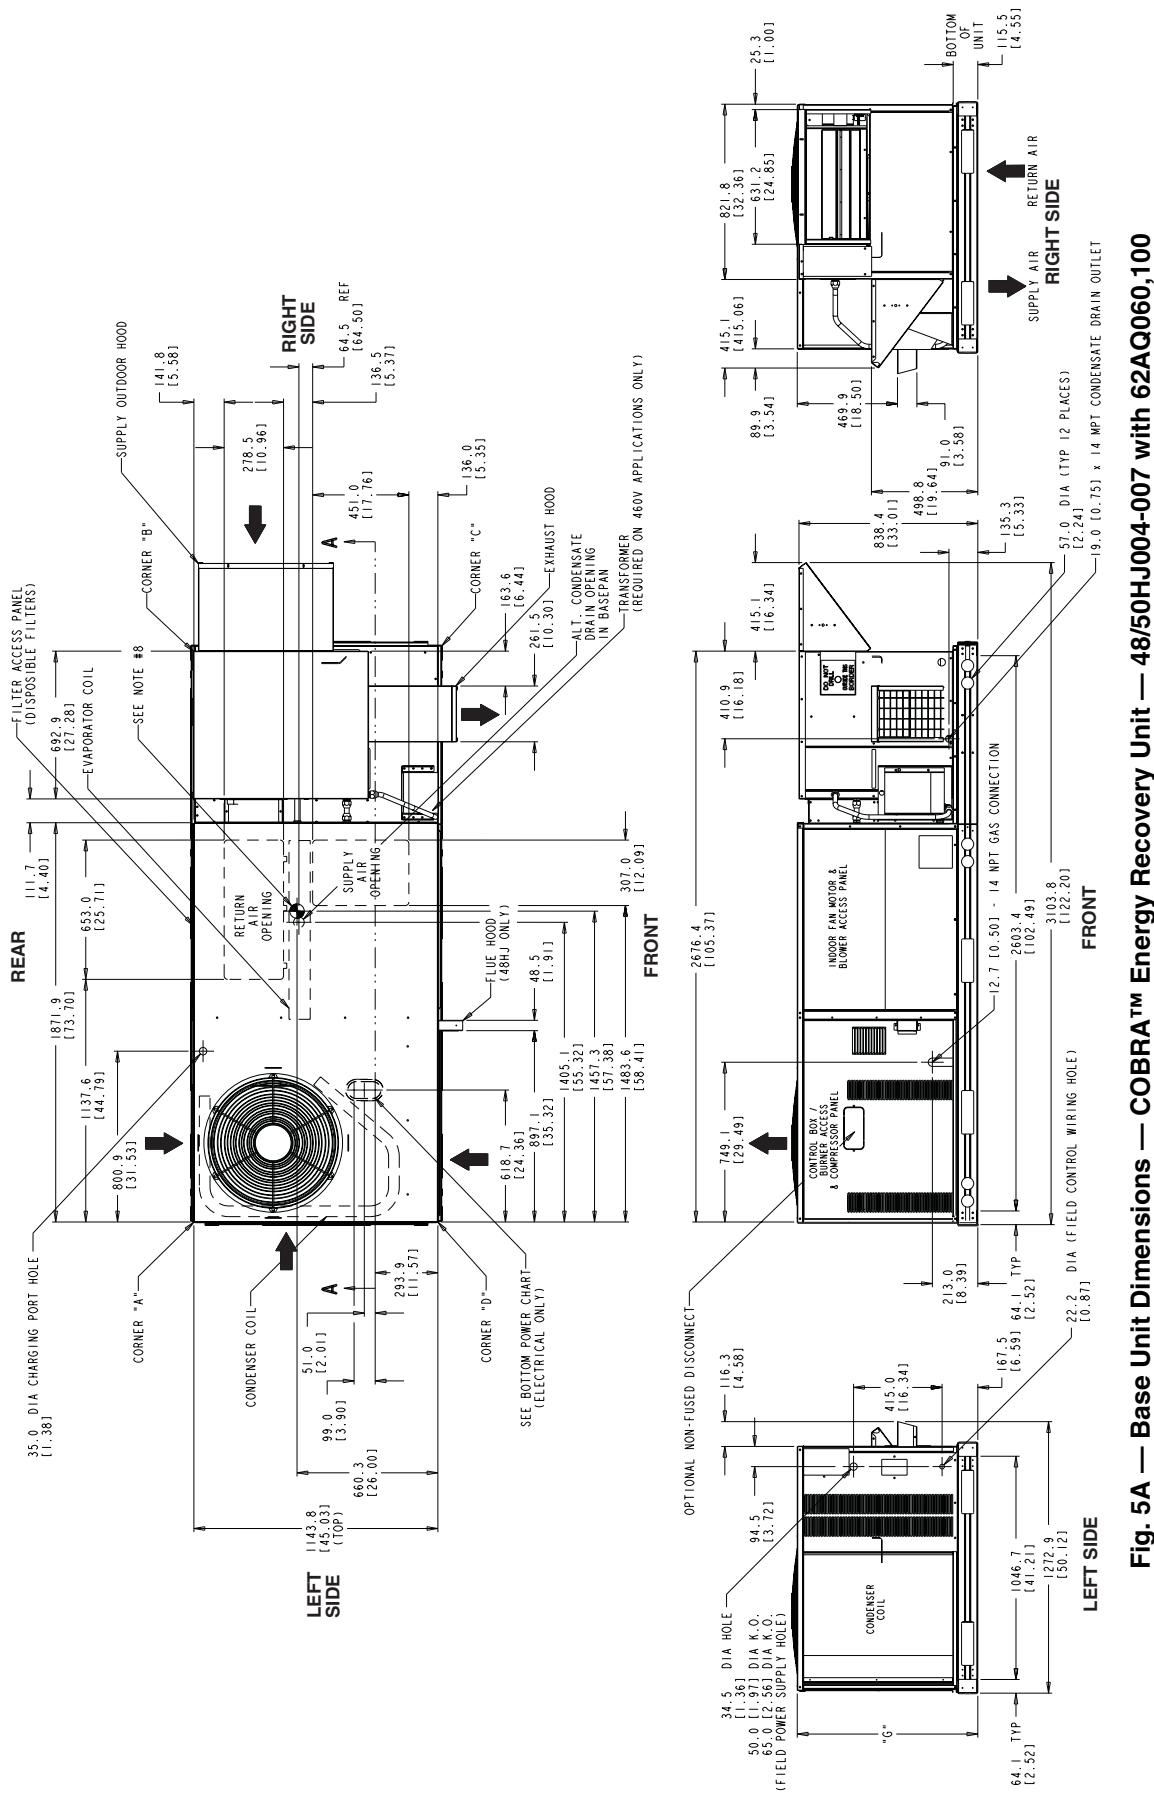


Fig. 5A—Base Unit Dimensions—COBRA™ Energy Recovery Unit—48/50HJ004-007 with 62AQ060,100

SINGLE ZONE ELECTRIC COOLING WITH GAS HEAT											
UNIT	ELECTRICAL CHARACTERISTICS			UNIT WEIGHT			CORNER WEIGHT "A"			CORNER WEIGHT "D"	
	LBS	KG	LBS	KG	LBS	KG	LBS	KG	LBS		
48HJ004 W/62AQ0060	208/230-1-60	208/230-3-60	460-3-60	890	404	234	106	280	127	205	93
48HJ004 W/62AQ100	208/230-1-60	208/230-3-60	460-3-60	905	411	238	108	284	129	208	94
48HJ005 W/62AQ0050	208/230-1-60	208/230-3-60	460-3-60	900	409	237	107	283	128	207	94
48HJ005 W/62AQ100	208/230-1-60	208/230-3-60	460-3-60	915	415	241	109	288	130	211	96
48HJ006 W/62AQ0060	208/230-1-60	208/230-3-60	460-3-60	920	418	242	110	289	131	212	96
48HJ006 W/62AQ100	208/230-1-60	208/230-3-60	460-3-60	935	425	246	112	294	133	215	98
48HJ007 W/62AQ0060	208/230-3-60	460-3-60		915	452	262	119	313	142	229	104
48HJ007 W/62AQ100	208/230-3-60	460-3-60		1010	459	266	120	317	144	232	105

SINGLE ZONE ELECTRIC COOLING											
UNIT	ELECTRICAL CHARACTERISTICS			UNIT WEIGHT			CORNER WEIGHT "A"			CORNER WEIGHT "D"	
	LBS	KG	LBS	KG	LBS	KG	LBS	KG	LBS		
50HJ004 W/62AQ0060	208/230-1-60	208/230-3-60	460-3-60	795	361	209	95	250	113	183	83
50HJ004 W/62AQ100	208/230-1-60	208/230-3-60	460-3-60	810	368	213	97	255	115	186	85
50HJ005 W/62AQ0050	208/230-1-60	208/230-3-60	460-3-60	805	365	212	96	253	115	185	84
50HJ005 W/62AQ100	208/230-1-60	208/230-3-60	460-3-60	820	372	216	98	258	117	189	86
50HJ006 W/62AQ0060	208/230-1-60	208/230-3-60	460-3-60	825	375	217	98	259	118	190	86
50HJ006 W/62AQ100	208/230-1-60	208/230-3-60	460-3-60	840	381	221	100	264	120	193	88
50HJ007 W/62AQ0060	208/230-1-60	208/230-3-60	460-3-60	880	400	231	105	277	125	203	92
50HJ007 W/62AQ100	208/230-3-60	460-3-60		895	407	235	107	281	128	206	93


NOTES:

1. DIMENSIONS IN [] ARE IN INCHES.
2. CENTER OF GRAVITY.
3. DIRECTION OF AIR FLOW.
4. DUCTWORK TO BE ATTACHED TO ACCESSORY ROOF CURB ONLY.
5. HJ - MINIMUM CLEARANCE LOCAL CODES OR JURISDICTION MAY PREVAIL. :
o. BETWEEN UNIT FLUE SIDE AND COMBUSTIBLE SURFACES - 48 INCHES.
18 INCHES WHEN USING ACCESSORY FLUE DISCHARGE DEFLECTOR.
6. BOTTOM OF UNIT TO COMBUSTIBLE SURFACES (WHEN NOT USING CURB) 1 INCH BOTTOM OF BASE RAILLION TO COMBUSTIBLE SURFACES (WHEN NOT USING CURB) 0 INCHES.
7. CONDENSER COIL FOR PROPER AIR FLOW 36 INCHES ONE SIDE, 12 INCHES THE OTHER. THE SIDE GETTING THE GREATER CLEARANCE IS OPTIONAL.
d. OVERHEAD 60 INCHES TO ASSURE PROPER CONDENSER FAN OPERATION.
8. BETWEEN UNITS, CONTROL BOX SIDE 42 IN PER NEC SIDE, BETWEEN UNIT AND UNGROUNDED SURFACES, CONTROL BOX SIDE 36 IN. BE BETWEEN UNITS AND BLOCK OR CONCRETE WALLS AND OTHER GROUNDED SURFACES. CONTROL BOX SIDE .42 IN. PER NC. ALTERNATE CONDENSATE DRAIN IS USED.
9. MINIMUM CLEARANCE (LOCAL CODES OR JURISDICTION MAY PREVAIL.)
o. BETWEEN UNIT (CONTROL/EXHAUST SIDE) AND OTHER GROUNDED SURFACES. 36 INCHES AND BLOCK OR CONCRETE WALLS AND OTHER GROUNDED SURFACES.
- b. FILTER ACCESS SIDE, 30 INCHES.
SUPPLY AIR INTAKE, 36 INCHES.
- EXHAUST AIR SIDE, 36 INCHES.
- WITH THE EXCEPTION OF THE CLEARANCE FOR THE CONDENSER COIL AND COMBUSTIBLE SIDE AS STATED IN NOTE #o b AND c, A REMOVABLE FENCE OR BARRICADE REQUIRES NO CLEARANCE.
7. UNITS MAY BE INSTALLED ON COMBUSTIBLE FLOORS MADE FROM WOOD OR CLASS A, B, OR C ROOF COVERING MATERIAL IF SET ON BASE RAIL.
8. THE VERTICAL CENTER OF GRAVITY IS 1'-6" (457) UP FROM THE BOTTOM OF THE BASIC RAIL.

BOTTOM POWER CHART: THESE HOLES RED FOR USE CRBTIMPWR001A00, 3A00 12.7 [0.50], 19.0 [0.75] CRBTIMPWR02A00, 4A00 12.7 [0.50], 31.8 [1.25]			
THREADED CONDUT SHELL	WIRE USE	RED HOLE SIZE (MAX.)	RED HOLE SIZE (MAX.)
[1.2-7] [0.50]	24V	22.2 [0.88]	
[1.9-0] [0.75]	POWER • POWER • GAS	28.4 [1.12] 44.4 [1.75] 31.8 [1.25]	
[31.7] [1.25]			
[0.063] 12.7 [0.50] FPT			
[0.064] 19.0 [0.75] FPT			

* - SELECT EITHER 19.0 [0.75] OR 31.8 [1.25]


FOR POWER, DEPENDING ON WIRE SIZE.

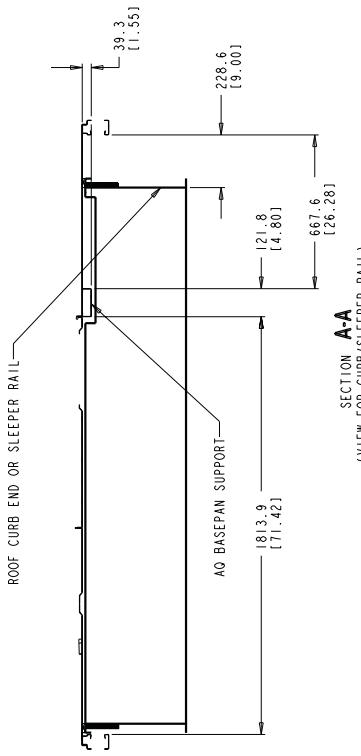

SECTION A-A
(VIEW FOR CURB/SLEEPER RAIL)

Fig. 5A — Base Unit Dimensions — COBRA™ Energy Recovery Unit — 48/50HJ004-007 with 62AQ060,100 (cont)

Fig. 5B — Base Unit Dimensions — COBRA™ Energy Recovery Unit — 48/50HJ008-014 with 62AQ200,300

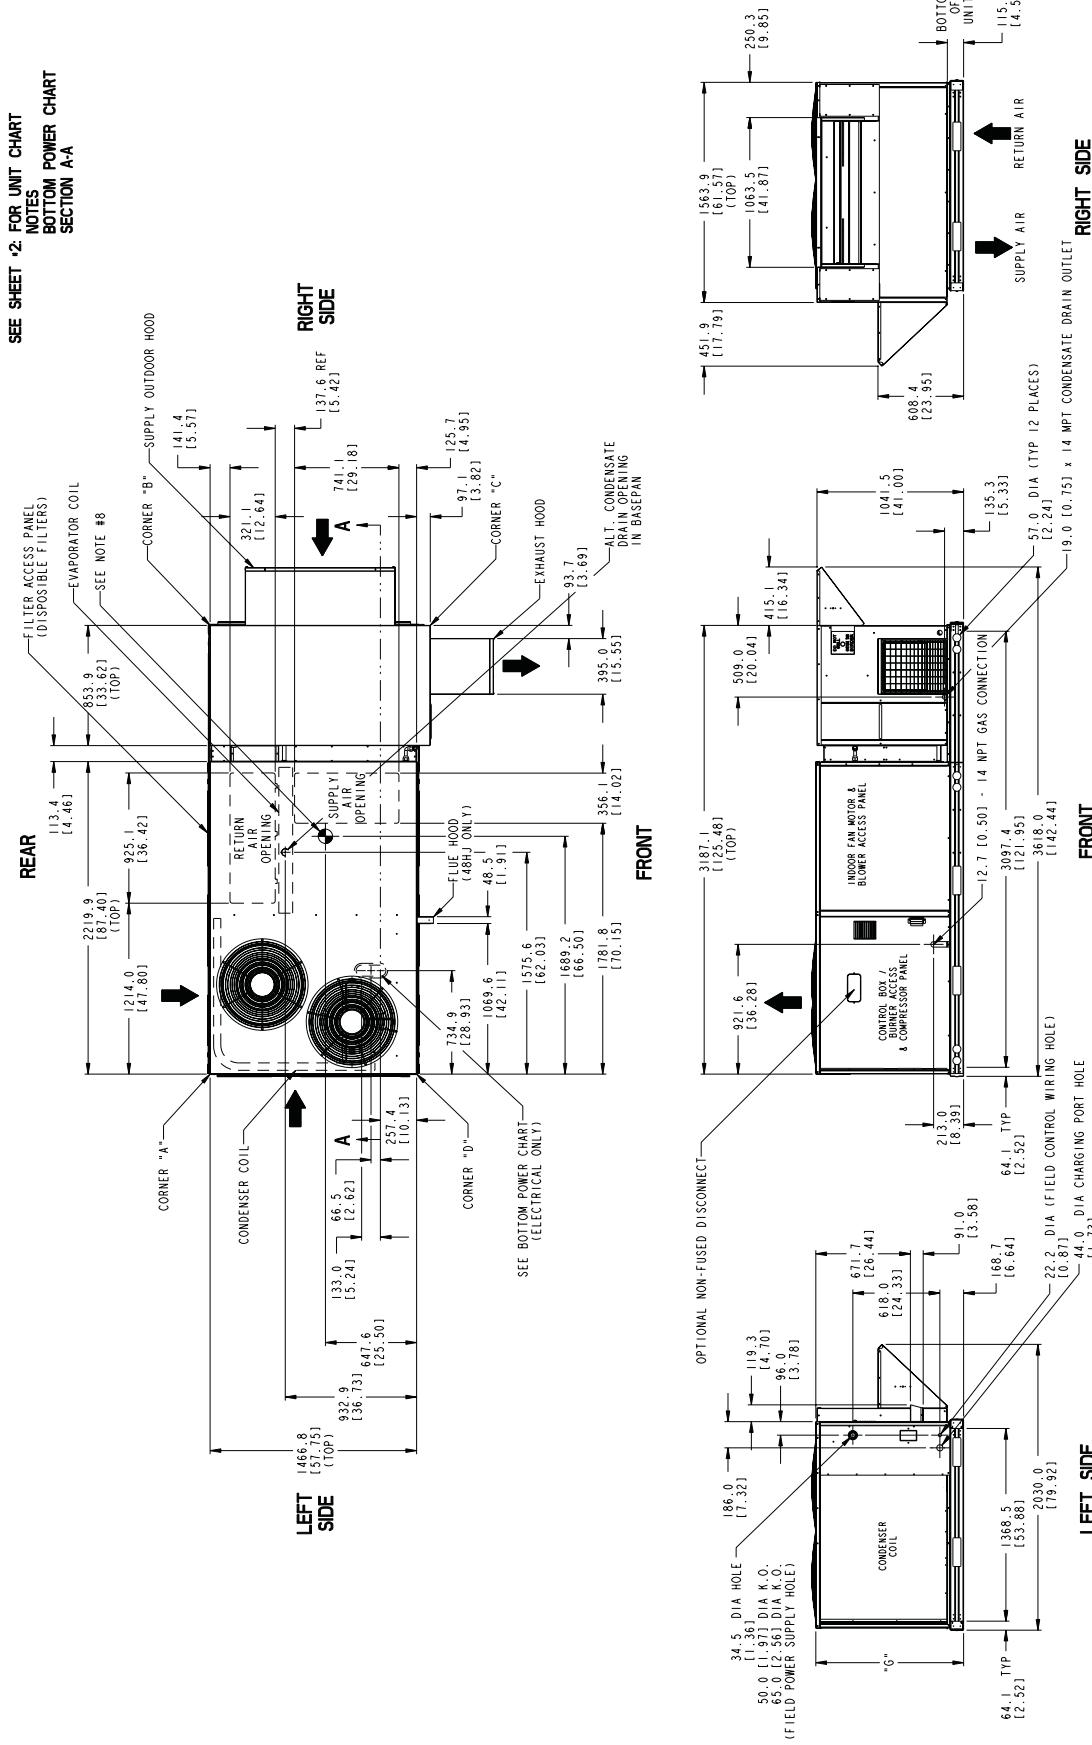

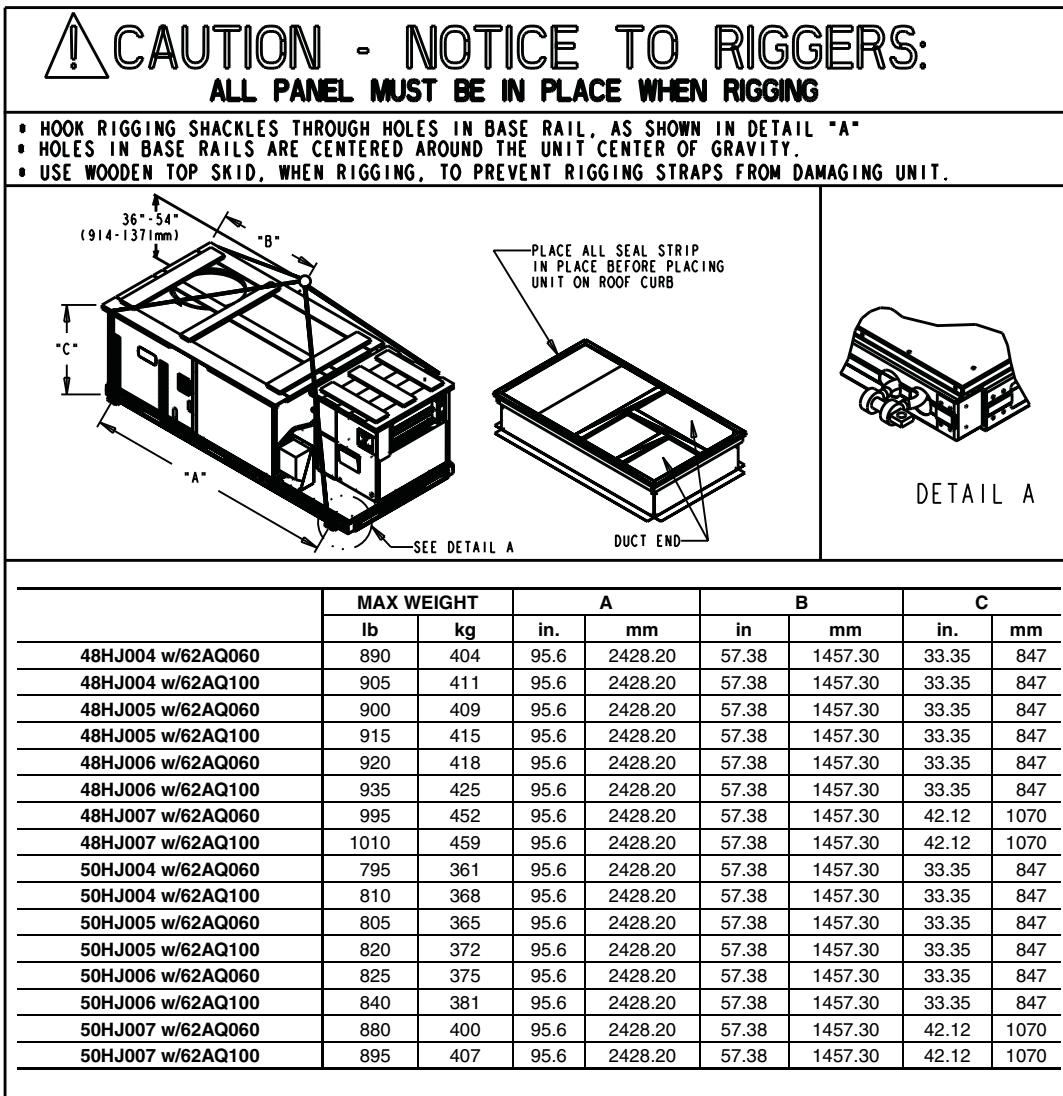


Fig. 6A — Rigging Label — COBRA™ Energy Recovery Unit — Sizes 48/50HJ004-007

Step 5 — Install Flue Hood (48HJ Rooftop Sections Only) — Refer to the 48HJ installation instructions for information on installing the flue hood.

Step 6 — Install Gas Piping (48HJ Rooftop Sections Only) — Refer to the 48HJ installation instructions for information on installing the gas piping.

Step 7 — Install External Trap For Condensate Drain — The condensate from the rooftop unit along with condensate from the upper coil of the energy recovery section is internally piped to the condensate pan in the lower section of the energy recovery section. For this reason, the bottom drain on the rooftop unit CANNOT be used for a condensate drain. The $\frac{3}{4}$ -in. drain connection on the energy recovery section is located near the bottom left of the exhaust air section. See Fig. 5A and 5B. The energy recovery section must have a field-fabricated, external, P-trap installed for condensate drainage. Trap must be at least 4-in. deep to protect against freeze-up. If the drain line is installed downstream from the external

trap, pitch the line away from the unit at 1-in. per 10-ft of run. Do not use a pipe smaller than the connection ($\frac{3}{4}$ -in.).

Step 8 — Make Electrical Connections

⚠ WARNING

Unit cabinet must have an uninterrupted, unbroken electrical ground to minimize the possibility of personal injury if an electrical fault should occur. This ground may consist of electrical wire connected to unit ground lug in control compartment, or conduit approved for electrical ground when installed in accordance with NEC (National Electrical Code), ANSI/NFPA, latest edition, and local electrical codes. *Do not use gas piping as an electrical ground.* Failure to follow this warning could result in the installer being liable for personal injury of others.




FIELD POWER SUPPLY — All units except 208/230-v units are factory wired for the voltage shown on the nameplate.



CAUTION - NOTICE TO RIGGERS:

ALL PANEL MUST BE IN PLACE WHEN RIGGING

- HOOK RIGGING SHACKLES THROUGH HOLES IN BASE RAIL, AS SHOWN IN DETAIL "A"
- HOLES IN BASE RAILS ARE CENTERED AROUND THE UNIT CENTER OF GRAVITY.
- USE WOODEN TOP SKID, WHEN RIGGING, TO PREVENT RIGGING STRAPS FROM DAMAGING UNIT.

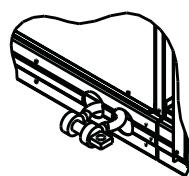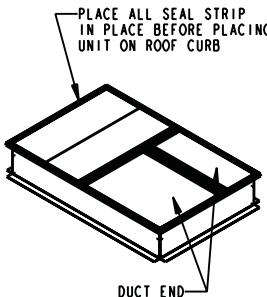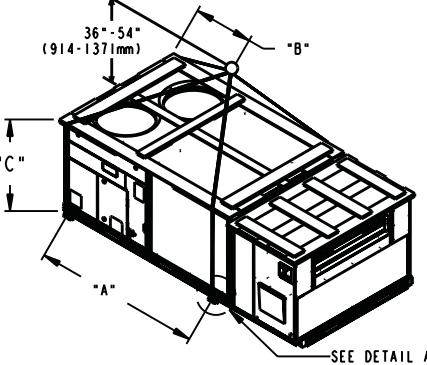

DETAIL A

	MAX WEIGHT		A		B		C	
	lb	kg	in.	mm	in.	mm	in.	mm
48HJ008 w/62AQ200	1310	595	77.42	1966.5	66.50	1689.10	42.12	1070
48HJ008 w/62AQ300	1355	616	77.42	1966.5	66.50	1689.10	42.12	1070
48HJ009 w/62AQ200	1315	597	77.42	1966.5	66.50	1689.10	42.12	1070
48HJ009 w/62AQ300	1360	618	77.42	1966.5	66.50	1689.10	42.12	1070
48HJ012 w/62AQ200	1400	636	77.42	1966.5	66.50	1689.10	50.12	1273
48HJ012 w/62AQ300	1445	657	77.42	1966.5	66.50	1689.10	50.12	1273
48HJ014 w/62AQ200	1440	655	77.42	1966.5	66.50	1689.10	50.12	1273
48HJ014 w/62AQ300	1485	675	77.42	1966.5	66.50	1689.10	50.12	1273
50HJ008 w/62AQ200	1240	564	77.42	1966.5	66.50	1689.10	42.12	1070
50HJ008 w/62AQ300	1285	584	77.42	1966.5	66.50	1689.10	42.12	1070
50HJ009 w/62AQ200	1245	566	77.42	1966.5	66.50	1689.10	42.12	1070
50HJ009 w/62AQ300	1290	586	77.42	1966.5	66.50	1689.10	42.12	1070
50HJ012 w/62AQ200	1325	602	77.42	1966.5	66.50	1689.10	42.12	1070
50HJ012 w/62AQ300	1370	623	77.42	1966.5	66.50	1689.10	42.12	1070
50HJ014 w/62AQ200	1345	620	77.42	1966.5	66.50	1689.10	42.12	1070
50HJ014 w/62AQ300	1410	641	77.42	1966.5	66.50	1689.10	42.12	1070

50HJ540776 -

Fig. 6B — Rigging Label — COBRA™ Energy Recovery Unit — Sizes 48/50HJ008-014

If the 208/230-v unit is to be connected to a 208-v power supply, the transformer must be rewired by moving the black wire with the 1/4-in. female space connector from the 230-volt connection and moving to the 200-volt 1/4-in. male terminal on the primary side of the transformer.

Refer to unit label diagram for additional information. Pig-tails are provided for field wire connections. Use factory-supplied splices or UL (Underwriters' Laboratories) approved copper/aluminum connector.

When installing units, provide a disconnect per the NEC.

All field wiring must comply with NEC and local requirements.

Install field wiring as follows:

1. Install conduit through side panel openings. Install conduit between disconnect and control box.
2. Install power lines to terminal connections as shown in Fig. 7.

Voltage to compressor terminals during operation must be within voltage range indicated on unit nameplate (see Tables 1A-1H). On 3-phase units, voltages between phases must be balanced within 2% and the current within 10%. Use the formula shown in the legend for Tables 1A-1H, Note 2 to determine the percent of voltage imbalance. Operation on improper line voltage or excessive phase imbalance constitutes abuse and

may cause damage to electrical components. Such operation would invalidate any applicable Carrier warranty.

FACTORY-SUPPLIED NON-FUSED DISCONNECT — The factory-supplied disconnect is capable of handling disconnect amps up to 80 A for a COBRA Energy Recovery unit. For disconnect amps greater than 80 A, a field-supplied disconnect is required.

FIELD CONTROL WIRING — *Install a Carrier-approved accessory thermidistat assembly according to installation instructions included with the accessory.* Locate thermidistat assembly on a solid wall in the conditioned space to sense average temperature in accordance with thermidistat installation instructions on page 30. Connect thermidistat wires to terminal board.

Route thermidistat cable or equivalent single leads of colored wire from subbase terminals through connector on unit to low-voltage connections (shown in Fig. 8). Thermidistat control wiring is routed to both the rooftop unit control box and the energy recovery section control box.

If a PremierLink™ control is used, a thermidistat does not need to be used. A humidistat and a separate room air sensor are used. Two extra terminal blocks (TB2 and TB3) are provided in the control box for all units with PremierLink controls. No wiring should be directly connected to the PremierLink control. Wire sensors to TB2 or TB3. Humidistat is wired to TB1 and energy recovery section control box.

NOTE: For wire runs up 50 ft, use no. 18 AWG (American Wire Gage) insulated wire (35 C minimum). For 50 to 75 ft, use no. 16 AWG insulated wire (35 C minimum). For over 75 ft, use no. 14 AWG insulated wire (35 C minimum). All wire larger than no. 18 AWG cannot be directly connected to the thermostat and will require a junction box and splice at the thermostat.

Pass the control wires through the hole provided in the corner post; then feed wires through the raceway built into the corner post to the 24-v barrier located on the left side of the

control box. See Fig. 10. The raceway provides the UL required clearance between high- and low-voltage wiring.

NOTE: A humidistat and a temperature sensor can be used in place of a thermistor for PremierLink™ units.

HEAT ANTICIPATOR SETTINGS — Set heat anticipator settings at .14 amp for the first stage and .14 amp for second-stage heating, when available.

Table 1A — Electrical Data (COBRA™ Energy Recovery 48HJ004-007 Units with 62AQ060)

UNIT	NOMINAL V-PH-Hz	IFM TYPE	CONV OUTLET	62AQ FLA	POWER SUPPLY		DISCONNECT SIZE*	
					MCA	FUSE OR HACR BKR	FLA	LRA
48HJ004	208/230-1-60	STD	NO	9.2	34.8/34.8	40/40	35/35	135/135
		STD	YES	9.2	40.8/40.8	45/45	41/41	140/140
	208/230-3-60	STD	NO	9.2	27.7/27.7	35/35	29/29	124/124
		STD	YES	9.2	33.7/33.7	40/35	34/34	129/129
		HIGH STATIC	NO	9.2	28.6/28.6	35/35	30/30	154/154
	460-3-60	HIGH STATIC	YES	9.2	34.6/34.6	40/40	35/35	158/158
		STD	NO	9.2	13.6	20	14	63
		STD	YES	9.2	16.3	20	20	67
48HJ005	208/230-1-60	HIGH STATIC	NO	9.2	14.0	20	15	77
		HIGH STATIC	YES	9.2	16.7	20	20	82
	208/230-3-60	STD	NO	9.2	44.4/44.4	60/60	44/44	173/173
		STD	YES	9.2	50.4/50.4	60/60	50/50	178/178
		HIGH STATIC	NO	9.2	31.7/31.7	40/40	33/33	140/140
	460-3-60	HIGH STATIC	YES	9.2	37.7/37.7	40/40	38/38	145/145
		STD	NO	9.2	32.6/32.6	40/40	34/34	170/170
		STD	YES	9.2	38.6/38.6	45/45	39/39	174/174
48HJ006	208/230-1-60	HIGH STATIC	NO	9.2	15.2	20	16	70
		HIGH STATIC	YES	9.2	17.9	20	21	75
	208/230-3-60	STD	NO	9.2	15.6	20	16	84
		STD	YES	9.2	18.3	20	22	89
		HIGH STATIC	NO	9.2	19.3	25	20	101
	460-3-60	HIGH STATIC	YES	9.2	22.0	25	25	106
		STD	NO	9.2	20.1	25	20	110
		STD	YES	9.2	22.8	25	26	115
48HJ007	208/230-3-60	STD	NO	9.2	42.0/42.0	50/50	42/42	234/234
		STD	YES	9.2	48.0/48.0	60/60	48/48	239/239
	208/230-3-60	HIGH STATIC	NO	9.2	43.7/43.7	50/50	44/44	253/253
		HIGH STATIC	YES	9.2	49.7/49.7	60/60	50/50	258/258
		STD	NO	9.2	19.8	25	20	114
	460-3-60	STD	YES	9.2	22.5	25	26	118
		HIGH STATIC	NO	9.2	20.6	25	21	123
		HIGH STATIC	YES	9.2	23.3	30	26	128

LEGEND

- FLA — Full Load Amps
- HACR — Heating, Air Conditioning and Refrigeration
- IFM — Indoor (Evaporator) Fan Motor
- LRA — Locked Rotor Amps
- MCA — Minimum Circuit Amps
- MOCP — Maximum Overcurrent Protection
- NEC — National Electrical Code
- UL — Underwriters' Laboratories

*Used to determine minimum disconnect per NEC.


†Single point box CRSINGLE017A00 is part of base unit.

NOTES:

- In compliance with NEC requirements for multimotor and combination load equipment (refer to NEC Articles 430 and 440), the overcurrent protective device for the unit shall be fuse or HACR breaker. UL, Canada units may be fuse or circuit breaker.
- Unbalanced 3-Phase Supply Voltage**
Never operate a motor where a phase imbalance in supply voltage is greater than 2%. Use the following formula to determine the percent of voltage imbalance.

$$= 100 \times \frac{\text{max voltage deviation from average voltage}}{\text{average voltage}}$$

Example: Supply voltage is 460-3-60.



$$\begin{aligned} AB &= 452 \text{ v} \\ BC &= 464 \text{ v} \\ AC &= 455 \text{ v} \\ \text{Average Voltage} &= \frac{452 + 464 + 455}{3} \\ &= 1371 \end{aligned}$$

$$= 457$$

Determine maximum deviation from average voltage.

$$\begin{aligned} (AB) 457 - 452 &= 5 \text{ v} \\ (BC) 464 - 457 &= 7 \text{ v} \\ (AC) 457 - 455 &= 2 \text{ v} \end{aligned}$$

Maximum deviation is 7 v.

Determine percent of voltage imbalance.

$$\begin{aligned} \% \text{ Voltage Imbalance} &= 100 \times \frac{7}{457} \\ &= 1.53\% \end{aligned}$$

This amount of phase imbalance is satisfactory as it is below the maximum allowable 2%.

IMPORTANT: If the supply voltage phase imbalance is more than 2%, contact your local electric utility company immediately.



Table 1B — Electrical Data (COBRA™ Energy Recovery 50HJ004-007 Units with 62AQ060)

UNIT	NOMINAL V-PH-Hz	IFM TYPE	CONV OUTLET	62AQ FLA	HEATER CRHEATER ---A00	HEAT	POWER SUPPLY			SINGLE POINT BOX CRSINGLE ---A00	DISCONNECT SIZE*	
						FLA	MCA	FUSE OR HACR BKR	MOCP	FLA	LRA	
50HJ004	208/230-1-60	STD	NO	9.2	NONE 001 002 003 004 002+002	—/ 15.9/18.3 23.5/27.1 31.4/36.3 37.9/43.8 46.9/54.2	34.8/ 34.8 35.7/ 38.8 45.2/ 49.7 50/50	40/40 40/45 —	—	—	35/ 35 35/ 37 43/ 47 52/ 58 60/ 67 70/ 79	135/135 135/135 135/135 135/135 135/135 135/135
					NONE 001 002 003 004 002+002	—/ 15.9/18.3 23.5/27.1 31.4/36.3 37.9/43.8 46.9/54.2	40.8/ 40.8 40.8/ 43.0 50.0/ 53.9 — 60/70	45/45 45/50 60/60	—	—	41/ 41 41/ 42 49/ 52 58/ 63 65/ 71 76/ 83	140/140 140/140 140/140 140/140 140/140 140/140
		STD	YES	9.2	NONE 001 002 003 004 002+002	—/ 15.9/18.3 23.5/27.1 31.4/36.3 37.9/43.8 46.9/54.2	27.7/ 27.7 27.7/ 29.1 32.8/ 35.4 38.5/ 42.0 45/45 57.5/ 64.0	35/35 35/35 40/40 — 60/70	—	—	29/ 29 29/ 29 32/ 34 37/ 40 41/ 45 55/ 60	124/124 124/124 124/124 124/124 124/124 124/124
					NONE 001 002 003 004 005	—/ 9.2/10.6 13.6/15.6 18.1/20.9 21.9/25.3 33.4/38.5	33.7/ 33.7 33.7/ 33.7 37.6/ 39.6 43.3/ 46.2 48.0/ 51.6 62.3/ 68.2	40/35 40/40 45/45 50/50 — 70/70	—	—	34/ 34 34/ 34 37/ 39 43/ 45 47/ 50 60/ 65	129/129 129/129 129/129 129/129 129/129 129/129
		208/230-3-60	STD	NO	NONE 001 002 003 004 005	—/ 9.2/10.6 13.6/15.6 18.1/20.9 21.9/25.3 33.4/38.5	28.6/ 28.6 28.6/ 30.0 33.7/ 36.3 39.4/ 42.9 44.1/ 48.3 58.4/ 64.9	35/35 35/35 40/40 45/45 50/50 —	—	—	30/ 30 30/ 30 33/ 35 38/ 41 42/ 46 56/ 62	154/154 154/154 154/154 154/154 154/154 154/154
					NONE 001 002 003 004 005	—/ 9.2/10.6 13.6/15.6 18.1/20.9 21.9/25.3 33.4/38.5	34.6/ 34.6 34.6/ 34.6 38.5/ 40.5 44.2/ 47.1 48.9/ 52.5 63.2/ 69.1	40/40 40/40 45/45 50/50 60/60 —	—	—	35/ 35 35/ 35 38/ 40 44/ 46 48/ 51 61/ 66	158/158 158/158 158/158 158/158 158/158 158/158
			HIGH STATIC	NO	NONE 001 002 003 004 005	—/ 9.2/10.6 13.6/15.6 18.1/20.9 21.9/25.3 33.4/38.5	13.6 7.2 20.9 25.0 28.7	20 20 25 25 30	—	—	14 14 15 24 27	63
					NONE 001 002 003 004 005	—/ 9.2/10.6 13.6/15.6 18.1/20.9 21.9/25.3 33.4/38.5	16.3 7.2 18.8 23.0 27.1 30.8	20 25 25 30 35	—	—	20 20 20 29 32	67
			HIGH STATIC	NO	NONE 001 002 003 004 005	—/ 7.2 10.6 13.8 16.8	14.0 17.1 21.3 25.4 29.1	20 20 25 30 30	—	—	15 15 15 24 28	77
					NONE 001 002 003 004 005	—/ 7.2 10.6 13.8 16.8	16.7 19.2 23.4 27.5 31.2	20 25 25 30 35	—	—	20 20 20 29 32	82
50HJ005	460-3-60	STD	NO	9.2	NONE 006 007 008 009	—/ 7.2 10.6 13.8 16.8	13.6 16.7 20.9 25.0 28.7	20 20 25 25 30	—	—	14 14 15 24 27	63
					NONE 006 007 008 009	—/ 7.2 10.6 13.8 16.8	16.3 18.8 23.0 27.1 30.8	20 25 25 30 35	—	—	20 20 20 29 32	68
		HIGH STATIC	NO	9.2	NONE 006 007 008 009	—/ 7.2 10.6 13.8 16.8	14.0 17.1 21.3 25.4 29.1	20 20 25 30 30	—	—	15 15 15 24 28	77
					NONE 006 007 008 009	—/ 7.2 10.6 13.8 16.8	16.7 19.2 23.4 27.5 31.2	20 25 25 30 35	—	—	20 20 20 29 32	82
		208/230-1-60	STD	NO	NONE 001 003 002+002 003+003 004+004	—/ 15.9/18.3 31.4/36.3 46.9/54.2 62.8/72.5 75.8/87.5	44.4/ 44.4 44.4/ 44.4 55.1/ 61.2 74.5/ 83.6 94.4/106.5 110.6/125.2	60/60 60/60 — — — 125/150	— — 60/70 80/ 90 100/110 125/150	— — 004 005 005 005	44/ 44 44/ 44 52/ 58 70/ 79 88/100 103/117	173/173 173/173 173/173 173/173 173/173
					NONE 001 003 002+002 003+003 004+004	—/ 15.9/18.3 31.4/36.3 46.9/54.2 62.8/72.5 75.8/87.5	50.4/ 50.4 50.4/ 50.4 59.9/ 65.4 79.3/ 87.8 99.2/110.7 115.4/129.4	60/60 60/60 — — — 125/150	— — 60/70 80/ 90 100/125 125/150	— — 004 005 005 005	50/ 50 50/ 50 58/ 63 76/ 83 94/104 109/122	178/178 178/178 178/178 178/178 178/178
		STD	NO	9.2	NONE 002 003 005 004+004	—/ 13.6/15.6 18.1/20.9 33.4/38.5 43.8/50.5	31.7/ 31.7 32.8/ 35.4 38.5/ 42.0 57.5/ 64.0 70.6/ 79.0	40/40 40/40 45/45 — —	— — 60/70 80/ 80	— — 002 003	33/ 33 33/ 34 37/ 40 55/ 60 67/ 74	140/140 140/140 140/140 140/140 140/140
					NONE 002 003 005 004+004	—/ 13.6/15.6 18.1/20.9 33.4/38.5 43.8/50.5	37.7/ 37.7 37.7/ 39.6 43.3/ 46.2 62.3/ 68.2 75.4/ 83.2	40/40 45/45 50/50 — —	— — 60/70 80/ 90	— — 002 003	38/ 38 38/ 39 43/ 45 60/ 65 72/ 79	145/145 145/145 145/145 145/145 145/145
		STD	YES	9.2	NONE 002 003 005 004+004	—/ 13.6/15.6 18.1/20.9 33.4/38.5 43.8/50.5	32.6/ 32.6 32.8/ 36.3 39.4/ 42.9 58.4/ 64.9 71.5/ 79.9	40/40 40/40 45/45 — —	— — 60/70 80/ 80	— — 002 003	34/ 34 34/ 35 38/ 41 56/ 62 68/ 75	170/170 170/170 170/170 170/170 170/170
					NONE 002 003 005 004+004	—/ 13.6/15.6 18.1/20.9 33.4/38.5 43.8/50.5	38.6/ 38.6 38.6/ 40.5 44.2/ 47.1 63.2/ 69.1 76.3/ 84.1	45/45 45/45 50/50 — —	— — 70/70 80/ 90	— — 003 003	39/ 39 39/ 40 44/ 46 61/ 66 73/ 80	174/174 174/174 174/174 174/174 174/174
	460-3-60	STD	NO	9.2	NONE 006 008 009 008+008	—/ 7.2 13.8 16.8 27.7	15.2 16.7 25.0 28.7 42.3	20 20 25 30 45	— — — — —	025	16 16 18 27 40	70 71 71 71 71

Table 1B — Electrical Data (COBRA™ Energy Recovery 50HJ004-007 Units with 62AQ060) (cont)

UNIT	NOMINAL V-PH-Hz	IFM TYPE	CONV OUTLET	62AQ FLA	HEATER CRHEATER ---A00	HEAT	POWER SUPPLY			SINGLE POINT BOX CRSINGLE ---A00	DISCONNECT SIZE*				
						FLA	MCA	FUSE OR HACR BKR	MOCP		FLA	LRA			
50HJ005 (cont)	460-3-60	STD	YES	9.2	NONE 006 008 009 008+008	— 7.2 13.8 16.8 27.7	17.9 18.8 27.1 30.8 44.4	20 25 30 35 45	— — — — —	— — — 025 025	21 21 21 32 44	75 75 75 75 75			
					HIGH STATIC	NO	9.2	NONE 006 008 009 008+008	15.6 7.2 13.8 16.8 27.7	20 20 30 30 45	— — — — 025	16 16 19 28 40	84 85 85 85 85		
		HIGH STATIC	YES	9.2	NONE 006 008 009 008+008	— 7.2 13.8 16.8 27.7	18.3 19.2 27.5 31.2 44.8	20 25 30 35 45	— — — — —	— — — 025 025	22 22 22 32 45	89 90 90 90 90			
50HJ006	208/230-1-60	STD	NO	9.2	NONE 002 003 002+002 003+003 004+004	—/ 23.5/27.1 31.4/36.3 46.9/54.2 62.8/72.5 75.8/87.5	55.5/ 55.5 59.5/ 65.5 78.9/ 87.9 98.7/110.8 115.0/129.6	70/70 — —	— 70/ 70 80/ 90 100/125 125/150	004 004 005 005 005	56/ 56 57/ 62 75/ 83 93/104 108/121	250/250 250/250 250/250 250/250 250/250 250/250			
					STD	YES	9.2	NONE 002 003 002+002 003+003 004+004	—/ 23.5/27.1 31.4/36.3 46.9/54.2 62.8/72.5 75.8/87.5	61.5/ 61.5 64.3/ 69.7 83.7/ 92.1 103.5/115.0 119.8/133.8	70/70 — — — — —	— 70/ 70 90/100 110/125 125/150	004 005 005 005 005	61/ 61 62/ 67 80/ 88 98/109 113/126	255/255 255/255 255/255 255/255 255/255 255/255
					STD	NO	9.2	NONE 002 004 005 004+004 004+005	—/ 13.6/15.6 21.9/25.3 33.4/38.5 43.8/50.5 55.2/63.8	38.1/ 38.1 44.1/ 48.3 58.4/ 64.9 71.5/ 79.9 85.8/ 96.4	45/45 45/45 50/50 — 60/ 70 80/ 80 90/100	— — — 60/ 70 80/ 80 90/100	002 003 003 003 003	39/ 39 42/ 46 56/ 62 68/ 75 81/ 91	202/202 202/202 202/202 202/202 202/202 202/202
					STD	YES	9.2	NONE 002 004 005 004+004 004+005	—/ 13.6/15.6 21.9/25.3 33.4/38.5 43.8/50.5 55.2/63.8	44.1/ 44.1 48.9/ 52.5 63.2/ 69.1 76.3/ 84.1 90.6/100.6	50/50 50/50 60/60 — 70/ 70 80/ 90 100/110	— — — — 70/ 70 80/ 90 100/110	003 003 003 003 003	44/ 44 48/ 51 61/ 66 73/ 80 86/ 95	207/207 207/207 207/207 207/207 207/207 207/207
					HIGH STATIC	NO	9.2	NONE 002 004 005 004+004 004+005	—/ 13.6/15.6 21.9/25.3 33.4/38.5 43.8/50.5 55.2/63.8	39.8/ 39.8 45.9/ 50.1 60.3/ 66.7 73.3/ 81.7 87.6/ 98.3	45/45 45/45 50/60 — 70/ 70 80/ 90 90/100	— — — — 70/ 70 80/ 90 90/100	003 003 003 003 003	41/ 41 44/ 48 58/ 63 70/ 77 83/ 93	221/221 221/221 221/221 221/221 221/221 221/221
					HIGH STATIC	YES	9.2	NONE 002 004 005 004+004 004+005	—/ 13.6/15.6 21.9/25.3 33.4/38.5 43.8/50.5 55.2/63.8	45.8/ 45.8 48.5/ 48.5 50.7/ 54.3 65.1/ 70.9 78.1/ 85.9 92.4/102.5	50/50 50/50 60/60 — 70/ 80 80/ 90 100/110	— — — — 70/ 80 80/ 90 100/110	003 003 003 003 003	46/ 46 46/ 46 50/ 53 63/ 68 75/ 82 88/ 97	226/226 226/226 226/226 226/226 226/226 226/226
	460-3-60	STD	NO	9.2	NONE 006 008 009 008+008 008+009	— 7.2 13.8 16.8 27.7 30.7	19.3 19.3 25.4 29.1 42.7 46.4	25 25 30 30 45 50	— — — — — —	— — — — 025 025	20 20 20 28 40 44	101 101 101 101 101 101			
					STD	YES	9.2	NONE 006 008 009 008+008 008+009	— 7.2 13.8 16.8 27.7 30.7	22.0 22.0 27.5 31.2 44.8 48.5	25 25 30 35 45 50	— — — — — —	25 25 25 32 45 48	106 106 106 106 106 106	

LEGEND

FLA — Full Load Amps
HACR — Heating, Air Conditioning and Refrigeration
IFM — Indoor (Evaporator) Fan Motor
LRA — Locked Rotor Amps
MCA — Minimum Circuit Amps
MOCP — Maximum Overcurrent Protection
NEC — National Electrical Code
UL — Underwriters' Laboratories

*Used to determine minimum disconnect per NEC.


†Single point box CRSINGLE017A00 is part of base unit.

NOTES:

- In compliance with NEC requirements for multimotor and combination load equipment (refer to NEC Articles 430 and 440), the overcurrent protective device for the unit shall be fuse or HACR breaker. UL, Canada units may be fuse or circuit breaker.
- Unbalanced 3-Phase Supply Voltage**
Never operate a motor where a phase imbalance in supply voltage is greater than 2%. Use the following formula to determine the percent of voltage imbalance.

$$= 100 \times \frac{\text{max voltage deviation from average voltage}}{\text{average voltage}}$$

Example: Supply voltage is 460-3-60.



$$\begin{aligned} AB &= 452 \text{ v} \\ BC &= 464 \text{ v} \\ AC &= 455 \text{ v} \\ \text{Average Voltage} &= \frac{452 + 464 + 455}{3} \\ &= \frac{1371}{3} \\ &= 457 \end{aligned}$$

Determine maximum deviation from average voltage.

$$\begin{aligned} (AB) 457 - 452 &= 5 \text{ v} \\ (BC) 464 - 457 &= 7 \text{ v} \\ (AC) 457 - 455 &= 2 \text{ v} \end{aligned}$$

Maximum deviation is 7 v.

Determine percent of voltage imbalance.

$$\% \text{ Voltage Imbalance} = 100 \times \frac{7}{457} = 1.53\%$$

This amount of phase imbalance is satisfactory as it is below the maximum allowable 2%.

IMPORTANT: If the supply voltage phase imbalance is more than 2%, contact your local electric utility company immediately.



Table 1B — Electrical Data (COBRA™ Energy Recovery 50HJ004-007 Units with 62AQ060) (cont)

UNIT	NOMINAL V-PH-Hz	IFM TYPE	CONV OUTLET	62AQ FLA	HEATER CRHEATER --A00	HEAT	POWER SUPPLY			SINGLE POINT BOX CRSINGLE --A00	DISCONNECT SIZE*	
						FLA	MCA	FUSE OR HACR BKR	MOCP		FLA	LRA
50HJ006 (cont)	460-3-60	HIGH STATIC	NO	9.2	NONE	—	20.1	25	—	—	20	110
					006	7.2	20.1	25	—	—	20	111
		HIGH STATIC	YES	9.2	008	13.8	26.2	30	—	—	20	111
					009	16.8	29.9	30	—	—	29	111
	208/230-3-60	STD	NO	9.2	008+008	27.7	43.5	45	—	025	41	111
					008+009	30.7	47.2	50	—	025	44	111
		STD	YES	9.2	NONE	—/—	22.8	25	—	—	26	115
					006	7.2	22.8	25	—	—	26	116
50HJ007	208/230-3-60	HIGH STATIC	NO	9.2	008	13.8	28.3	30	—	—	26	116
					009	16.8	32.0	35	—	025	33	116
		HIGH STATIC	YES	9.2	008+008	27.7	45.6	50	—	025	46	116
					008+009	30.7	49.3	50	—	025	49	116
	460-3-60	STD	NO	9.2	NONE	—/—	42.0/ 42.0	50/50	—	—	42/42	234/234
					002	13.6/15.6	42.0/ 42.0	50/50	—	—	42/42	234/234
		STD	YES	9.2	004	21.9/25.3	44.1/ 48.3	50/50	—	002	42/46	234/234
					005	33.4/38.5	58.4/ 64.9	—	60/ 70	002	56/62	234/234
	460-3-60	HIGH STATIC	NO	9.2	004+004	43.8/50.5	71.5/ 79.9	—	80/ 80	003	68/75	234/234
					004+005	55.2/63.8	85.8/ 96.4	—	90/100	003	81/91	234/234
		HIGH STATIC	YES	9.2	NONE	—/—	48.0/ 48.0	60/60	—	—	48/48	239/239
					002	13.6/15.6	48.0/ 48.0	60/60	—	—	48/48	239/239
		HIGH STATIC	NO	9.2	004	21.9/25.3	48.9/ 52.5	60/60	—	003	61/66	239/239
					005	33.4/38.5	63.2/ 69.1	—	70/ 70	003	73/80	239/239
		HIGH STATIC	YES	9.2	004+004	43.8/50.5	73.6/ 84.1	—	80/ 90	003	86/95	239/239
					004+005	55.2/63.8	90.6/100.6	—	100/110	003	—	—

LEGEND

FLA — Full Load Amps
HACR — Heating, Air Conditioning and Refrigeration
IFM — Indoor (Evaporator) Fan Motor
LRA — Locked Rotor Amps
MCA — Minimum Circuit Amps
MOCP — Maximum Overcurrent Protection
NEC — National Electrical Code
UL — Underwriters' Laboratories


*Used to determine minimum disconnect per NEC.
†Single point box CRSINGLE017A00 is part of base unit.

NOTES:

- In compliance with NEC requirements for multimotor and combination load equipment (refer to NEC Articles 430 and 440), the overcurrent protective device for the unit shall be fuse or HACR breaker. UL, Canada units may be fuse or circuit breaker.
- Unbalanced 3-Phase Supply Voltage**
Never operate a motor where a phase imbalance in supply voltage is greater than 2%. Use the following formula to determine the percent of voltage imbalance.

$$= 100 \times \frac{\text{max voltage deviation from average voltage}}{\text{average voltage}}$$

Example: Supply voltage is 460-3-60.

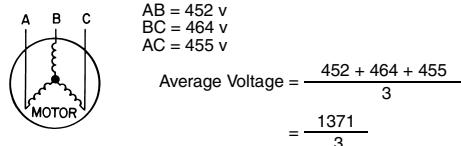

$$\begin{aligned} \text{Average Voltage} &= \frac{452 + 464 + 455}{3} \\ &= 1371 \end{aligned}$$

$$= 457$$

Determine maximum deviation from average voltage.

$$(AB) 457 - 452 = 5 \text{ v}$$

$$(BC) 464 - 457 = 7 \text{ v}$$

$$(AC) 457 - 455 = 2 \text{ v}$$

Maximum deviation is 7 v.

Determine percent of voltage imbalance.

$$\% \text{ Voltage Imbalance} = 100 \times \frac{7}{457}$$

$$= 1.53\%$$

This amount of phase imbalance is satisfactory as it is below the maximum allowable 2%.

IMPORTANT: If the supply voltage phase imbalance is more than 2%, contact your local electric utility company immediately.



Table 1C — Electrical Data (COBRA™ Energy Recovery 48HJ004-007 Units with 62AQ100)

UNIT	NOMINAL V-PH-Hz	IFM TYPE	CONV OUTLET	62AQ FLA	POWER SUPPLY		DISCONNECT SIZE*	
					MCA	FUSE OR HACR BKR	FLA	LRA
48HJ004	208/230-1-60	STD STD	NO YES	15.1 15.1	40.7/40.7 46.7/46.7	45/45 50/50	42/42 48/48	161/161 166/166
	208/230-3-60	STD STD	NO YES	15.1 15.1	33.6/33.6 39.6/39.6	40/40 45/45	36/36 41/41	150/150 155/155
		HIGH STATIC HIGH STATIC	NO YES	15.1 15.1	34.5/34.5 40.5/40.5	40/40 45/45	37/37 42/42	180/180 184/184
	460-3-60	STD STD	NO YES	15.1 15.1	16.5 19.2	20	18 23	76 80
		HIGH STATIC HIGH STATIC	NO YES	15.1 15.1	16.9 19.6	20 25	18 24	90 95
		STD STD	NO YES	15.1 15.1	18.2 20.9	20	19 25	83 88
		HIGH STATIC HIGH STATIC	NO YES	15.1 15.1	18.6 21.3	25	19 25	97 102
48HJ005	208/230-1-60	STD STD	NO YES	15.1 15.1	50.3/50.3 56.3/56.3	60/60 70/70	51/51 57/57	199/199 204/204
	208/230-3-60	STD STD	NO YES	15.1 15.1	37.6/37.6 43.6/43.6	45/45 50/50	39/39 45/45	166/166 171/171
		HIGH STATIC HIGH STATIC	NO YES	15.1 15.1	38.5/38.5 44.5/44.5	45/45 50/50	40/40 46/46	196/196 200/200
	460-3-60	STD STD	NO YES	15.1 15.1	18.2 20.9	20	19 25	83 88
		HIGH STATIC HIGH STATIC	NO YES	15.1 15.1	18.6 21.3	25	19 25	97 102
		STD STD	NO YES	15.1 15.1	22.2 24.9	25	23 28	114 119
		HIGH STATIC HIGH STATIC	NO YES	15.1 15.1	23.0 25.7	30	24 29	123 128
48HJ006	208/230-1-60	STD STD	NO YES	15.1 15.1	61.4/61.4 67.4/67.4	70/70 80/80	62/62 68/68	276/276 281/281
	208/230-3-60	STD STD	NO YES	15.1 15.1	44.0/44.0 50.0/50.0	50/50 60/60	46/46 51/51	228/228 233/233
		HIGH STATIC HIGH STATIC	NO YES	15.1 15.1	45.7/45.7 51.7/51.7	60/60 60/60	48/48 53/53	247/247 252/252
	460-3-60	STD STD	NO YES	15.1 15.1	22.2 24.9	25	23 28	114 119
		HIGH STATIC HIGH STATIC	NO YES	15.1 15.1	23.0 25.7	30	24 29	123 128
		STD STD	NO YES	15.1 15.1	47.9/47.9 53.9/53.9	60/60 60/60	49/49 55/55	260/260 265/265
		HIGH STATIC HIGH STATIC	NO YES	15.1 15.1	49.6/49.6 55.6/55.6	60/60 60/60	51/51 57/57	279/279 284/284
48HJ007	208/230-3-60	STD STD	NO YES	15.1 15.1	47.9/47.9 53.9/53.9	60/60 60/60	49/49 55/55	260/260 265/265
	460-3-60	STD STD	NO YES	15.1 15.1	22.8 25.5	30	23 29	127 131
		HIGH STATIC HIGH STATIC	NO YES	15.1 15.1	23.6 26.3	30	24 30	136 141
		HIGH STATIC HIGH STATIC	NO YES	15.1 15.1	26.3	30	30	141

LEGEND

FLA — Full Load Amps
HACR — Heating, Air Conditioning and Refrigeration
IFM — Indoor (Evaporator) Fan Motor
LRA — Locked Rotor Amps
MCA — Minimum Circuit Amps
MOCP — Maximum Overcurrent Protection
NEC — National Electrical Code
UL — Underwriters' Laboratories

*Used to determine minimum disconnect per NEC.


†Single point box CRSINGLE017A00 is part of base unit.

NOTES:

- In compliance with NEC requirements for multimotor and combination load equipment (refer to NEC Articles 430 and 440), the overcurrent protective device for the unit shall be fuse or HACR breaker. UL, Canada units may be fuse or circuit breaker.
- Unbalanced 3-Phase Supply Voltage**
Never operate a motor where a phase imbalance in supply voltage is greater than 2%. Use the following formula to determine the percent of voltage imbalance.

$$= 100 \times \frac{\text{max voltage deviation from average voltage}}{\text{average voltage}}$$

Example: Supply voltage is 460-3-60.



$$\begin{aligned} AB &= 452 \text{ v} \\ BC &= 464 \text{ v} \\ AC &= 455 \text{ v} \\ \text{Average Voltage} &= \frac{452 + 464 + 455}{3} \\ &= 1371 \\ &= 457 \end{aligned}$$

Determine maximum deviation from average voltage.

$$\begin{aligned} (AB) 457 - 452 &= 5 \text{ v} \\ (BC) 464 - 457 &= 7 \text{ v} \\ (AC) 457 - 455 &= 2 \text{ v} \end{aligned}$$

Maximum deviation is 7 v.

Determine percent of voltage imbalance.

$$\begin{aligned} \% \text{ Voltage Imbalance} &= 100 \times \frac{7}{457} \\ &= 1.53\% \end{aligned}$$

This amount of phase imbalance is satisfactory as it is below the maximum allowable 2%.

IMPORTANT: If the supply voltage phase imbalance is more than 2%, contact your local electric utility company immediately.



Table 1D — Electrical Data (COBRA™ Energy Recovery 50HJ004-007 Units with 62AQ100)

UNIT	NOMINAL V-PH-Hz	IFM TYPE	CONV OUTLET	62AQ FLA	HEATER CRHEATER ---A00	HEAT	POWER SUPPLY			SINGLE POINT BOX CRSINGLE ---A00	DISCONNECT SIZE*	
						FLA	MCA	FUSE OR HACR BKR	MOCP	FLA	LRA	
50HJ004	208/230-1-60	STD	NO	15.1	NONE 001 002 003 004 002+002	—/ 15.9/18.3 23.5/27.1 31.4/36.3 37.9/43.8 46.9/54.2	40.7/ 40.7 42.5/ 45.5 52.0/ 56.5 61.9/ 67.9 70.0/ 77.3 81.3/ 90.3	45/45 50/60 — — — 90/100	— — 60/ 70 70/ 70 80/ 80 90/100	— — 004 004 004 005	42/ 42 42/ 44 50/ 54 59/ 65 67/ 73 77/ 85	161/161 161/161 161/161 161/161 161/161 161/161
					001 002 003 004 002+002	—/ 15.9/18.3 23.5/27.1 31.4/36.3 37.9/43.8 46.9/54.2	46.7/ 46.7 47.3/ 49.7 56.8/ 60.7 66.7/ 72.1 74.8/ 81.5 86.1/ 94.5	50/50 60/60 — — — 90/100	— — 70/ 70 70/ 80 80/ 90 90/100	— — 004 004 005 005	48/ 48 48/ 49 56/ 59 65/ 70 72/ 78 82/ 90	166/166 166/166 166/166 166/166 166/166 166/166
	208/230-3-60	STD	NO	15.1	NONE 001 002 003 004 005	—/ 9.2/10.6 13.6/15.6 18.1/20.9 21.9/25.3 33.4/38.5	33.6/ 33.6 34.1/ 35.9 39.6/ 42.2 45.3/ 48.8 50.0/ 54.2 64.3/ 70.7	40/40 45/45 50/50 60/60 60/60 —	— — — — — 70/ 80	— — — — — 002	36/ 36 36/ 36 39/ 41 44/ 47 48/ 52 61/ 67	150/150 150/150 150/150 150/150 150/150 150/150
					001 002 003 004 005	—/ 9.2/10.6 13.6/15.6 18.1/20.9 21.9/25.3 33.4/38.5	39.6/ 39.6 39.6/ 40.1 44.4/ 46.4 50.1/ 53.0 54.8/ 58.4 69.1/ 74.9	45/45 50/50 60/60 60/60 60/60 —	— — — — — 60/ 70 80/ 80	— — — — — 002 002	41/ 41 41/ 41 44/ 46 49/ 52 54/ 57 67/ 72	155/155 155/155 155/155 155/155 155/155 155/155
		HIGH STATIC	NO	15.1	NONE 001 002 003 004 005	—/ 9.2/10.6 13.6/15.6 18.1/20.9 21.9/25.3 33.4/38.5	34.5/ 34.5 35.0/ 36.8 40.5/ 43.1 46.2/ 49.7 50.9/ 55.1 65.2/ 71.6	40/40 45/45 50/50 60/60 60/60 —	— — — — — 70/ 80	— — — — — 002	37/ 37 37/ 37 40/ 42 45/ 48 49/ 53 62/ 68	180/180 180/180 180/180 180/180 180/180 180/180
					001 002 003 004 005	—/ 9.2/10.6 13.6/15.6 18.1/20.9 21.9/25.3 33.4/38.5	40.5/ 40.5 40.5/ 41.0 45.3/ 47.3 51.0/ 53.9 55.7/ 59.3 70.0/ 75.8	45/45 50/50 60/60 60/60 60/60 —	— — — — — 70/ 70 80/ 80	— — — — — 002 003	42/ 42 42/ 42 45/ 47 50/ 53 55/ 58 68/ 73	184/184 184/184 184/184 184/184 184/184 184/184
	460-3-60	STD	NO	15.1	NONE 006 007 008 009	— 7.2 10.6 13.8 16.8	16.5 20.1 24.3 28.4 32.1	20.0 25.0 30.0 35.0 35.0	— — — — —	— — — 025 025	18 18 18 27 31	76 76 77 80 83
					006 007 008 009	— 7.2 10.6 13.8 16.8	19.2 22.2 26.4 30.5 34.2	20.0 30.0 30.0 35.0 40.0	— — — 025 025	— — — — —	23 23 23 32 35	80 81 81 82 85
		HIGH STATIC	NO	15.1	NONE 006 007 008 009	— 7.2 10.6 13.8 16.8	16.9 20.5 24.7 28.8 32.5	20.0 25.0 30.0 35.0 35.0	— — — — —	— — — 025 025	18 18 18 28 31	90 90 91 94 97
					006 007 008 009	— 7.2 10.6 13.8 16.8	19.6 22.6 26.8 30.9 34.6	25.0 30.0 30.0 35.0 40.0	— — — — —	— — — 025 025	24 24 24 32 36	95 95 95 96 99
50HJ005	208/230-1-60	STD	NO	15.1	NONE 001 003 002+002 003+003 004+004	—/ 15.9/18.3 31.4/36.3 46.9/54.2 62.8/72.5 75.8/87.5	50.3/ 50.3 50.3/ 50.3 61.9/ 67.9 81.3/ 90.3 101.2/113.3 117.4/132.0	60/60 60/60 — — — —	— — 70/ 70 90/100 110/125 125/150	— — 004 005 005	51/ 51 51/ 51 59/ 65 77/ 85 95/106 110/124	199/199 199/199 199/199 199/199 199/199 199/199
					001 003 002+002 003+003 004+004	—/ 15.9/18.3 31.4/36.3 46.9/54.2 62.8/72.5 75.8/87.5	56.3/ 56.3 56.3/ 56.3 66.7/ 72.1 86.1/ 94.5 106.0/117.5 122.2/136.2	70/70 — — — — —	— 70/ 70 70/ 80 90/100 110/125 125/150	— 004 004 005 005	57/ 57 57/ 57 65/ 70 82/ 90 101/111 116/128	204/204 204/204 204/204 204/204 204/204 204/204
	208/230-3-60	STD	NO	15.1	NONE 002 003 004+004	—/ 13.6/15.6 18.1/20.9 33.4/38.5 43.8/50.5	37.6/ 37.6 39.6/ 42.2 45.3/ 48.8 64.3/ 70.7 77.3/ 85.8	45/45 50/50 60/60 — —	— — — 70/ 80 80/ 90	— — — 002 003	39/ 39 39/ 41 44/ 47 61/ 67 73/ 81	166/166 166/166 166/166 166/166 166/166
					002 003 004+004	—/ 13.6/15.6 18.1/20.9 33.4/38.5 43.8/50.5	43.6/ 43.6 44.4/ 46.4 50.1/ 53.0 65.2/ 71.6 82.1/ 90.0	50/50 60/60 60/60 — —	— — — 80/ 80 90/ 90	— — — 002 003	45/ 45 45/ 46 49/ 52 67/ 72 79/ 86	171/171 171/171 171/171 171/171 171/171
		STD	YES	15.1	NONE 002 003 004+004	—/ 13.6/15.6 18.1/20.9 33.4/38.5 43.8/50.5	38.5/ 38.5 40.5/ 43.1 46.2/ 49.7 65.2/ 71.6 78.2/ 86.7	45/45 50/50 60/60 — —	— — — 70/ 80 80/ 90	— — — 002 003	40/ 40 40/ 42 45/ 48 62/ 68 74/ 82	196/196 196/196 196/196 196/196 196/196
					002 003 004+004	—/ 13.6/15.6 18.1/20.9 33.4/38.5 43.8/50.5	44.5/ 44.5 45.3/ 47.3 51.0/ 53.9 70.0/ 75.8 83.0/ 90.9	50/50 60/60 60/60 — —	— — — 80/ 80 90/100	— — — 003 003	46/ 46 46/ 47 50/ 53 68/ 73 80/ 87	200/200 200/200 200/200 200/200 200/200
	460-3-60	STD	NO	15.1	NONE 006 008 009 008+008	— 7.2 13.8 16.8 27.7	18.2 20.1 28.4 32.1 45.6	20 25 35 30 50	— — — — —	— — — 025 025	19 19 19 31 43	83 84 84 84 94

Table 1D — Electrical Data (COBRA™ Energy Recovery 50HJ004-007 Units with 62AQ100) (cont)

UNIT	NOMINAL V-PH-Hz	IFM TYPE	CONV OUTLET	62AQ FLA	HEATER CRHEATER ---A00	HEAT	POWER SUPPLY			SINGLE POINT BOX CRSINGLE ---A00	DISCONNECT SIZE*	
						FLA	MCA	FUSE OR HACR BKR	MOCP		FLA	LRA
50HJ005 (cont)	460-3-60	STD	YES	15.1	NONE	—	20.9	25	—	—	25	88
					006	7.2	22.2	30	—	—	25	88
		HIGH STATIC	NO	15.1	008	13.8	30.5	35	—	025	25	88
		HIGH STATIC	YES	15.1	009	16.8	34.2	40	—	025	35	88
					008+008	27.7	47.7	50	—	025	48	96
	208/230-1-60	STD	NO	15.1	NONE	—	18.6	25	—	—	19	97
					006	7.2	20.5	25	—	025	19	98
		HIGH STATIC	YES	15.1	008	13.8	28.8	35	—	025	31	98
		HIGH STATIC	YES	15.1	009	16.8	32.5	35	—	025	36	103
					008+008	27.7	46.0	50	—	025	48	110
50HJ006	208/230-3-60	STD	NO	15.1	NONE	—/—	61.4/ 61.4	70/70	—	004	62/ 62	276/276
					002	23.5/27.1	61.4/ 61.4	—	70/ 70	004	62/ 62	276/276
		STD	YES	15.1	003	31.4/36.3	65.8/ 71.8	—	70/ 80	004	64/ 69	276/276
					002+002	46.9/54.2	85.2/ 94.2	—	90/100	005	81/ 90	276/276
		STD	NO	15.1	003+003	62.8/72.5	105.1/117.2	—	110/125	005	100/111	276/276
					004+004	75.8/87.5	121.3/135.9	—	125/150	005	115/128	276/276
	208/230-3-60	STD	NO	15.1	NONE	—/—	67.4/ 67.4	80/80	—	—	68/ 68	281/281
					002	23.5/27.1	67.4/ 67.4	—	80/ 80	004	68/ 68	281/281
		STD	YES	15.1	003	31.4/36.3	70.6/ 76.0	—	80/ 80	005	69/ 74	281/281
					002+002	46.9/54.2	90.0/ 98.4	—	90/100	005	87/ 95	281/281
		STD	NO	15.1	003+003	62.8/72.5	109.9/121.4	—	110/125	005	105/116	281/281
					004+004	75.8/87.5	126.1/140.1	—	150/150	005	120/133	281/281
	460-3-60	STD	NO	15.1	NONE	—/—	44.0/ 44.0	50/50	—	—	46/ 46	228/228
					002	13.6/15.6	44.0/ 44.0	50/50	—	—	46/ 46	228/228
		STD	YES	15.1	004	21.9/25.3	50.9/ 55.1	60/60	—	—	49/ 53	228/228
					005	33.4/38.5	65.2/ 71.6	—	70/ 80	002	62/ 68	228/228
		STD	NO	15.1	004+004	43.8/50.5	78.2/ 86.7	—	80/ 90	003	74/ 82	228/228
					004+005	55.2/63.8	92.6/103.2	—	100/110	003	88/ 97	228/228
		STD	YES	15.1	NONE	—/—	50.0/ 50.0	60/60	—	—	51/ 51	233/233
					002	13.6/15.6	50.0/ 50.0	60/60	—	—	51/ 51	233/233
		STD	NO	15.1	004	21.9/25.3	55.7/ 59.3	—	70/ 70	002	55/ 58	233/233
					005	33.4/38.5	70.0/ 75.8	—	80/ 80	003	68/ 73	233/233
		STD	YES	15.1	004+004	43.8/50.5	83.0/ 90.9	—	90/100	003	80/ 87	233/233
					004+005	55.2/63.8	94.3/104.9	—	100/110	003	93/102	233/233
		STD	NO	15.1	NONE	—/—	45.7/ 45.7	60/60	—	—	48/ 48	247/247
					002	13.6/15.6	45.7/ 45.7	60/60	—	—	48/ 48	247/247
		STD	YES	15.1	004	21.9/25.3	52.6/ 56.8	—	60/ 70	002	51/ 55	247/247
					005	33.4/38.5	66.9/ 73.3	—	70/ 80	002	64/ 70	247/247
		STD	NO	15.1	004+004	43.8/50.5	79.9/ 88.4	—	80/ 90	003	76/ 84	247/247
					004+005	55.2/63.8	94.3/104.9	—	100/110	003	90/ 99	247/247
		STD	YES	15.1	NONE	—/—	51.7/ 51.7	60/60	—	—	53/ 53	252/252
					002	13.6/15.6	51.7/ 51.7	60/60	—	—	53/ 53	252/252
		STD	NO	15.1	004	21.9/25.3	57.4/ 61.0	—	70/ 70	002	57/ 60	252/252
					005	33.4/38.5	71.7/ 77.5	—	80/ 80	003	70/ 75	252/252
		STD	YES	15.1	004+004	43.8/50.5	84.7/ 92.6	—	90/100	003	82/ 89	252/252
					004+005	55.2/63.8	99.1/109.1	—	100/110	003	95/104	252/252
		460-3-60	STD	NO	NONE	—	22.2	25	—	—	23	114
					006	7.2	22.2	25	—	—	23	114
		STD	NO	15.1	008	13.8	28.8	35	—	025	23	114
					009	16.8	32.5	35	—	025	31	114
		STD	NO	15.1	008+008	27.7	46.0	50	—	025	43	114
					008+009	30.7	49.8	50	—	025	47	114

LEGEND

FLA — Full Load Amps
HACR — Heating, Air Conditioning and Refrigeration
IFM — Indoor (Evaporator) Fan Motor
LRA — Locked Rotor Amps
MCA — Minimum Circuit Amps
MOCP — Maximum Overcurrent Protection
NEC — National Electrical Code
UL — Underwriters' Laboratories

*Used to determine minimum disconnect per NEC.

†Single point box CRSINGLE017A00 is part of base unit.

NOTES:

1. In compliance with NEC requirements for multimotor and combination load equipment (refer to NEC Articles 430 and 440), the overcurrent protective device for the unit shall be fuse or HACR breaker. UL, Canada units may be fuse or circuit breaker.

2. **Unbalanced 3-Phase Supply Voltage**

Never operate a motor where a phase imbalance in supply voltage is greater than 2%. Use the following formula to determine the percent of voltage imbalance.

$$= 100 \times \frac{\text{max voltage deviation from average voltage}}{\text{average voltage}}$$

Example: Supply voltage is 460-3-60.

$$AB = 452 \text{ v}$$

$$BC = 464 \text{ v}$$

$$AC = 455 \text{ v}$$

$$\text{Average Voltage} = \frac{452 + 464 + 455}{3}$$

$$= 1371$$

$$= 457$$

Determine maximum deviation from average voltage.

$$(AB) 457 - 452 = 5 \text{ v}$$

$$(BC) 464 - 457 = 7 \text{ v}$$

$$(AC) 457 - 455 = 2 \text{ v}$$

Maximum deviation is 7 v.

Determine percent of voltage imbalance.

$$\% \text{ Voltage Imbalance} = 100 \times \frac{7}{457}$$

$$= 1.53\%$$

This amount of phase imbalance is satisfactory as it is below the maximum allowable 2%.

IMPORTANT: If the supply voltage phase imbalance is more than 2%, contact your local electric utility company immediately.



Table 1D — Electrical Data (COBRA™ Energy Recovery 50HJ004-007 Units with 62AQ100) (cont)

UNIT	NOMINAL V-PH-Hz	IFM TYPE	CONV OUTLET	62AQ FLA	HEATER CRHEATER ---A00	HEAT	POWER SUPPLY			SINGLE POINT BOX CRSINGLE ---A00	DISCONNECT SIZE*	
							FLA	MCA	FUSE OR HACR BKR		FLA	LRA
50HJ006 (cont)	460-3-60	STD	YES	15.1	NONE	—	24.9	30	—	—	28	119
					006	7.2	24.9	30	—	—	28	119
		HIGH STATIC	NO	15.1	008	13.8	30.9	35	—	025	28	119
		HIGH STATIC	YES	15.1	009	16.8	34.6	40	—	025	36	119
					008+008	27.7	48.1	50	—	025	48	119
		HIGH STATIC	YES	15.1	008+009	30.7	51.9	60	—	025	52	119
					006	—	23.0	30	—	—	24	123
		HIGH STATIC	NO	15.1	008	7.2	23.0	30	—	—	24	124
					009	13.8	29.6	35	—	025	24	124
		HIGH STATIC	YES	15.1	008+008	16.8	33.3	35	—	025	32	124
					008+009	27.7	46.8	50	—	025	44	124
50HJ007	208/230-3-60	STD	NO	15.1	NONE	—	25.7	30	—	—	29	128
					006	7.2	25.7	30	—	—	29	129
		STD	YES	15.1	008	13.8	31.7	35	—	025	29	129
					009	16.8	35.4	40	—	025	37	129
		HIGH STATIC	YES	15.1	008+008	27.7	48.9	50	—	025	49	129
					008+009	30.7	52.7	60	—	025	53	129
		STD	NO	15.1	002	13.6/15.6	47.9/ 47.9	60/60	—	—	49/ 49	260/260
					004	21.9/25.3	50.9/ 55.1	60/60	—	—	49/ 49	260/260
		STD	YES	15.1	005	33.4/38.5	65.2/ 71.6	—	70/ 80	002	49/ 53	260/260
					004+004	43.8/50.5	78.2/ 86.7	—	80/ 90	003	62/ 68	260/260
		HIGH STATIC	NO	15.1	004+005	55.2/63.8	92.6/103.2	—	100/110	003	74/ 82	260/260
					006	—	53.9/ 53.9	60/60	—	—	88/ 97	260/260
		STD	YES	15.1	002	13.6/15.6	53.9/ 53.9	60/60	—	—	55/ 55	265/265
					004	21.9/25.3	55.7/ 59.3	—	70/ 70	002	55/ 58	265/265
		HIGH STATIC	NO	15.1	005	33.4/38.5	70.0/ 75.8	—	80/ 80	003	68/ 73	265/265
					004+004	43.8/50.5	83.0/ 90.9	—	90/100	003	80/ 87	265/265
		HIGH STATIC	YES	15.1	004+005	55.2/63.8	97.4/107.4	—	100/110	003	93/102	265/265
					006	—	49.6/ 49.6	60/60	—	—	51/ 51	279/279
		HIGH STATIC	NO	15.1	004	13.6/15.6	49.6/ 49.6	60/60	—	—	51/ 51	279/279
					005	21.9/25.3	52.6/ 56.8	—	60/ 70	002	51/ 55	279/279
		HIGH STATIC	YES	15.1	004+004	33.4/38.5	66.9/ 73.3	—	70/ 80	002	64/ 70	279/279
					004+005	43.8/50.5	79.9/ 88.4	—	80/ 90	003	76/ 84	279/279
		HIGH STATIC	YES	15.1	55.2/63.8	94.3/104.9	—	100/110	003	90/ 99	279/279	279/279
					006	—	55.6/ 55.6	60/60	—	—	57/ 57	284/284
		STD	NO	15.1	002	13.6/15.6	55.6/ 55.6	60/60	—	—	57/ 57	284/284
					004	21.9/25.3	55.6/ 55.6	—	70/ 70	002	57/ 60	284/284
		STD	YES	15.1	005	33.4/38.5	57.4/ 61.0	—	80/ 80	003	70/ 75	284/284
					004+004	43.8/50.5	71.7/ 77.5	—	90/100	003	82/ 89	284/284
		HIGH STATIC	NO	15.1	004+005	55.2/63.8	99.1/109.1	—	100/110	003	95/104	284/284
					006	—	22.8	30	—	—	23	127
		STD	NO	15.1	008	7.2	22.8	30	—	—	23	127
					009	13.8	28.8	35	—	025	23	127
		STD	YES	15.1	008+008	16.8	32.5	35	—	025	31	127
					008+009	27.7	46.0	50	—	025	43	127
		HIGH STATIC	NO	15.1	006	—	25.5	30	—	—	29	131
					008	7.2	25.5	30	—	—	29	132
		HIGH STATIC	NO	15.1	009	13.8	30.9	35	—	025	29	132
					008+008	16.8	34.6	40	—	025	36	132
		HIGH STATIC	YES	15.1	008+009	27.7	48.1	50	—	025	48	132
					30.7	51.9	60	—	025	52	132	132
		HIGH STATIC	NO	15.1	006	—	23.6	30	—	—	24	136
					008	7.2	23.6	30	—	—	24	137
		HIGH STATIC	NO	15.1	009	13.8	29.6	35	—	025	24	137
					008+008	16.8	33.3	35	—	025	32	137
		HIGH STATIC	YES	15.1	008+009	27.7	46.8	50	—	025	44	137
					30.7	50.6	60	—	025	48	137	137
		HIGH STATIC	YES	15.1	006	—	26.3	30	—	—	30	141
					008	7.2	26.3	30	—	—	30	141
		HIGH STATIC	YES	15.1	009	13.8	31.7	35	—	025	37	141
					008+008	16.8	35.4	40	—	025	49	141
					008+009	27.7	48.9	50	—	025	53	141
					30.7	52.7	60	—	025	53	141	141

LEGEND

FLA — Full Load Amps
HACR — Heating, Air Conditioning and Refrigeration
IFM — Indoor (Evaporator) Fan Motor
LRA — Locked Rotor Amps
MCA — Minimum Circuit Amps
MOCP — Maximum Overcurrent Protection
NEC — National Electrical Code
UL — Underwriters' Laboratories

*Used to determine minimum disconnect per NEC.

†Single point box CRSINGLE017A00 is part of base unit.

NOTES:

1. In compliance with NEC requirements for multimotor and combination load equipment (refer to NEC Articles 430 and 440), the overcurrent protective device for the unit shall be fuse or HACR breaker. UL, Canada units may be fuse or circuit breaker.

2. **Unbalanced 3-Phase Supply Voltage**

Never operate a motor where a phase imbalance in supply voltage is greater than 2%. Use the following formula to determine the percent of voltage imbalance.

$$= 100 \times \frac{\text{max voltage deviation from average voltage}}{\text{average voltage}}$$

Example: Supply voltage is 460-3-60.

$$(AB) = 452 \text{ v}$$

$$(BC) = 464 \text{ v}$$

$$(AC) = 455 \text{ v}$$

$$\text{Average Voltage} = \frac{452 + 464 + 455}{3}$$

$$= 1371$$

$$= 457$$

Determine maximum deviation from average voltage.

$$(AB) = 457 - 452 = 5 \text{ v}$$

$$(BC) = 464 - 457 = 7 \text{ v}$$

$$(AC) = 457 - 455 = 2 \text{ v}$$

Maximum deviation is 7 v.

Determine percent of voltage imbalance.

$$\% \text{ Voltage Imbalance} = 100 \times \frac{7}{457}$$

$$= 1.53\%$$

This amount of phase imbalance is satisfactory as it is below the maximum allowable 2%.

IMPORTANT: If the supply voltage phase imbalance is more than 2%, contact your local electric utility company immediately.



Table 1E — Electrical Data (COBRA™ Energy Recovery 48HJ008-014 Units with 62AQ200)

UNIT	NOMINAL V-PH-HZ	IFM TYPE	CONV OUTLET	62AQ FLA	POWER SUPPLY		DISCONNECT SIZE*	
					MCA	FUSE OR HACR BKR	FLA	LRA
48HJ008	208/230-3-60	STD	NO	21.9	60.1	70	66	366
		STD	YES	21.9	66.1	70	71	371
	460-3-60	HIGH STATIC	NO	21.9	63.2	70	69	391
		HIGH STATIC	YES	21.9	69.2	80	75	395
48HJ009	208/230-3-60	STD	NO	10.2	29.4	35	32	184
		STD	YES	10.2	32.1	35	34	186
	460-3-60	HIGH STATIC	NO	10.2	30.8	35	34	197
		HIGH STATIC	YES	10.2	33.5	35	36	199
48HJ012	208/230-3-60	STD	NO	21.9	62.1	70	68	400
		STD	YES	21.9	68.1	70	73	405
	460-3-60	HIGH STATIC	NO	21.9	65.2	70	71	425
		HIGH STATIC	YES	21.9	65.2	70	71	425
48HJ014	208/230-3-60	STD	NO	10.2	31.7	35	34	206
		STD	YES	10.2	34.4	40	37	208
	460-3-60	HIGH STATIC	NO	10.2	33.1	35	36	219
		HIGH STATIC	YES	10.2	35.8	40	38	221

LEGEND

FLA — Full Load Amps
HACR — Heating, Air Conditioning and Refrigeration
IFM — Indoor (Evaporator) Fan Motor
LRA — Locked Rotor Amps
MCA — Minimum Circuit Amps
MOCP — Maximum Overcurrent Protection
NEC — National Electrical Code
UL — Underwriters' Laboratories

*Used to determine minimum disconnect per NEC.


†Single point box CRSINGLE017A00 is part of base unit.

NOTES:

- In compliance with NEC requirements for multimotor and combination load equipment (refer to NEC Articles 430 and 440), the overcurrent protective device for the unit shall be fuse or HACR breaker. UL, Canada units may be fuse or circuit breaker.
- Unbalanced 3-Phase Supply Voltage**
Never operate a motor where a phase imbalance in supply voltage is greater than 2%. Use the following formula to determine the percent of voltage imbalance.

$$= 100 \times \frac{\text{max voltage deviation from average voltage}}{\text{average voltage}}$$

Example: Supply voltage is 460-3-60.



$$\begin{aligned} AB &= 452 \text{ v} \\ BC &= 464 \text{ v} \\ AC &= 455 \text{ v} \\ \text{Average Voltage} &= \frac{452 + 464 + 455}{3} \\ &= \frac{1371}{3} \\ &= 457 \end{aligned}$$

Determine maximum deviation from average voltage.

$$\begin{aligned} (AB) 457 - 452 &= 5 \text{ v} \\ (BC) 464 - 457 &= 7 \text{ v} \\ (AC) 457 - 455 &= 2 \text{ v} \end{aligned}$$

Maximum deviation is 7 v.

Determine percent of voltage imbalance.

$$\begin{aligned} \% \text{ Voltage Imbalance} &= 100 \times \frac{7}{457} \\ &= 1.53\% \end{aligned}$$

This amount of phase imbalance is satisfactory as it is below the maximum allowable 2%.

IMPORTANT: If the supply voltage phase imbalance is more than 2%, contact your local electric utility company immediately.



Table 1F — Electrical Data (COBRA™ Energy Recovery 50HJ008-014 Units with 62AQ200)

UNIT	NOMINAL V-PH-Hz	IFM TYPE	CONV OUTLET	62AQ FLA	HEATER CRHEATER ---A00	HEAT		POWER SUPPLY			SINGLE POINT BOX CRSINGLE ---A00	DISCONNECT SIZE*	
						FLA	MCA	FUSE OR HACR BKR	MOCP	FLA		LRA	
50HJ008	208/230-3-60	STD	NO	21.9	NONE	—/—	60.1/ 60.1	70/70	—/—	—	66/ 66	366/366	
					017	21.7/ 25.0	60.1/ 64.0	—	70/ 80	007	66/ 66	366/366	
		STD	YES	21.9	NONE	—/—	66.1/ 66.1	70/70	—/—	—	72/ 78	366/366	
					017	21.7/ 25.0	66.1/ 68.2	—	80/ 90	007	93/102	366/366	
	460-3-60	HIGH STATIC	NO	21.9	NONE	—/—	66.1/ 66.1	70/70	—/—	—	111/122	366/366	
					017	21.7/ 25.0	66.1/ 68.2	—	100/110	009	111/122	366/366	
		HIGH STATIC	YES	21.9	NONE	—/—	66.1/ 66.1	70/70	—/—	—	135/151	366/366	
					017	21.7/ 25.0	66.1/ 68.2	—	125/150	009	135/151	366/366	
50HJ009	208/230-3-60	STD	NO	10.2	NONE	—	29.4	35.0	—	—	32.0	391/391	
					016	16.7	36.1	40.0	—	006	35.0	391/391	
		STD	YES	10.2	NONE	—	40.0	45.0	—	006	38.0	391/391	
					016	16.7	42.1	45.0	—	009	54.0	391/391	
	460-3-60	HIGH STATIC	NO	10.2	NONE	—	50.0	60.0	—	006	61.0	391/391	
					016	16.7	57.0	64.8	—	009	73.0	391/391	
		HIGH STATIC	YES	10.2	NONE	—	50.2	77.9	—	010	80.0	391/391	
					016	16.7	59.1	66.9	—	010	80.0	391/391	

Table 1F — Electrical Data (COBRA™ Energy Recovery 50HJ008-014 Units with 62AQ200) (cont)

UNIT	NOMINAL V-PH-Hz	IFM TYPE	CONV OUTLET	62AQ FLA	HEATER CRHEATER --A00	HEAT	POWER SUPPLY			SINGLE POINT BOX CRSINGLE --A00	DISCONNECT SIZE*	
						FLA	MCA	FUSE OR HACR BKR	MOCP		FLA	LRA
50HJ012	208/230-3-60	STD	NO	21.9	NONE	—/—	74.9/ 74.9	—	80/ 80	†	81/ 81	465/465
					017	21.7/ 25.0	74.9/ 74.9	—	80/ 80	†	81/ 81	465/465
		STD	YES	21.9	010	33.4/ 38.5	77.6/ 84.0	—	90/ 90	†	81/ 82	465/465
					012	66.7/ 77.0	119.3/132.1	—	125/150	†	114/126	465/465
		HIGH STATIC	NO	21.9	012+017	88.4/102.0	146.4/163.4	—	150/175	†	139/155	465/465
					010+012	104.2/120.3	166.2/156.2	—	175/175	†	157/176	465/465
		HIGH STATIC	YES	21.9	NONE	—/—	80.9/ 80.9	—	90/ 90	†	87/ 87	469/469
					017	21.7/ 25.0	80.9/ 80.9	—	90/100	†	87/ 87	469/469
		STD	NO	10.2	010	33.4/ 38.5	82.4/ 88.2	—	125/150	†	120/131	469/469
					012	66.7/ 77.0	124.1/136.3	—	175/175	†	145/160	469/469
		HIGH STATIC	YES	10.2	012+017	88.4/102.0	151.2/167.6	—	175/175	†	163/181	469/469
					010+012	104.2/120.3	171.0/160.4	—	175/175	†	170.9/160.9	469/469
	460-3-60	STD	NO	10.2	NONE	—	79.3/ 79.3	—	90/ 90	†	86/ 86	488/488
					017	21.7/ 25.0	79.3/ 79.3	—	90/ 90	†	86/ 86	488/488
		STD	YES	10.2	010	33.4/ 38.5	82.3/ 88.8	—	90/100	†	86/ 87	488/488
					012	66.7/ 77.0	124.0/136.9	—	125/150	†	119/131	488/488
		HIGH STATIC	NO	10.2	012+017	88.4/102.0	151.1/168.2	—	175/175	†	144/160	488/488
					010+012	104.2/120.3	175.9/165.1	—	175/200	†	162/181	488/488
		HIGH STATIC	YES	10.2	NONE	—/—	85.3/ 85.3	—	90/ 90	†	92/ 92	493/493
					017	21.7/ 25.0	85.3/ 85.3	—	100/100	†	92/ 92	493/493
		STD	NO	10.2	010	33.4/ 38.5	87.1/ 93.0	—	150/150	†	125/136	493/493
					012	66.7/ 77.0	128.8/141.1	—	175/175	†	150/165	493/493
		HIGH STATIC	YES	10.2	012+017	88.4/102.0	155.9/172.4	—	200/200	†	168/186	493/493
					010+012	104.2/120.3	175.7/165.1	—	200/200	†	170.9/160.9	493/493
50HJ014	208/230-3-60	STD	NO	21.9	NONE	—	35.1	40.0	—	—	38.0	233.0
					016	16.7	37.5	40.0	—	011	38.0	234.0
		STD	YES	21.9	013	19.8	41.4	45.0	—	011	40.0	234.0
					015	39.7	66.2	—	70.0	014	63.0	234.0
		HIGH STATIC	NO	10.2	014+016	50.2	79.3	—	80.0	016	75.0	234.0
					013+015	60.1	76.7	—	90.0	016	86.0	234.0
		HIGH STATIC	YES	10.2	NONE	—	37.8	40.0	—	—	40.0	235.0
					016	16.7	39.6	45.0	—	011	40.0	236.0
	460-3-60	STD	NO	10.2	013	19.8	43.5	45.0	—	011	42.0	236.0
					015	39.7	68.3	—	70.0	014	65.0	236.0
		HIGH STATIC	NO	10.2	014+016	50.2	81.4	—	90.0	016	77.0	236.0
					013+015	60.1	78.8	—	90.0	016	89.0	236.0
		HIGH STATIC	YES	10.2	NONE	—	37.7	40.0	—	—	41.0	245.0
					016	16.7	40.3	45.0	—	011	41.0	245.0
		STD	NO	10.2	013	19.8	44.3	50.0	—	011	43.0	245.0
					015	39.7	69.1	—	70.0	014	66.0	245.0
		HIGH STATIC	YES	10.2	014+016	50.2	82.1	—	90.0	016	78.0	245.0
					013+015	60.1	79.6	—	90.0	016	89.0	245.0

LEGEND

FLA — Full Load Amps
HACR — Heating, Air Conditioning and Refrigeration
IFM — Indoor (Evaporator) Fan Motor
LRA — Locked Rotor Amps
MCA — Minimum Circuit Amps
MOCP — Maximum Overcurrent Protection
NEC — National Electrical Code
UL — Underwriters' Laboratories

*Used to determine minimum disconnect per NEC.

†Single point box CRSINGLE017A00 is part of base unit.

NOTES:


- In compliance with NEC requirements for multimotor and combination load equipment (refer to NEC Articles 430 and 440), the overcurrent protective device for the unit shall be fuse or HACR breaker. UL, Canada units may be fuse or circuit breaker.

2. Unbalanced 3-Phase Supply Voltage

Never operate a motor where a phase imbalance in supply voltage is greater than 2%. Use the following formula to determine the percent of voltage imbalance.

$$= 100 \times \frac{\text{max voltage deviation from average voltage}}{\text{average voltage}}$$

Example: Supply voltage is 460-3-60.



$$\begin{aligned} AB &= 452 \text{ v} \\ BC &= 464 \text{ v} \\ AC &= 455 \text{ v} \\ \text{Average Voltage} &= \frac{452 + 464 + 455}{3} \\ &= 1371 \end{aligned}$$

$$= 457$$

Determine maximum deviation from average voltage.

$$(AB) 457 - 452 = 5 \text{ v}$$

$$(BC) 464 - 457 = 7 \text{ v}$$

$$(AC) 457 - 455 = 2 \text{ v}$$

Maximum deviation is 7 v.

Determine percent of voltage imbalance.

$$\% \text{ Voltage Imbalance} = 100 \times \frac{7}{457}$$

$$= 1.53\%$$

This amount of phase imbalance is satisfactory as it is below the maximum allowable 2%.

IMPORTANT: If the supply voltage phase imbalance is more than 2%, contact your local electric utility company immediately.



Table 1G — Electrical Data (COBRA™ Energy Recovery 48HJ008-014 Units with 62AQ300)

UNIT	NOMINAL V-PH-Hz	IFM TYPE	CONV OUTLET	62AQ FLA	POWER SUPPLY		DISCONNECT SIZE*	
					MCA	FUSE OR HACR BKR	FLA	LRA
48HJ008	208/230-3-60	STD	NO	29.8	68.0	80	75	420
		STD	YES	29.8	74.0	80	80	425
		HIGH STATIC	NO	29.8	71.1	80	78	445
		HIGH STATIC	YES	29.8	77.1	80	84	449
	460-3-60	STD	NO	15.8	35.0	40	38	211
		STD	YES	15.8	37.7	40	41	213
		HIGH STATIC	NO	15.8	36.4	40	40	224
		HIGH STATIC	YES	15.8	39.1	45	43	226
48HJ009	208/230-3-60	STD	NO	29.8	70.0	80	77	454
		STD	YES	29.8	76.0	80	82	459
		HIGH STATIC	NO	29.8	73.1	80	80	479
		HIGH STATIC	YES	29.8	79.1	80	86	483
	460-3-60	STD	NO	15.8	37.3	40	41	233
		STD	YES	15.8	40.0	45	43	235
		HIGH STATIC	NO	15.8	38.7	45	42	246
		HIGH STATIC	YES	15.8	41.4	45	45	248
48HJ012	208/230-3-60	STD	NO	29.8	82.8	90	90	519
		STD	YES	29.8	88.8	100	96	523
		HIGH STATIC	NO	29.8	87.2	100	95	542
		HIGH STATIC	YES	29.8	93.2	100	101	547
	460-3-60	STD	NO	15.8	40.7	45	44	261
		STD	YES	15.8	43.4	45	47	263
		HIGH STATIC	NO	15.8	43.3	50	47	272
		HIGH STATIC	YES	15.8	46.0	50	50	274
48HJ014	208/230-3-60	STD	NO	29.8	90.4	100	98	604
	208/230-3-60	STD	YES	29.8	96.4	100	104	609
	460-3-60	STD	NO	15.8	44.9	50	49	297
	460-3-60	STD	YES	15.8	47.6	50	51	299

LEGEND

FLA — Full Load Amps
HACR — Heating, Air Conditioning and Refrigeration
IFM — Indoor (Evaporator) Fan Motor
LRA — Locked Rotor Amps
MCA — Minimum Circuit Amps
MOCP — Maximum Overcurrent Protection
NEC — National Electrical Code
UL — Underwriters' Laboratories

*Used to determine minimum disconnect per NEC.


†Single point box CRSINGLE017A00 is part of base unit.

NOTES:

1. In compliance with NEC requirements for multimotor and combination load equipment (refer to NEC Articles 430 and 440), the overcurrent protective device for the unit shall be fuse or HACR breaker. UL, Canada units may be fuse or circuit breaker.
2. **Unbalanced 3-Phase Supply Voltage**
Never operate a motor where a phase imbalance in supply voltage is greater than 2%. Use the following formula to determine the percent of voltage imbalance.

$$= 100 \times \frac{\text{max voltage deviation from average voltage}}{\text{average voltage}}$$

Example: Supply voltage is 460-3-60.



$$\begin{aligned} AB &= 452 \text{ v} \\ BC &= 464 \text{ v} \\ AC &= 455 \text{ v} \\ \text{Average Voltage} &= \frac{452 + 464 + 455}{3} \\ &= \frac{1371}{3} \\ &= 457 \end{aligned}$$

Determine maximum deviation from average voltage.

$$\begin{aligned} (AB) 457 - 452 &= 5 \text{ v} \\ (BC) 464 - 457 &= 7 \text{ v} \\ (AC) 457 - 455 &= 2 \text{ v} \end{aligned}$$

Maximum deviation is 7 v.

Determine percent of voltage imbalance.

$$\begin{aligned} \% \text{ Voltage Imbalance} &= 100 \times \frac{7}{457} \\ &= 1.53\% \end{aligned}$$

This amount of phase imbalance is satisfactory as it is below the maximum allowable 2%.

IMPORTANT: If the supply voltage phase imbalance is more than 2%, contact your local electric utility company immediately.



Table 1H — Electrical Data (COBRA™ Energy Recovery 50HJ008-014 Units with 62AQ300)

UNIT	NOMINAL V-PH-Hz	IFM TYPE	CONV OUTLET	62AQ FLA	HEATER CRHEATER --A00	HEAT		POWER SUPPLY			SINGLE POINT BOX CRSINGLE --A00	DISCONNECT SIZE*	
						FLA	MCA	FUSE OR HACR BKR	MOCP	FLA		LRA	
50HJ008	208/230-3-60	STD	NO	29.8	NONE	—/—	68.0/ 68.0	80/80	—	—	—	75/ 75	420/420
					017	21.7/ 25.0	68.7/ 72.9	—	90/ 90	007	75/ 75	420/420	
					010	33.4/ 38.5	83.3/ 89.7	—	100/100	007	81/ 87	420/420	
					011	51.7/ 59.7	106.2/116.2	—	125/125	009	102/112	420/420	
		STD	YES	29.8	012	66.7/ 77.0	125.0/137.8	—	150/150	009	120/131	420/420	
					012+017	88.4/102.0	152.1/169.1	—	175/175	009	145/160	420/420	
					NONE	—/—	74.0/ 74.0	80/80	—	—	80/ 80	425/425	
					017	21.7/ 25.0	74.0/ 77.1	—	90/ 90	007	80/ 80	425/425	
		HIGH STATIC	NO	29.8	010	33.4/ 38.5	88.1/ 93.9	—	100/110	009	87/ 92	425/425	
					011	51.7/ 59.7	111.0/120.4	—	125/125	009	108/116	425/425	
					012	66.7/ 77.0	128.9/142.0	—	150/150	009	125/136	425/425	
					012+017	88.4/102.0	156.9/173.3	—	175/175	009	150/165	425/425	
		HIGH STATIC	YES	29.8	NONE	—/—	71.1/ 71.1	80/80	—	—	78/ 78	445/445	
					017	21.7/ 25.0	71.8/ 76.0	—	90/ 90	007	78/ 78	445/445	
					010	33.4/ 38.5	86.4/ 92.8	—	100/110	009	85/ 91	445/445	
					011	51.7/ 59.7	109.3/119.3	—	125/125	009	106/115	445/445	
		STD	NO	15.8	012	66.7/ 77.0	128.1/140.9	—	150/150	009	123/135	445/445	
					012+017	88.4/102.0	155.2/172.2	—	175/175	009	148/164	445/445	
					NONE	—/—	77.1/ 77.1	80/80	—	—	84/ 84	449/449	
					017	21.7/ 25.0	77.1/ 80.2	—	90/100	007	84/ 84	449/449	
		HIGH STATIC	YES	29.8	010	33.4/ 38.5	91.2/ 97.0	—	110/110	009	90/ 96	449/449	
					011	51.7/ 59.7	114.1/123.5	—	125/150	009	111/120	449/449	
					012	66.7/ 77.0	132.9/145.1	—	150/150	009	129/140	449/449	
					012+017	88.4/102.0	160.0/176.4	—	175/200	009	154/169	449/449	
		STD	NO	15.8	NONE	—	35.0	40.0	—	—	38.0	211.0	
					016	16.7	44.4	60.0	—	006	41.0	211.0	
					013	19.8	48.3	60.0	—	006	45.0	211.0	
					014	33.4	65.3	—	80.0	008	61.0	211.0	
		STD	YES	15.8	015	39.7	73.1	—	90.0	008	68.0	211.0	
					014+016	50.2	86.2	—	100.0	010	80.0	211.0	
					NONE	—	37.7	40.0	—	—	41.0	213.0	
					016	16.7	46.5	60.0	—	006	44.0	213.0	
		HIGH STATIC	NO	15.8	013	19.8	50.4	60.0	—	006	47.0	213.0	
					014	33.4	67.4	—	80.0	008	63.0	213.0	
					015	39.7	75.2	—	90.0	008	70.0	213.0	
					014+016	50.2	88.3	—	100.0	010	82.0	213.0	
		HIGH STATIC	YES	15.8	NONE	—	36.4	40.0	—	—	40.0	223.0	
					016	16.7	45.8	60.0	—	006	43.0	224.0	
					013	19.8	49.7	60.0	—	006	47.0	224.0	
					014	33.4	66.7	—	80.0	008	62.0	224.0	
		HIGH STATIC	YES	15.8	015	39.7	74.5	—	90.0	008	69.0	224.0	
					014+016	50.2	87.6	—	100.0	010	81.0	224.0	
					NONE	—	39.1	45.0	—	—	43.0	225.0	
					016	16.7	47.9	60.0	—	006	45.0	226.0	
		STD	NO	15.8	013	19.8	51.8	60.0	—	006	49.0	226.0	
					014	33.4	68.8	—	80.0	008	65.0	226.0	
					015	39.7	76.6	—	90.0	008	72.0	226.0	
					014+016	50.2	89.7	—	100.0	010	84.0	226.0	
50HJ009	208/230-3-60	STD	NO	29.8	NONE	—/—	70.0/ 70.0	80/80	—	†	77/ 77	454/454	
					017	21.7/ 25.0	70.0/ 72.9	—	90/ 90	012	77/ 77	454/454	
					010	33.4/ 38.5	83.3/ 89.7	—	100/100	012	81/ 87	454/454	
					011	51.7/ 59.7	106.2/116.2	—	125/125	015	102/112	454/454	
		STD	YES	29.8	012	66.7/ 77.0	125.0/137.8	—	150/150	015	120/131	454/454	
					012+017	88.4/102.0	152.1/169.1	—	175/175	015	145/160	454/454	
					NONE	—/—	76.0/ 76.0	80/80	—	†	82/ 82	459/459	
					017	21.7/ 25.0	76.0/ 77.1	—	90/ 90	012	82/ 82	459/459	
		HIGH STATIC	NO	29.8	010	33.4/ 38.5	88.1/ 93.9	—	100/110	015	87/ 92	459/459	
					011	51.7/ 59.7	111.0/120.4	—	125/125	015	108/116	459/459	
					012	66.7/ 77.0	129.8/142.0	—	150/150	015	125/136	459/459	
					012+017	88.4/102.0	156.9/173.3	—	175/175	015	150/165	459/459	
		HIGH STATIC	YES	29.8	NONE	—/—	73.1/ 73.1	80/80	—	†	80/ 80	479/479	
					017	21.7/ 25.0	73.1/ 76.0	—	90/ 90	012	80/ 80	479/479	
					010	33.4/ 38.5	86.4/ 92.8	—	100/110	015	85/ 91	479/479	
					011	51.7/ 59.7	109.3/119.3	—	125/125	015	106/115	479/479	
		STD	NO	15.8	012	66.7/ 77.0	128.1/140.9	—	150/150	015	123/135	479/479	
					012+017	88.4/102.0	155.2/172.2	—	175/175	015	148/164	479/479	
					NONE	—/—	79.1/ 79.1	80/80	—	†	86/ 86	483/483	
					017	21.7/ 25.0	79.1/ 80.2	—	90/100	012	86/ 86	483/483	
		HIGH STATIC	YES	29.8	010	33.4/ 38.5	91.2/ 97.0	—	110/110	015	111/120	483/483	
					011	51.7/ 59.7	114.1/123.5	—	125/150	015	129/140	483/483	
					012	66.7/ 77.0	132.9/145.1	—	150/150	015	154/169	483/483	
					012+017	88.4/102.0	160.0/176.4	—	175/200	015	184/197	483/483	
		STD	NO	15.8	NONE	—	37.3	40.0	—	—	41.0	233.0	
					016	16.7	44.4	60.0	—	011	41.0	233.0	
					013	19.8	48.3	60.0	—	011	45.0	233.0	
					014	33.4	65.3	—	80.0	014	61.0	233.0	
		STD	YES	15.8	015	39.7	73.1	—	90.0	014	68.0	233.0	
					014+016	50.2	86.2	—	100.0	016	80.0	233.0	
					NONE	—	40.0	45.0	—	011	43.0	235.0	
					016	16.7	46.5	60.0	—	011	44.0	235.0	
		HIGH STATIC	NO	15.8	013	19.8	50						

Table 1H — Electrical Data (COBRA™ Energy Recovery 50HJ008-014 Units with 62AQ300) (cont)

UNIT	NOMINAL V-PH-Hz	IFM TYPE	CONV OUTLET	62AQ FLA	HEATER CRHEATER ---A00	HEAT		POWER SUPPLY			SINGLE POINT BOX CRSINGLE ---A00	DISCONNECT SIZE*	
						FLA	MCA	FUSE OR HACR BKR	MOPC	FLA		FLA	LRA
50HJ012	208/230-3-60	STD	NO	29.8	NONE	—/—	82.8/ 82.8	—	90/ 90	†	90/ 90	519/519	
					017	21.7/ 25.0	82.8/ 82.8	—	90/ 90	†	90/ 90	519/519	
		STD	YES	29.8	010	33.4/ 38.5	86.4/ 92.8	—	100/110	†	90/ 91	519/519	
					012	66.7/ 77.0	128.1/140.9	—	150/150	†	123/135	519/519	
		HIGH STATIC	NO	29.8	012+017	88.4/102.0	155.2/172.2	—	175/175	†	148/164	519/519	
					010+012	104.2/120.3	175.0/165.0	—	175/200	†	166/185	519/519	
		HIGH STATIC	YES	29.8	NONE	—/—	87.2/ 87.2	—	100/100	†	96/ 96	523/523	
					017	21.7/ 25.0	87.2/ 87.2	—	100/100	†	96/ 96	523/523	
	460-3-60	STD	NO	15.8	010	33.4/ 3.8.5	90.8/ 97.2	—	100/100	†	95/ 95	542/542	
					012	66.7/ 77.0	132.5/145.3	—	150/150	†	128/140	542/542	
		STD	YES	15.8	012+017	88.4/102.0	159.6/176.6	—	175/200	†	153/169	542/542	
					010+012	104.2/120.3	179.4/169.4	—	200/200	†	171/190	542/542	
50HJ014	208/230-3-60	STD	NO	29.8	NONE	—/—	93.2/ 93.2	—	100/100	†	101/101	547/547	
					017	21.7/ 25.0	93.2/ 93.2	—	100/100	†	101/101	547/547	
		STD	YES	15.8	010	33.4/ 38.5	95.6/101.4	—	110/110	†	101/101	547/547	
					012	66.7/ 77.0	137.3/149.5	—	150/150	†	134/145	547/547	
		HIGH STATIC	NO	15.8	012+017	88.4/102.0	164.4/180.8	—	175/200	†	159/174	547/547	
					010+012	104.2/120.3	184.2/173.6	—	200/200	†	177/195	547/547	
		HIGH STATIC	YES	15.8	NONE	—/—	40.7	45.0	—	—	44.0	260.0	
					016	16.7	45.8	60.0	—	011	44.0	261.0	
	460-3-60	STD	NO	15.8	013	19.8	49.7	60.0	—	011	47.0	261.0	
					014	33.4	66.7	—	80.0	014	62.0	261.0	
		STD	YES	15.8	014+016	50.2	87.6	—	100.0	016	81.0	261.0	
					013+015	60.1	85.0	—	110.0	016	93.0	261.0	
		HIGH STATIC	NO	15.8	NONE	—/—	43.4	45.0	—	—	47.0	262.0	
					016	16.7	47.9	60.0	—	014	47.0	263.0	
		HIGH STATIC	YES	15.8	013	19.8	51.8	60.0	—	011	49.0	263.0	
					014	33.4	68.8	—	80.0	014	65.0	263.0	
		HIGH STATIC	NO	15.8	014+016	50.2	89.7	—	100.0	016	84.0	263.0	
					013+015	60.1	87.6	—	110.0	016	96.0	263.0	
		HIGH STATIC	YES	15.8	NONE	—/—	46.0	50.0	—	—	50.0	274.0	
					016	16.7	50.5	60.0	—	014	50.0	274.0	
		HIGH STATIC	NO	15.8	013	19.8	54.4	60.0	—	011	52.0	274.0	
					014	33.4	71.4	—	90.0	014	68.0	274.0	
		HIGH STATIC	YES	15.8	014+016	50.2	92.3	—	100.0	016	87.0	274.0	
					013+015	60.1	89.7	—	110.0	016	98.0	274.0	

LEGEND

FLA — Full Load Amps
HACR — Heating, Air Conditioning and Refrigeration
IFM — Indoor (Evaporator) Fan Motor
LRA — Locked Rotor Amps
MCA — Minimum Circuit Amps
MOCP — Maximum Overcurrent Protection
NEC — National Electrical Code
UL — Underwriters' Laboratories


*Used to determine minimum disconnect per NEC.
†Single point box CRSINGLE017A00 is part of base unit.

NOTES:

- In compliance with NEC requirements for multimotor and combination load equipment (refer to NEC Articles 430 and 440), the overcurrent protective device for the unit shall be fuse or HACR breaker. UL, Canada units may be fuse or circuit breaker.
- Unbalanced 3-Phase Supply Voltage**
Never operate a motor where a phase imbalance in supply voltage is greater than 2%. Use the following formula to determine the percent of voltage imbalance.

$$= 100 \times \frac{\text{max voltage deviation from average voltage}}{\text{average voltage}}$$

Example: Supply voltage is 460-3-60.



$$\begin{aligned} AB &= 452 \text{ v} \\ BC &= 464 \text{ v} \\ AC &= 455 \text{ v} \\ \text{Average Voltage} &= \frac{452 + 464 + 455}{3} \\ &= 1371 \\ &= 457 \end{aligned}$$

Determine maximum deviation from average voltage.

$$\begin{aligned} (AB) 457 - 452 &= 5 \text{ v} \\ (BC) 464 - 457 &= 7 \text{ v} \\ (AC) 457 - 455 &= 2 \text{ v} \end{aligned}$$

Maximum deviation is 7 v.

Determine percent of voltage imbalance.


$$\% \text{ Voltage Imbalance} = 100 \times \frac{7}{457}$$

$$= 1.53\%$$


This amount of phase imbalance is satisfactory as it is below the maximum allowable 2%.

IMPORTANT: If the supply voltage phase imbalance is more than 2%, contact your local electric utility company immediately.




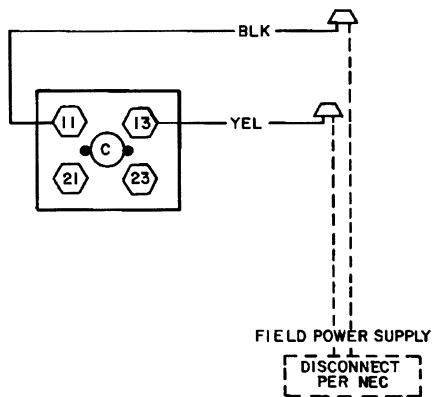


208/230-1-60

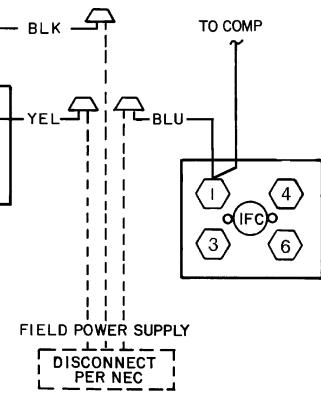


208/230-3-60
460-3-60
(SIZE 007 ONLY)

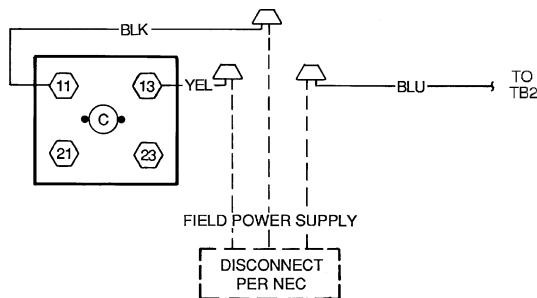


575-3-60
(SIZE 007 ONLY)

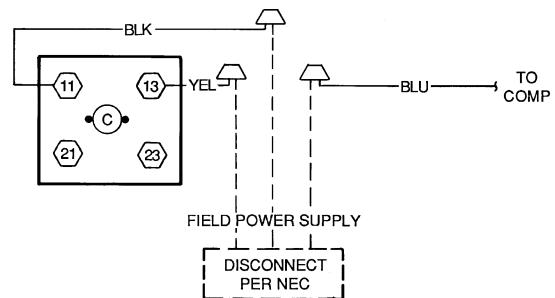

208/230-3-60
575-3-60, 460-3-60
(SIZES 004-006)

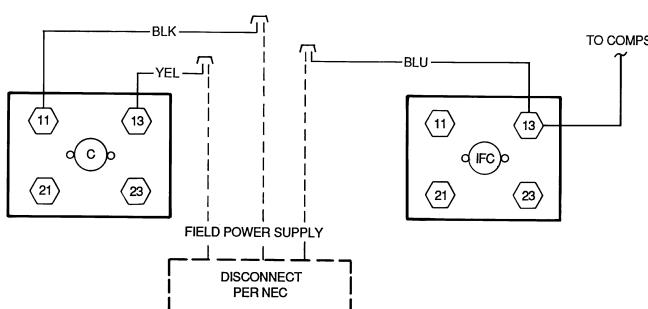

208/230-3-60 AND 460-3-60
(SIZES 008-014)

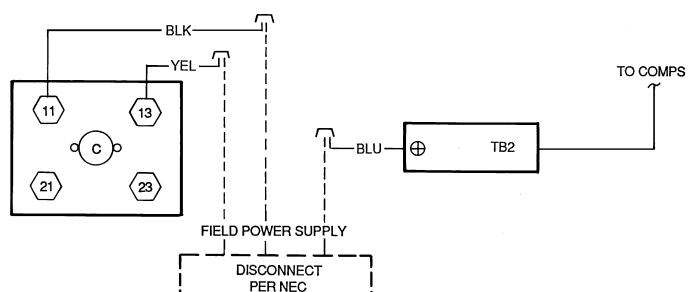

575-3-60
(SIZES 008-014)

LEGEND	
C	— Contactor
COMP	— Compressor
IFC	— Indoor-Fan Contactor
NEC	— National Electrical Code
TB	— Terminal Block

Fig. 7 — Power Wiring Connections

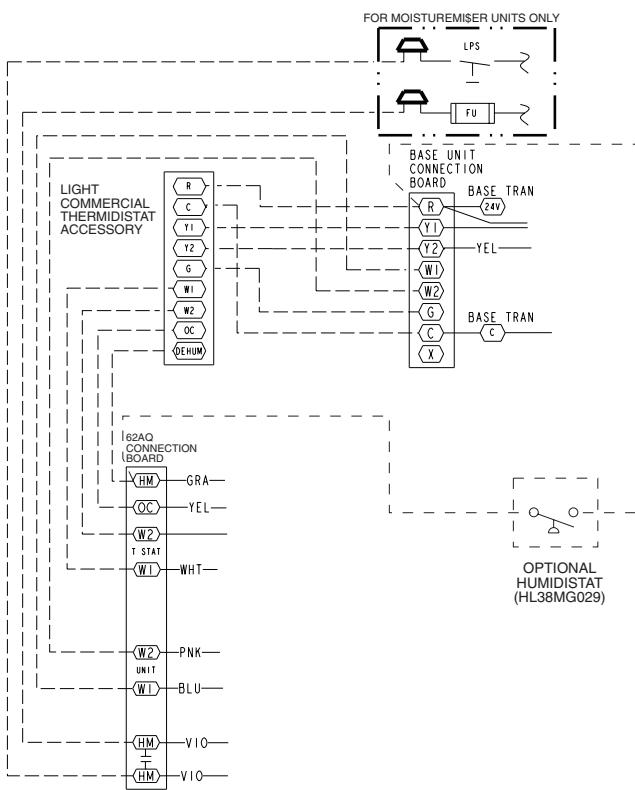


Fig. 8 — Light Commercial Thermidistat Accessory Low-Voltage Connections

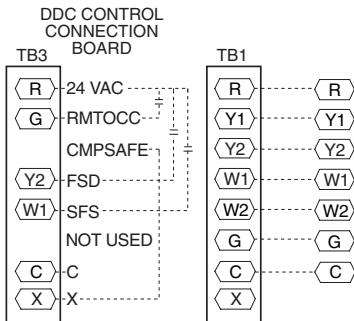


Fig. 9 — Low Voltage Connections (Units with PremierLink™ Controls)

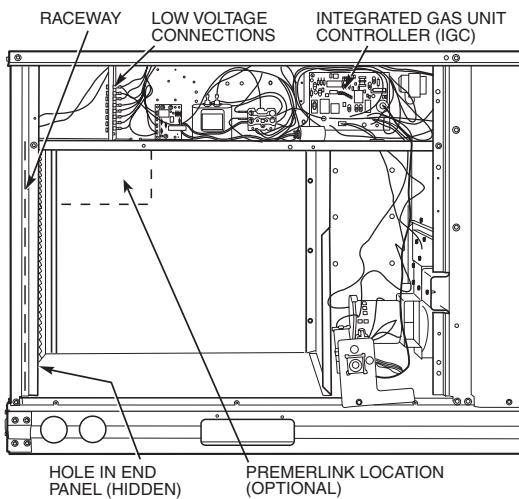


Fig. 10 — Field Control Wiring Raceway (48HJ Shown)

Step 9 — Assemble and Mount Supply-Air Hood

Hood — The hood kit supplied with the energy recovery section is needed to complete this installation. See Fig. 11. The energy recovery section supply air hood installs around its motorized damper inlet.

NOTE: Mount the hood sides to the energy recovery section first, and then the hood top for easier installation. The thermostats are shipped factory-wired and taped behind the damper blade of the energy recovery section. Knobs and screws are in hood package.

1. Assemble and mount supply air hood as shown in Fig. 11.
2. Discard the tape that holds the thermostats behind the damper plates. Mount thermostats to the hood sides of the energy recovery section unit into the holes provided, with thermostat terminals facing up. See Fig. 11. Mount outside cooling set point thermostat part number HH22HA060 (white label) on the left side of the hood. See Fig. 11.
3. Mount the outside heating thermostat part number HH22HA065 (red label) on the right side of the hood. See Fig. 11.
4. From the outside of the unit's side panels fasten the thermostat(s) with two mounting screws, with the quick connect terminals face up. See Fig. 11.
5. Install thermostat knobs (provided in kit). See Fig. 11.
6. Set supply air quantity (on units with optional factory-installed supply air fan [GA] or field-installed accessory supply air fan kit [CRFANKIT001-006A00]). Select the fan speed and damper position to obtain desired cfm. Relocate damper stops to the desired position on the damper support rail and adjust the fan speed by relocating the wire on the supply fan motor terminal block. Factory set position is 45 degrees for the damper position, and medium speed for the motor. Relocate stops to top hole for 30 degrees, bottom hole for 60 degrees, and remove stops for 90 degrees (see Fig. 11).
7. Install the aluminum filter screen and end cap with screws along the top, as shown in Fig. 11.

Step 10 — Mount the Barometric Relief Damper

Damper — The hood kit supplied with the energy recovery section is needed to complete this installation. The exhaust air hood (that includes the barometric relief damper) must be assembled and installed on the energy recovery section per the instructions below. See Fig. 12.

1. Install the barometric relief damper onto the energy recovery section by mounting the hinge with 2 screws then sliding in the hinge pin. See Fig. 12.
2. Install damper limiter for 30, 45, or 60 degree angles. Limiter pin not required for 90-degree setting (set to the desired position based on CFM requirements and fan speed). See Fig. 12. Fan speed is adjusted by relocating wires on fan terminal blocks.
3. Loosen compressor bolts and remove shipping blocks from under compressor on the 62AQ060 and 62AQ100 sizes only.
4. Install exhaust hood.
5. Install wire guard as shown in Fig. 12.

⚠ WARNING

Never operate the unit without the wire guard in place.

Step 11 — Set the Outdoor Cooling and Heating Thermostats

IMPORTANT: The energy recovery section unit is shipped with an outdoor thermostat set at 55 F which locks out mechanical cooling on the RTU (rooftop unit) and the energy recovery section compressor. If this feature is not desirable, the rooftop unit's compressor can be allowed to run by relocating both gray wires to the same side of the Low Temperature Lockout Thermostat (LTLO) leaving the white wire on the opposite pole, locking out only the energy recovery section compressor. The LTLO is also accessible by removing the filter access panel and the door of the damper mounting bracket. Refer to Troubleshooting section.

COOLING — During the unoccupied period, the economizer mode of operation is used as the first stage of cooling. When the outside air temperature is below the cooling thermostat set point, the outside air will be used for first stage cooling.

HEATING — The heating thermostat should be adjusted to the second stage balance point (heat output of the energy recovery section plus the heat output of the first stage on rooftop unit equals building load at this temperature). Above this setting, first stage heating will be the energy recovery section unit and second stage will be the first stage of the rooftop unit. Below this point first stage heating will be the energy recovery section unit plus first stage heating of the rooftop unit. The second stage will be the second stage of the rooftop unit.

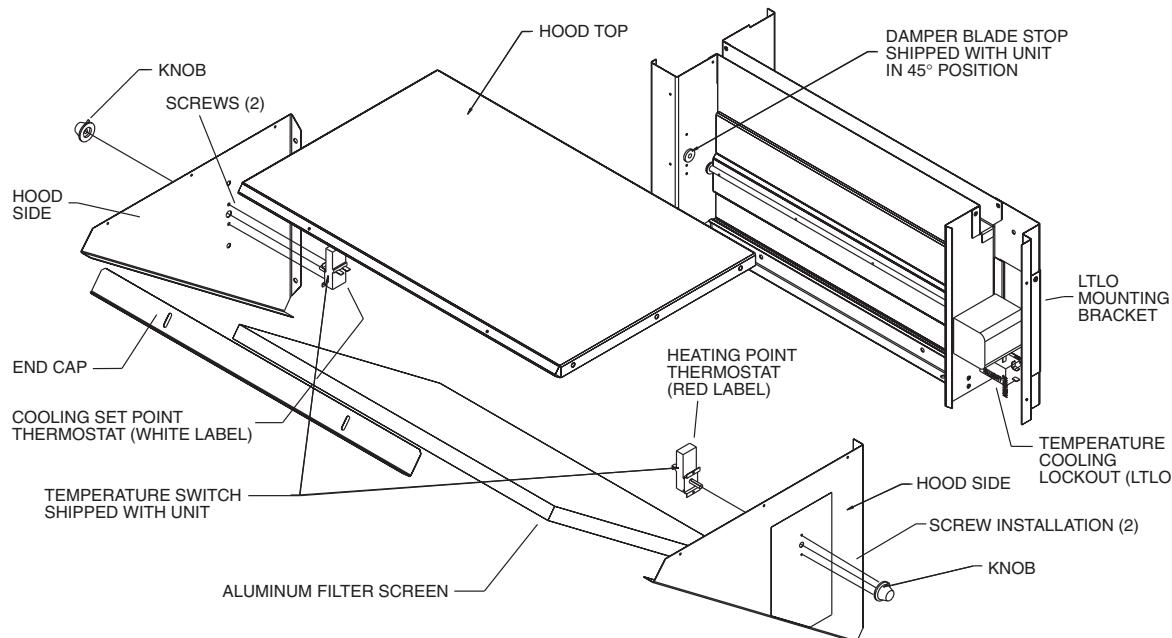


Fig. 11 — Energy Recovery Section Supply-Air Hood Assembly

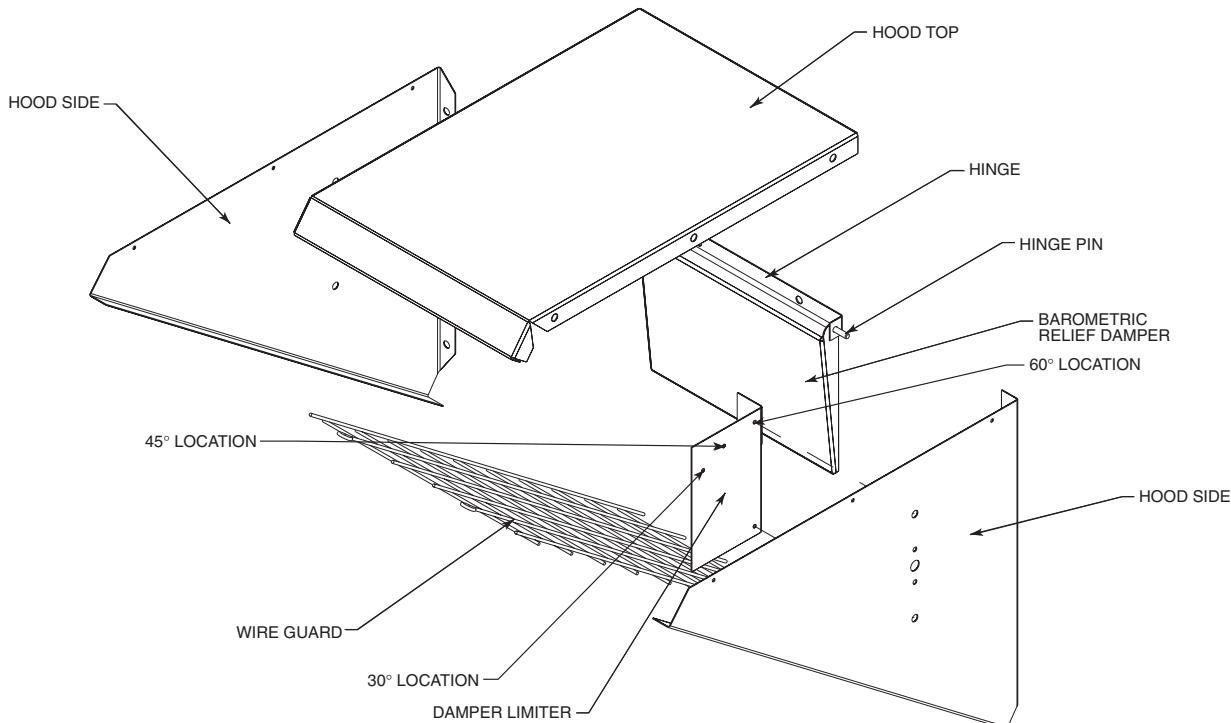


Fig. 12 — Energy Recovery Section Barometric Exhaust Air Hood Assembly

LIGHT COMMERCIAL THERMIDISTAT ACCESSORY

General — A Light Commercial Thermidistat Accessory (part number TSTATCCPLH01-B) or PremierLink™ controller with humidistat is required for each unit for field installation to control the energy recovery section. See Fig. 13.

The Light Commercial Thermidistat is a 7-day programmable, wall-mounted, low-voltage control which combines temperature and humidity control in a single unit. It provides separate set points for heating and cooling, and adds dehumidification with separate set points for occupied and unoccupied periods. Different heating and cooling set points and times are programmable for up to 4 periods per day and 7 days per week. The dehumidification output provides direct control of humidity. During power loss an internal memory stores programs and settings for unlimited time, and the clock continues to run for at least 8 hours. Batteries are not used.

Power — Note that this control does not require batteries and is not “power stealing.” It does require 24 vac (R and C terminals) from the RTU’s low-voltage transformer to be connected to it for proper operation. The control will not operate without these 2 connections. See Fig. 14.

Dehumidification Equipment and Connections — The dehumidification output terminals on the Light Commercial Thermidistat must be connected to the dehumidify input terminals on the energy recovery section. Additionally, if the RTU is equipped with optional MoistureMi\$er™ Dehumidification accessory, a relay in the energy recovery section energizes the MoistureMi\$er solenoid to activate the enhanced dehumidification mode.

Step 1 — Select Light Commercial Thermidistat Location

Light Commercial Thermidistat should be mounted:

- Approximately 5 ft (1.5 m) from floor.
- Close to or in a frequently used room, preferably on an inside partitioning wall.
- On a section of wall without pipes or ductwork.

The Light Commercial Thermidistat should NOT be mounted:

- Close to a window, on an outside wall, or next to a door leading to the outside.
- Exposed to direct light and heat from a lamp, sun, fireplace, or other temperature-radiating object that may cause a false reading.
- Close to or in direct airflow from supply registers and return-air registers.
- In areas with poor air circulation, such as behind a door or in an alcove.

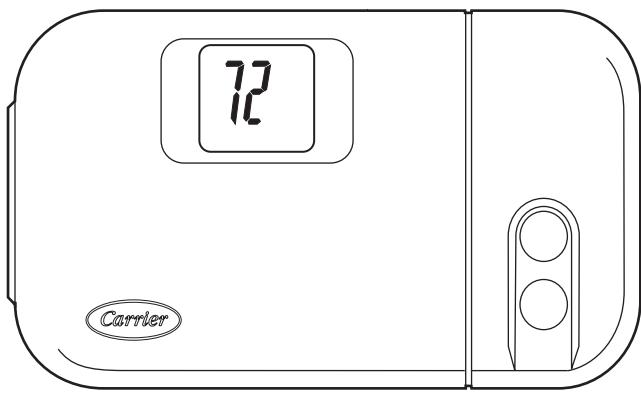


Fig. 13 — Light Commercial Thermidistat Accessory

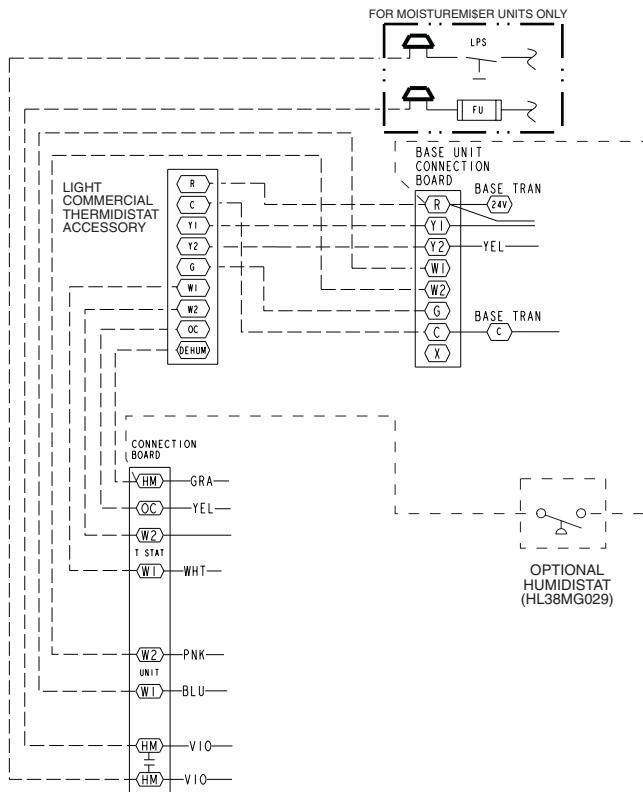


Fig. 14 — Light Commercial Thermidistat Accessory Low-Voltage Connections

Step 2 — Set DIP Switches — There is a 4-section DIP switch within the Light Commercial Thermidistat which must be properly set by the installer. It is easiest to set these 4 switches before the Light Commercial Thermidistat is mounted to the wall, so complete the following steps first:

1. Open hinged Light Commercial Thermidistat cover.
2. Remove cover completely by gently snapping it apart at the hinge.
3. Switches are located in upper right corner of circuit board. To change switch position, use corner of a small screwdriver to slide switch to opposite position.
4. After switches have been set, do not reassemble the 2 halves. The rear plastic will be first mounted to wall.

SWITCH 1 — Not used

SWITCH 2 — Not used

SWITCH 3 — SMART/CONVENTIONAL RECOVERY — Selects between conventional or smart recovery from setback. Conventional recovery changes to new set point at preprogrammed time. Smart recovery, which is active in both heating and cooling, starts selected cycle 90 minutes earlier and smoothly adjusts set point so room will arrive at programmed temperature at programmed time.

NOTE: The occupied output is only energized at the preprogrammed time.

To Set:

OFF — for smart recovery. This is factory default.
ON — for conventional recovery.

SWITCH 4 — INSTALLER TEST OFF/ON — Selects a special installer test mode that assists with checkout and troubleshooting. See Step 5 — Conduct Light Commercial Thermidistat Start-Up and Checkout.

To Set:

OFF — for normal operation. (Factory default setting.)
ON — for Installer Test mode.

Step 3 — Install Light Commercial Thermidistat

⚠ WARNING

Before installing Light Commercial Thermidistat, turn off all power to Weathermaster® COBRA units. There may be more than one power disconnect. Electrical shock can cause personal injury or death. Install lockout tags on disconnects.

1. Turn off all power to equipment. Tag disconnect.
2. If an existing thermostat is being replaced:
 - a. Remove existing thermostat from wall.
 - b. Disconnect wires from existing thermostat, one at a time.
 - c. As each wire is disconnected, record wire color and terminal marking.
 - d. New or additional wire may be needed to accommodate added humidity outputs transformer common.
 - e. Discard or recycle old thermostat.

⚠ WARNING

Mercury is a hazardous waste and MUST be disposed of properly.

3. Route wires through large hole in rear plastic. Level rear plastic (separated from front plastic in Step 2 — Set DIP Switches, on page 30). Level rear plastic against wall (for aesthetic value only — Light Commercial Thermidistat need not be leveled for proper operation) and mark wall through 2 mounting holes.
4. Drill two $\frac{3}{16}$ -in. mounting holes in wall where marked.
5. Secure rear plastic to wall with 2 screws and anchors provided. Additional mounting holes are available for more secure mounting if needed. Make sure all wires extend through hole in mounting base.
6. Adjust length and routing of each wire to reach proper connector block and terminal on mounting base with $\frac{1}{4}$ -in. extra length. Strip only $\frac{1}{4}$ in. of insulation from each wire to prevent adjacent wires from shorting together when connected.
7. Match and connect equipment wires to proper terminals of each connector block. Remember R and C must be connected for proper operation (see Fig. 14).

⚠ CAUTION

Improper wiring or installation may damage Light Commercial Thermidistat. Check to make sure wiring is correct before proceeding with installation or turning on power. Refer to wiring schematic in the Troubleshooting section of this manual.

8. Push any excess wire into wall and against rear plastic. Seal hole in wall to prevent air leaks. Leaks can affect operation.
9. Reattach Light Commercial Thermidistat body to mounting base by first reattaching hinge.
10. Close Light Commercial Thermidistat assembly, making sure pins on back of circuit board align with sockets in connector.
11. Turn on power to equipment.

On power up, all display segments will light for 2 seconds. For the next 8 seconds, a 2-digit code appears on LED display that identifies Light Commercial Thermidistat configuration:

CP — Commercial Product

Step 4 — Set Light Commercial Thermidistat Configuration (Fig. 15 and 16)

Configuration options, like DIP switch settings, are intended to be selected at installation and normally are not modified by the owner. These options must be made as part of the installation. A special procedure allows entry into the Configuration mode. While in configuration mode, up to 10 selections can be made. A description of each selection and how to use the Configuration mode are as follows:

CONFIGURATION OPTIONS — SUMMARY

- Option 1 — Anticipator adjustment
- Option 2 — Clean filter timer adjustment
- Option 3 — English/Metric selection
- Option 4 — Fan (G) ON with W selection
- Option 9 — Holiday heat set point
- Option 10 — Holiday cool set point
- Option 11 — Holiday humidity set point
- Option 13 — Room temperature offset adjustment
- Option 14 — Heat cool deadband adjustment
- Option 21 — Keyboard lock

TO ENTER CONFIGURATION MODE — Press and hold FAN button for approximately 10 seconds until COOL set point display indicates a flashing “01”. The Light Commercial Thermidistat is now in Configuration mode. It will automatically exit this mode if no button is pressed for 3 minutes. Pressing HOLD End button will exit the Configuration mode immediately.

WHILE IN CONFIGURATION MODE — The upper small (COOL set point) display indicates selected option number and large display indicates selection made within that option. One of these will be flashing. The up and down set point buttons are used both to move between available options and to make selection for each option. When option number (small display) is flashing, the up and down set point buttons allows for scrolling through options moving between available option numbers. After desired option number has been selected, press SET TIME/TEMP button once. The large display will now flash, indicating that up and down set point buttons now control available choices within that option. Each press of SET TIME/TEMP button switches between available option (small display) and available selections within each option (large display).

Option 1 — Anticipator Adjustment — This adjustment controls sensitivity and cycle rate of Light Commercial Thermidistat. Higher numbers decrease sensitivity and slow cycle rate. Lower numbers increase sensitivity and cycle rate. Anticipator values can range from 1 to 9. Factory default is 3. This default selection provides optimum performance in nearly all installations. Try it first; do not change setting unless there is evidence of need to do so.

Unlike conventional anticipators, this setting is not determined by current draw. There is no need to measure, know, or compensate for current draw. There is also no droop with this Light Commercial Thermidistat. Regardless of setting and number of stages, both heating and cooling will control to their respective set points.

TO ADJUST:

1. Enter Configuration mode. The upper small (COOL set point) display will be flashing 01. If not, use up and down set point buttons to move it to 01.
2. Press SET TIME/TEMP button once to flash current selection of 1, 2, 3, 4, 5, 6, 7, 8, or 9 on large display. Factory default is 3.
3. Use up and down set point buttons to move to desired anticipator setting.
4. Press SET TIME/TEMP button again to flash small upper display for selection of another option, or press HOLD End to exit Configuration mode.

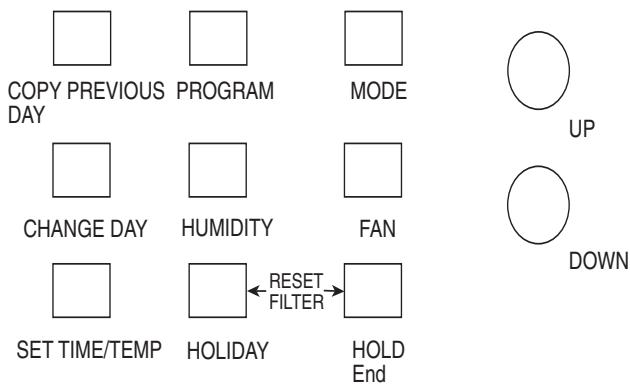


Fig. 15 — Light Commercial Thermidstat Keypad

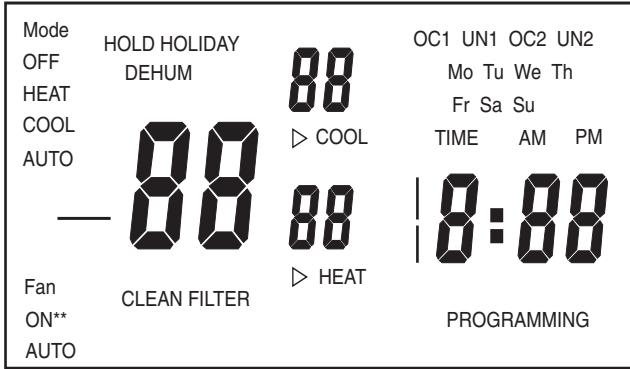


Fig. 16 — Light Commercial Thermidstat LCD on Power Up

Option 2 — Clean Filter Timer — Select hours of blower operation (heating, cooling, or fan) before CLEAN FILTER icon is displayed. With OFF selected, icon will never come on, disabling this feature. Time selection can range from 400 to 3600 blower operation hours by selecting numbers 1 through 9. (Time is 400 times number selected.) Factory default is 2 (800 hr). Recommended blower operation hours selections are: disposable filter — 400 to 800 hr; media filter — 1200 to 1600 hr; electronic air cleaner — 1600 to 2400 hr.

TO SELECT OR ADJUST:

1. Enter Configuration mode. Use up and down set point buttons to make small display (now flashing) indicate 02.
2. Press SET TIME/TEMP button once to display current selection of 1, 2, 3, 4, 5, 6, 7, 8, or 9 on large display. Factory default is 2.
3. Use up and down set point buttons to move between available choices.
4. Press SET TIME/TEMP button again to flash small upper display for selection of another option, or press HOLD End to exit Configuration mode.

Option 3 — English/Metric — Select between Fahrenheit and Celsius operation. Factory default is Fahrenheit.

TO SELECT OR ADJUST:

1. Enter Configuration mode. Use up and down set point buttons to make small display (now flashing) indicate 03.
2. Press SET TIME/TEMP button once to flash current selection of F or C. Factory default is F.
3. Use up and down set point buttons to move between F and C on large display.
4. Press SET TIME/TEMP button again to flash small upper display for selection of another option, or press HOLD End to exit Configuration mode.

Option 4 — Fan (G) On With W — This selection determines whether fan (G) output is to be ON or OFF when any W (furnace or strip heat) output is ON. Most furnaces and fan coils manage their own blowers and do not require separate G signal. For these applications, select OFF. Some auxiliary heaters require separate G signal to turn on blower. In this case, select ON. Factory default is OF (off).

TO SELECT:

1. Enter Configuration mode. Use up and down set point buttons to make small display (now flashing) indicate 04.
2. Press SET TIME/TEMP button once to flash large display.
3. Use up or down set point buttons to alternate between OFF and ON on large display.
4. Press SET TIME/TEMP button again to flash small upper display for selection of another option, or press HOLD End to exit Configuration mode.

Option 9 — Holiday Heat Set Point — This selection determines the heating set point (40 to 90 minus deadband F) when the HOLIDAY function is active.

TO SELECT:

1. Enter Configuration mode. Use up and down buttons to make small display (now flashing) indicate 09.
2. Press SET TIME/TEMP button once to flash large display.
3. Use up or down set point buttons to select desired temperature.
4. Press SET TIME/TEMP button again to flash small upper display for selection of another option, or press HOLD End to exit Configuration mode.

Option 10 — Holiday Cool Set Point — This selection determines the cooling set point (40 to 90 minus deadband F) when the HOLIDAY function is active.

TO SELECT:

1. Enter Configuration mode if not already there. Use up and down set point buttons to make small display (now flashing) indicate 10.
2. Press SET TIME/TEMP button once to flash large display.
3. Use up or down set point buttons to select desired temperature.
4. Press SET TIME/TEMP button again to flash small upper display for selection of another option, or press HOLD End to exit Configuration mode.

Option 11 — Holiday Humidity Set Point — This selection determines the humidity set point (50 to 90% rh [relative humidity]) when the HOLIDAY function is active.

NOTE: This value can only be changed in the installer software Configuration mode.

TO SELECT:

1. Enter Configuration mode. Use up and down set point buttons to make small display (now flashing) indicate 11.
2. Press SET TIME/TEMP button once to flash large display.
3. Use up or down buttons to select desired humidity.
4. Press SET TIME/TEMP button again to flash small upper display for selection of another option, or press HOLD End to exit Configuration mode.

Option 13 — Room Temperature Offset Adjust — This option allows calibration (or deliberate miscalibration) of room temperature sensor. There are various reasons why building owners may want to have displayed temperature adjusted to a higher or lower value. The selected number is number of degrees, plus or minus, which will be added to actual temperature. The numbers can range between -5 and +5. Factory default is 0. This adjusted value will be used as actual temperature for both display and control action. For example, if

2 is selected, 72 F actual will read 74 F. If set point is 72 F, the room will control to an actual temperature of 70 F which will be displayed and acted upon as if it were 72 F. The effect is that a positive number selection will make the room temperature lower and vice versa. The Light Commercial Thermostat is calibrated within an accuracy of plus or minus 1 degree when shipped from the factory, so this adjustment will provide the best accuracy when set to 0.

TO SELECT:

1. Enter Configuration mode. Use up and down set point buttons to make small display (now flashing) indicate 13.
2. Press SET TIME/TEMP button once to flash large display.
3. Use up or down set point buttons to move between -5, -4, -3, -2, -1, 0, 1, 2, 3, 4, or 5 on large display. Factory default is 0.
4. Press SET TIME/TEMP button again to flash small upper display for selection of another option, or press HOLD End to exit Configuration mode.

Option 14 — Heat/Cool Deadband Adjustment — This option selects the minimum difference between heating and cooling set points. A larger difference saves energy and a smaller difference decreases temperature difference between heating and cooling. Factory default is 2, which means cooling set point must be a minimum of 2 degrees above heating set point. An attempt to move them closer will result in one “pushing” the other to maintain the required difference.

Depending on set points, moving deadband closer than 2 degrees may result in regular cycling between heat and cool when AUTO mode is selected. However, this cycling cannot occur more often than 1 transition every 10 minutes. The system has a built-in requirement that it cannot switch between heat and cool without a 10-minute “off” time between the 2 operations. Specifically, to switch from one mode to the other, there must be no demand for the old mode and a demand for the new mode, and this must exist continually for 10 minutes before transition to the new mode will occur.

TO SELECT:

1. Enter Configuration mode if not already there. Use up and down set point buttons to make small display (now flashing) indicate 14.
2. Press SET TIME/TEMP button once to flash large display.
3. Use up or down set point buttons to move between 0, 1, 2, 3, 4, 5, or 6 on large display. Factory default is 2.
4. Press SET TIME/TEMP button again to flash small upper display for selection of another option, or press HOLD End to exit Configuration mode.

Option 21 — Keyboard Lock — This option allows the installer to disable the thermostat from being changed.

TO SELECT:

1. Enter Configuration mode. Use up and down set point buttons to make small display (now flashing) indicate 21.
2. Press SET TIME/TEMP button once to flash large display.
3. Use up and down set point buttons to move between OF and ON on large display. Factory default is OF, keyboard is active.

NOTE: Once the keyboard is locked the building manager can momentarily unlock the keyboard by pressing the following keys sequentially, MODE, COPY PREVIOUS DAY, SET TIME/TEMP, and HOLD End. The sequence must be completed within a 5-second period, and the

keypad will be unlocked. The keypad will return to lock once the keypad is idle for a 2-minute period or immediately if after exiting the Configuration mode.

4. Press SET TIME/TEMP button again to flash upper small display for selection of another option, or press HOLD End to exit Configuration mode.

Step 5 — Conduct Light Commercial Thermostat Start-Up and Checkout — The Light Commercial Thermostat is designed with a built-in installer test capability. It allows easy operation of equipment without delays or set point adjustments to force heating or cooling. To enable Installer Test mode, move DIP switch no. 4 to ON position. To access this switch, open case as described in Step 2 — Set DIP Switches. Use the tip of a small screwdriver to slide switch no. 4 to ON position.

While in Installer Test mode, clock will display “InSt,” FAN button will control fan, and MODE button will control heating and cooling.

TO TEST FAN:

NOTE: In the Installer Test mode the fan operation is not dependent on the occupied signal.

Fan button switches FAN icon between AUTO and ON. While ON is displayed, G output will be on, turning fan on. Allow up to 10 seconds after button is pressed for fan to turn on and off. On all 3 through 12.5 ton RTUs the fan continues to operate for a minimum of 30 seconds after G signal is removed.

NOTE: In other than the Installer Test mode the fan will run continuously during the occupied periods. If auto fan is selected, the fan will come on with a heating or cooling call during the unoccupied periods and run continuously during the occupied periods. The fan icon AUTO will be lit if auto fan is selected and ON will be lit when the fan is on.

TO TEST COOLING AND DEHUMIDIFICATION:

Press MODE button until COOL icon turns on. Y1 cooling begins within 10 seconds and remains on for 4 minutes. Two minutes after Y1 comes on, the Y2 signal is energized for 2 minutes. At the end of 4-minute run, cooling stops and MODE reverts to OFF. At any time during 4-minute run time, cooling may be turned off by pressing MODE button until OFF appears. While cooling is on, successive presses of HUMIDITY button turns the dehumidify output on and off. While this output is active, the “DEHUM” icon will be energized.

TO TEST PRIMARY HEATING:

Press MODE button until HEAT icon turns on. W1 heating begins within 10 seconds and remains on for 4 minutes. This is the Recycling mode and if the outdoor temperature is below the balance point it will also include first stage furnace or electric heat in AC system, and heat pump heating in heat pump system. W1 will be on for 2 minutes followed by second stage W2 for 2 minutes. If the outdoor temperature is above the balance point, this second stage call will energize first stage furnace or electric heat in AC system and heat pump heating in heat pump system. If the outdoor temperature is below the balance point this second stage call will energize second stage furnace or electric heat in AC system and heat pump system. At the end of 4-minute run, heating stops, and MODE reverts back to OFF. At any time during 4-minute run time, heating may be turned off by pressing MODE button until OFF appears. While heating is on, successive presses of HUMIDITY button turn Occupied output on and off. While this output is active, “OC” appears in cool set point display.

Step 6 — Make Final Settings — Be sure to return DIP switch no. 4 back to OFF position to exit Installer Test mode. Assuming the system is to be left in operation after installation is complete, use MODE button to select between HEAT, COOL, or AUTO to provide desired operation of heating, cooling, or both.

The default set points and programmed schedule are (ONLY ONE PERIOD IS PROGRAMMED):

OCCUPIED 1 = OCCUPIED 2 = 7:00 AM;

COOL = 76 F; HEAT = 72 F

DISPLAY WILL READ OC2

UNOCCUPIED 1 = UNOCCUPIED 2 = 5:00 PM;

COOL = 85 F; HEAT = 65 F

DISPLAY WILL READ UN2

If programmed schedule is to be used, make sure the HOLD icon is off. The schedule is energized or deenergized by pushing the HOLD End button.

If fixed temperatures are desired, push HOLD End button to turn on HOLD icon. This will maintain set points, not allowing them to change with programmed schedule.

During unoccupied periods the FAN button may be used to select between AUTO (fan on only with equipment) and FAN (fan on continuously) fan modes. During occupied periods the fan is on continuously.

DEHUMIDIFICATION — Dehumidification is done only during cooling. A dehumidification set point is available to the owner in both occupied and unoccupied times. It can range from 50 to 90 percent relative humidity. When actual humidity is higher than set point, a dehumidification demand exists. In the occupied period, the Light Commercial Thermidistat responds by activating its dehumidify output (DEHUM) turning on the compressor in the Energy\$Recycler2 unit; and when a call for cooling exists, energizing the MoistureMi\$er™ solenoid in the 48/50HJ unit (if so equipped). The Energy\$Recycler2 compressor will be started in the Occupied mode even though a call for cooling does not exist; thus dehumidifying the outside air before it enters the building. In the unoccupied period the humidistat will only energize the MoistureMi\$er solenoid in the main unit.

However, if the humidity is below the set point in the unoccupied period, a "mini" economizer mode will be initiated bringing in outside air to cool the space as the first stage of cooling, provided the outdoor air thermostat in the Energy\$Recycler2 unit is below its set point.

HOLIDAY — A holiday selection is available specifically for times where the building will not be occupied for an extended period. For convenience, one button selects Holiday mode which is indicated by "HOLIDAY" icon on LED display. Holiday mode also has an automatic hold, meaning that set points are not affected by the programmed schedule. While in Holiday mode, the system provides temperature and humidity protection for the building in all seasons, but not comfort.

Holiday Set Points — The settings for HEAT, COOL, and DEHUM should have been done in the Configuration mode (Options 9,10, and 11).

OPERATIONAL INFORMATION

Five-Minute Compressor Time Guard®

Device — This timer prevents compressor from starting unless it has been off for at least 5 minutes. It can be defeated for 1 cycle by simultaneously pressing FAN and UP buttons simultaneously.

Fifteen-Minute Staging Timer — In multistage heating or cooling, this timer prevents any higher stage from turning on until preceding stage has been on for 15 minutes. This timer is not in effect if temperature difference is greater than 5° F (usually due to a large change in desired temperature).

Three-Minute Minimum On Time — In normal operation, when a stage turns on, it will not turn off for a minimum of 3 minutes.

Heat/Cool Set Points (Desired Temperature) — A minimum difference of 2° F is enforced between heating and cooling desired temperatures. This is done by allowing one setting to "push" the other to maintain this difference. This difference is adjustable via Configuration Option 14.

Equipment On Indicators — When cooling equipment is on, a COOL icon preceded by a small triangle is displayed below cooling set point. While cooling equipment is delayed by the Time Guard timer, triangle will flash. The same is true for HEAT icon and its preceding triangle located under heating set point.

Dehumidify Output On Indicators — The DEHUM icon is on when the dehumidification output is energized.

Auto Changeover — When auto changeover mode is selected, a change from heat to cool (or vice versa) will not occur until an opposite mode demand has existed for 10 minutes. If set point is changed, the 10-minute requirement is deleted.

Power On Check — When AC power is first applied, all segments of display are turned on for a few seconds. Following this, temperature display indicates model/configuration via following 2-digit code: CP for commercial product. See Fig. 16.

Error Codes — If Light Commercial Thermidistat cannot properly read room temperature, display will indicate two dashes (--) and all outputs (except fan, if on) will turn off.

E4 — If Light Commercial Thermidistat's internal memory fails, "E4" will be displayed. Replace Light Commercial Thermidistat.

E5 — If Light Commercial Thermidistat cannot properly read humidity, "E5" will be displayed. Replace Light Commercial Thermidistat.

Smart Recovery — With Smart Recovery selected (DIP SW1 is on), transition out of setback begins a fixed time period before selected recovery time and gradually adjusts room temperature so desired temperature will be achieved at selected recovery time. The fixed time period is 1.5 hours. It operates in both heating and cooling.

PRE-START-UP

⚠ WARNING

Failure to observe the following warnings could result in serious personal injury.

1. Follow recognized safety practices and wear protective goggles and gloves when checking or servicing refrigerant system.
2. Do not operate compressor or provide any electric power to unit unless compressor terminal cover is in place and secured.
3. Do not remove compressor terminal cover until all electrical sources are disconnected and tagged accordingly.
4. Relieve all pressure from system before touching or disturbing any connections inside compressor terminal box. If refrigerant leak is suspected around compressor terminals, use accepted methods to recover refrigerant.
5. Never attempt to repair or solder any components while refrigerant system is under pressure.
6. Do not use torch to remove any component. System contains oil and refrigerant under pressure. To remove a component, wear protective goggles and gloves and proceed as follows:
 - a. Shut off electrical power to unit and tag disconnect.
 - b. Recover refrigerant to relieve all pressure from system, using both high- and low-pressure ports.
 - c. Cut component connection tubing with tubing cutter, and remove component from unit.
 - d. Carefully unsweat remaining tubing stubs when necessary. Oil can ignite when exposed to torch flame.

Refer to 48/50HJ Installation Instructions for Pre-Start-Up information for the rooftop unit section. Proceed as follows to inspect and prepare the unit for initial start-up:

1. Remove filter access panel, blower access panel, and control panel access cover on the energy recovery section.
2. Read and follow instructions on all WARNING, CAUTION, and INFORMATION labels attached to (or shipped with) unit.
3. Make the following inspections:
 - a. Inspect for shipping or handling damages such as broken lines, loose parts, or disconnected wires.
 - b. Inspect for oil at all refrigerant tubing connections and on unit base. Detecting oil usually indicates a refrigerant leak. Leak-test all refrigerant tubing connections using an electronic leak detector, halide torch, or liquid-soap solution.
 - c. Inspect all field and factory wiring connections. Be sure that connections are completed and tight.
 - d. Inspect upper (supply) and lower (exhaust) coils for damage and refrigerant leaks. If fin damage is noted, carefully straighten fins using a fin comb.

4. Tighten compressor hold-down bolts to 5.5 to 6.5 ft-lbs of torque.
5. Verify the following:
 - a. If installed, ensure optional supply and exhaust blower wheel set screws are tight and wheels are centered within the blower housing.
 - b. Make sure supply and exhaust air filters are in place.
 - c. Make sure the condensate drain is of correct dimensions and primed with water to ensure proper drainage.
 - d. Reinstall all access panels.
 - e. Ensure all tools and miscellaneous parts have been removed.

START-UP

Refer to the 48/50HJ Installation Instructions for information on Start-Up for the rooftop unit section.

Unit Preparation — Make sure the unit has been installed in accordance with installation instructions and applicable codes.

Supply and Exhaust Filters — Make sure filters are correctly installed on unit. Do not operate without filters in place.

Outdoor-Air Inlet Screens — Outdoor-air inlet screen(s) must be in place before operating the unit.

Compressor Mounting — Compressors are internally spring-mounted. Ensure wooden shipping block has been removed from under the compressor and hold-down bolts are in place.

Internal Wiring — Check all low and high voltage connections for proper locations. Ensure connections are tight.

Cooling — Set Light Commercial Thermostat mode selection to Cooling and fan mode to Auto. Ensure thermostat has been adjusted to a setting below room temperature. Refer to Table 2 for correct unit operation.

Heating — Set Light Commercial Thermostat mode selection to Heating and fan mode to Auto. Ensure thermostat has been adjusted to a setting below room temperature. Refer to Table 2 for correct unit operation.

Operating Sequence — Refer to Step 5 — Conduct Light Commercial Thermostat Start-Up and Checkout on page 33, and Table 2 for energy recovery section operating sequence. See Fig. 17.

SERVICE

Refer to base unit installation instructions or 62AQ Installation Instruction for all service information.

Fuse Box (48HJ012,014 — 208/230-3-60 Units Only)

Certain 48HJ units contain fuses for the power supply. The fuse box is located in the compressor section in a single point box. See Fig. 18. Replacement fuses are cartridge type, non-renewable, time delay FRN type of the appropriate size and voltage. Refer to existing fuse size and voltage for replacement.

ROOFTOP UNIT

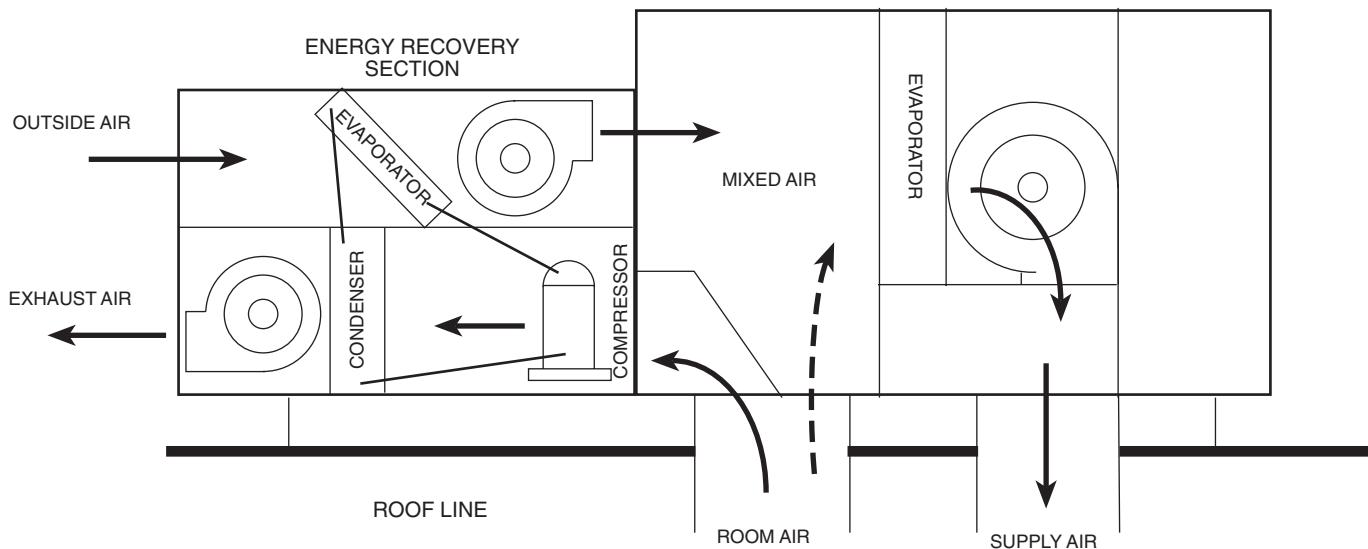


Fig. 17 — Unit Operation Flow Diagram

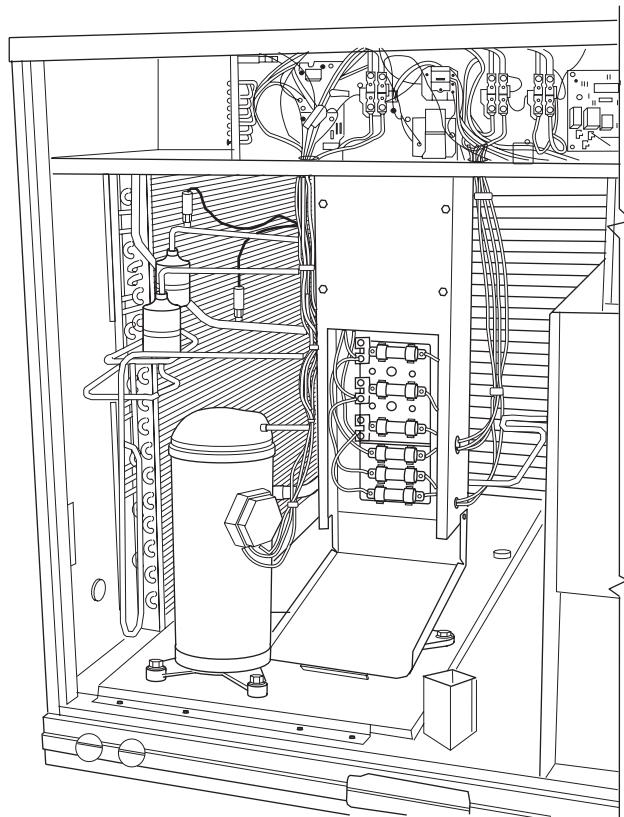


Fig. 18 — Fuse Box (48HJ012, 014 — 208/230-3-60 Units Only)

Table 2 — Light Commercial Thermostat (LCT) Operating Sequence and System Response

UNOCCUPIED						
COOLING	ER Comp	ER Fans	RT Comp 1	RT Comp 2	RT Fans	RT Heat
Indoor Temperature Above 2nd Stage Set Point						
Humidity Low & OAT Low	On	On (cyc.)	On w/o MM	Off w/o MM	On (cyc.)	Off
Humidity Low & OAT High	Off	Off	On w/o MM	On w MM	On (cyc.)	Off
Humidity High & OAT Low	Off	Off	On w MM	On w MM	On (cyc.)	Off
Humidity High & OAT High	Off	Off	On w MM	On w MM	On (cyc.)	Off
Indoor Temperature Between 1st and 2nd Stage Set Points						
Humidity Low & OAT Low	Off	On (cyc.)	Off	Off	On (cyc.)	Off
Humidity Low & OAT High	Off	Off	On w/o MM	Off	On (cyc.)	Off
Humidity High & OAT Low	Off	Off	On w MM	Off	On (cyc.)	Off
Humidity High & OAT High	Off	Off	On w MM	Off	On (cyc.)	Off
Indoor Temperature Below 1st Stage Set Point	Off	Off	Off	Off	Off	Off
NOTE: OAT < 55° all compression off*						
HEATING	ER Comp.	ER Fans	RT Comps.	RT Fans	RT Heat	
Indoor Temperature Above 1st Set Point	Off	Off	Off	Off	Off	
Indoor Temperature Between 1st and 2nd Stage Set Points	Off	Off	Off	On (cyc.)	On, 50%	
Indoor Temperature Below 2nd Stage Set Point	Off	Off	Off	On (cyc.)	On, 100%	
OCCUPIED						
COOLING	ER Comp	ER Fans	RT Comp 1	RT Comp 2	RT Fan	RT Heat
Indoor Temperature Above 2nd Stage Set Point						
Humidity Low & OAT Low	On	On	On w/o MM	On w/o MM	On	Off
Humidity Low & OAT High	On	On	On w/o MM	On w/o MM	On	Off
Humidity High & OAT Low	On	On	On w MM	On w MM	On	Off
Humidity High & OAT High	On	On	On w MM	On w MM	On	Off
Indoor Temperature Between 1st and 2nd Stage Set Points						
Humidity Low & OAT Low	Off	On	Off	Off	On	Off
Humidity Low & OAT High	On	On	On w/o MM	Off	On	Off
Humidity High & OAT Low	On	On	On w MM	Off	On	Off
Humidity High & OAT High	On	On	On w MM	Off	On	Off
Indoor Temperature Below 1st Stage Set Point						
Humidity Low	Off	On	Off	Off	On	Off
Humidity High	On	On	Off	Off	On	Off
NOTE: OAT < 55° all compression off*						
HEATING	ER Comp	ER Fans	RT Comps	RT Fans	RT Heat	
Indoor Temperature Above 1st Stage Set Point	Off	On	Off	On	Off	
Indoor Temperature Between 1st and 2nd Stage Set Points						
OAT >Set Pt	On	On	Off	On	Off	
OAT <Set Pt	On	On	Off	On	On, 50%	
Indoor Temperature Below 2nd Stage Set Point						
OAT >Set Pt	On	On	Off	On	On, 50%	
OAT <Set Pt	On	On	Off	On	On, 100%	

LEGEND

- Comp — Compressor
- ER — Energy Recovery section
- MM — MoistureMi\$er™ Dehumidification Device
- OAT — Outdoor-Air Temperature
- RT — Rooftop Unit
- Set Pt — Set Point



*Unless unit compressor has been rewired as described in Step 11 (page 29).

TROUBLESHOOTING

Use Tables 3 and 4, and Fig. 19 and 20 when troubleshooting this unit.

NOTES:

1. If any of the original wire furnished must be replaced, it must be replaced with Type 90° C wire or its equivalent.
2. Three phase motors are protected under primary single phasing conditions.
3. Thermostat: HH07AT170, 172.
Subbase: HH93AZ176, 177, 178, and 179.
4. Set heat anticipator at .14 amp for 1st stage and .14 amp for 2nd stage.
5. Use copper conductors only.
6. TRAN is wired for 208-v unit. If unit is to be run with 208-v power supply, disconnect BLK wire from 230-v tap (ORN) and connect to 208-v tap (RED). Insulate end of 230-v tap.

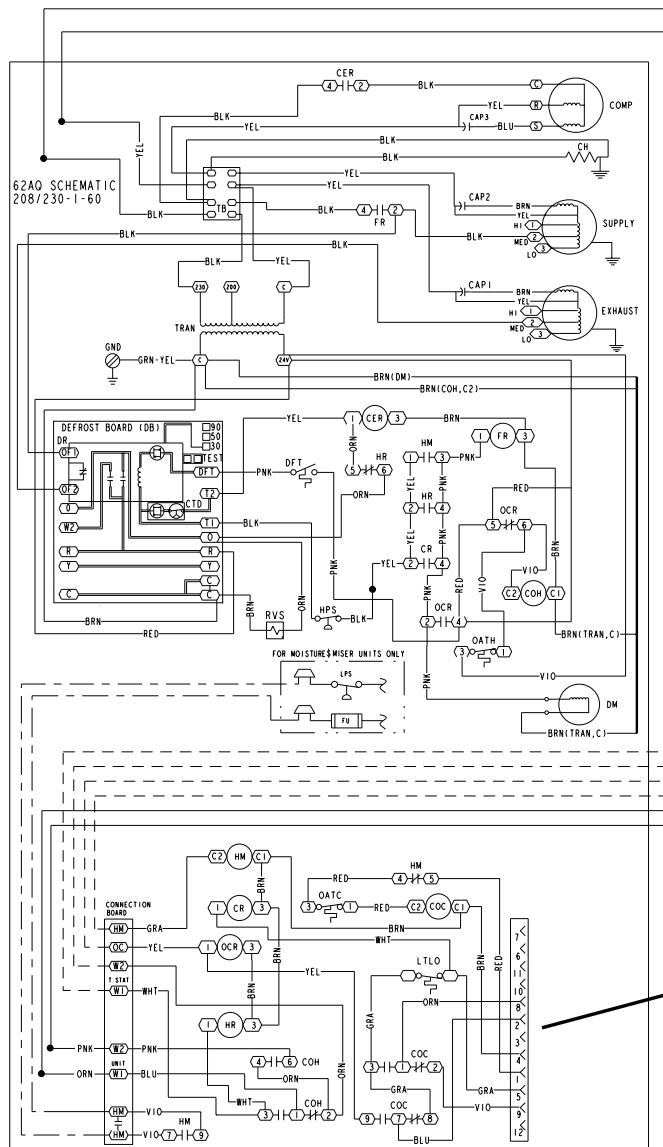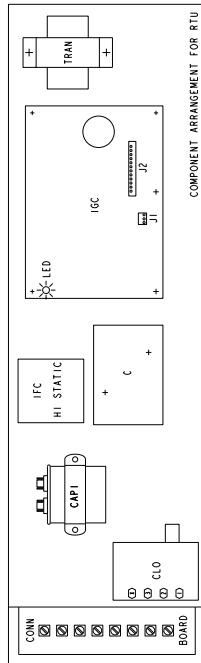

LEGEND

C	— Contactor	I	— Ignitor	F	Field Splice
CAP	— Capacitor	IDM	— Induced Draft Motor	M	Marked Wire
CER	— Compressor Energy Recovery section	IFC	— Indoor Fan Contactor	T	Terminal (Marked)
CH	— Crankcase Heater	IFM	— Indoor Fan Motor	U	Terminal (Unmarked)
CLO	— Compressor Lockout	IGC	— Integrated Gas Unit Control (48HJ only)	TB	Terminal Block
COC	— Cool Changeover Relay	LTLO	— Low Temp Cooling Lockout	S	Splice
COH	— Heat Changeover Relay	LPS	— Low-Pressure Switch	(M)	Splice (Marked)
COMP	— Compressor Motor	LS	— Limit Switch	FW	Factory Wiring
CR	— Cooling Relay	MGV	— Main Gas Valve	FCW	Field Control Wiring
CTD	— Compressor Time Delay	OATC	— Outdoor-Air Thermostat (Cool)	FPW	Field Power Wiring
DB	— Defrost Board	OATH	— Outdoor-Air Thermostat (Heat)	A	Accessory or Optional Wiring
DFT	— Defrost Thermostat	OF	— Occupied Relay	—	To indicate common potential only. Not to represent wiring.
DM	— Damper Motor	OFM	— Outdoor Fan		
DR	— Defrost Relay	OLR	— Overload Relay		
EQUIP	— Equipment	PL	— Plug Assembly		
FPT	— Freeze-Up Protection Thermostat	QT	— Quadruple Terminal		
FR	— Fan Relay	RS	— Rollout Switch		
FU	— Fuse	RVS	— Reversing Valve Solenoid		
GND	— Ground	SEN	— Sensor		
HM	— Humidity Relay	TB	— Terminal Block		
HPS	— High-Pressure Switch	TRAN	— Transformer		
HR	— Heating Relay				
HS	— Hall Effect Sensor				

Fig. 19 — Typical Wiring Schematic (Standard Controls)

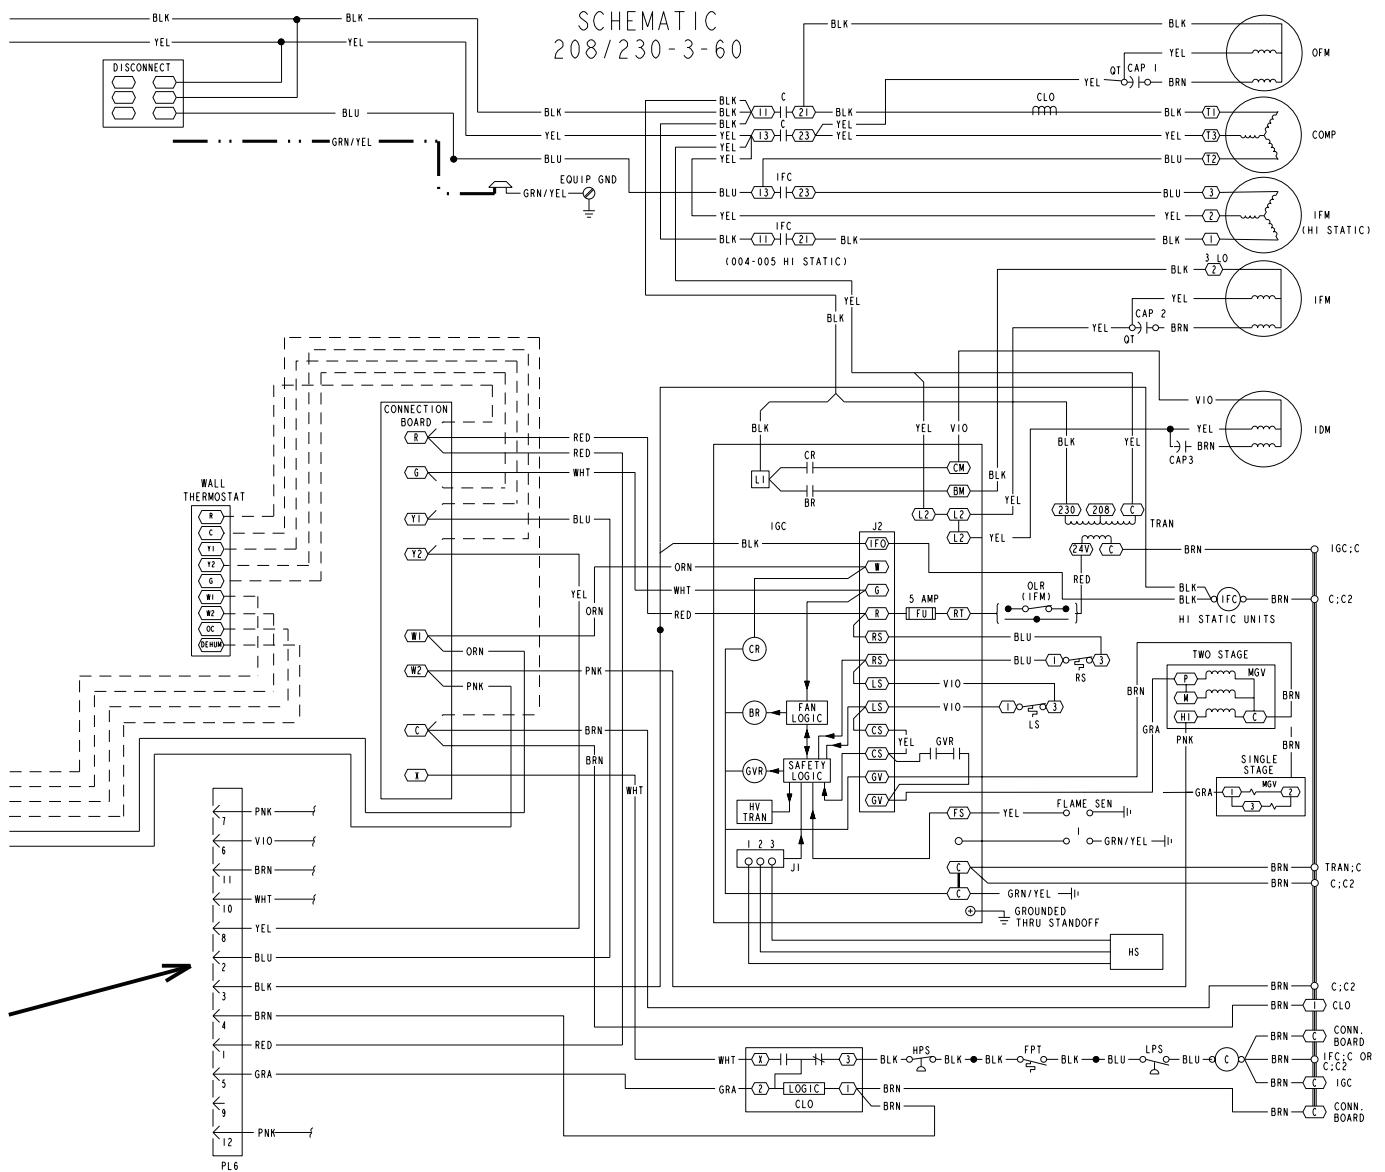


Fig. 19 — Typical Wiring Schematic (Standard Controls) (cont)

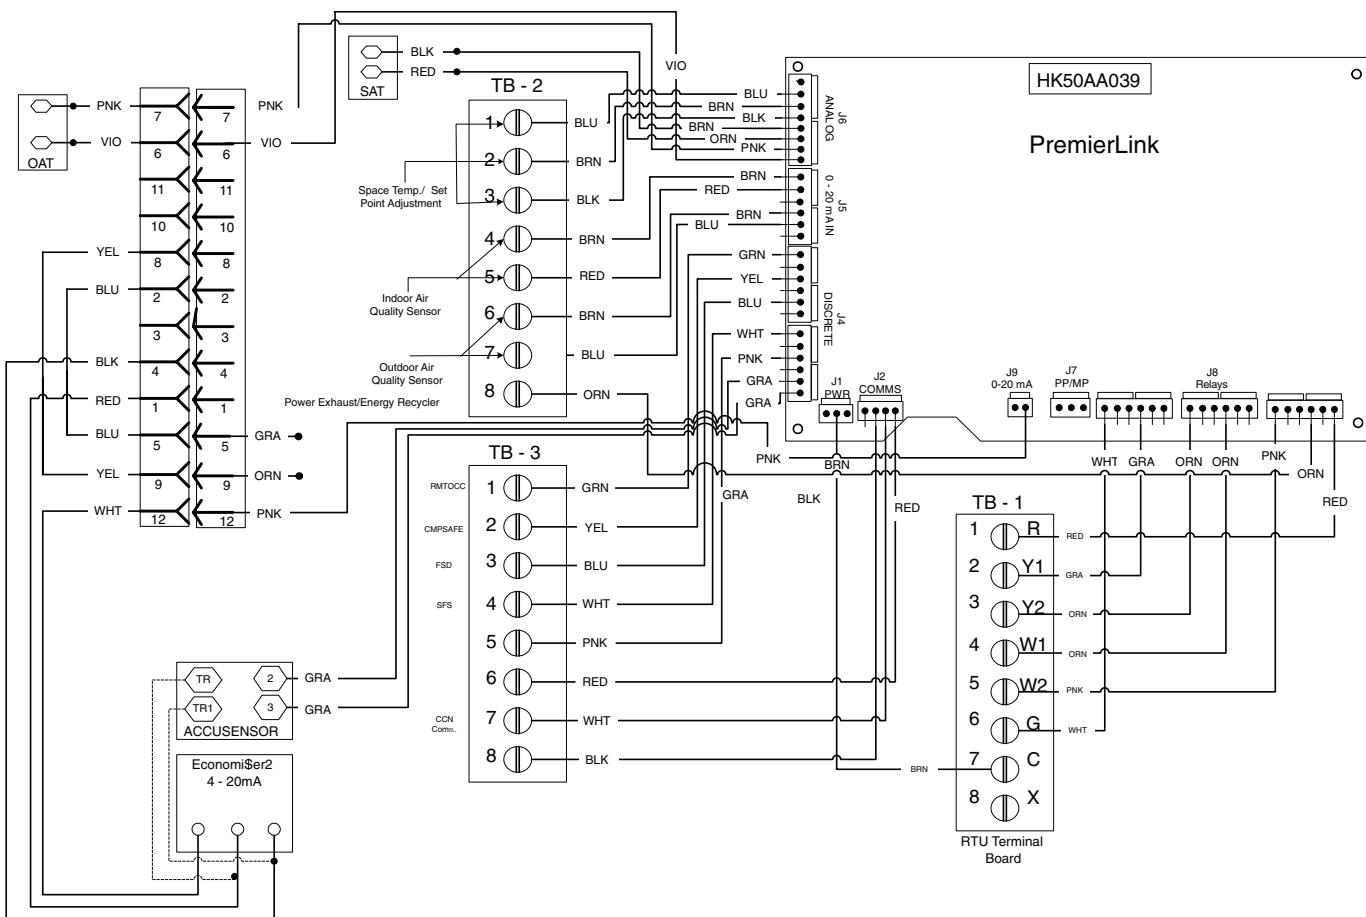


Fig. 20 — Typical Wiring Schematic (with PremierLink™ Controls)

Table 3 — Heating and Cooling Troubleshooting

PROBLEM	CAUSE	REMEDY
Compressor and outdoor fan will not start.	Power failure.	Call power company.
	Fuse blown or circuit breaker tripped.	Replace fuse or reset circuit breaker.
	Defective thermostat, contactor, transformer, control relay, or capacitor.	Replace component.
	Insufficient line voltage.	Determine cause and correct.
	Incorrect or faulty wiring.	Check wiring diagram and rewire correctly.
	Light Commercial Thermidistat program in UC1 or UC2 mode.	Check Light Commercial Thermidistat program. See Step 5 — Conduct Light Commercial Thermidistat Start-Up and Checkout on page 33.
Compressor will not start but outdoor fan runs.	Defective fan motor.	Replace fan motor.
	Faulty wiring or loose connection in compressor circuit.	Check wiring and repair or replace.
	Compressor motor burned out, seized, or internal overload open.	Determine cause. Replace compressor.
	Defective run/start capacitor, overload, start relay, Time Guard® device.	Determine cause and replace.
	No DEHUM signal from Light Commercial Thermidistat.	Check for DEHUM signal on Light Commercial Thermidistat LCD display.
Compressor cycles (other than normally satisfying thermostat).	Time Guard device not timed out.	Allow time for Time Guard device to recycle unit.
	Refrigerant overcharge or undercharge.	Recover refrigerant, evacuate system, and recharge to nameplate.
	Defective compressor.	Replace and determine cause.
	Insufficient line voltage.	Determine cause and correct.
	Blocked outdoor coil or dirty air filter.	Determine cause and correct.
	Defective run/start capacitor, overload, or start relay.	Determine cause and replace.
	Faulty outdoor-fan (cooling) or indoor-fan (heating) motor or capacitor.	Replace.
Suction pressure greater than 100 psig in Cooling mode.	Restriction in refrigerant system.	Locate restriction and remove.
	Defective TXV.	Replace TXV.
Excessive head pressure.*	Dirty air filters.	Replace filters.
	Dirty coils.	Clean coils.
	Refrigerant overcharged.	Recover excess refrigerant.
	Air in system.	Recover refrigerant, evacuate system, and recharge.
	Condensing air restricted or air short-cycling.	Determine cause and correct.
Head pressure too low.*	Low refrigerant charge.	Check for leaks; repair and recharge.
	Compressor valves leaking.	Replace compressor.
	Restriction in liquid tube.	Remove restriction.
Excessive suction pressure.*	High heat load.	Check for source and eliminate.
	Compressor valves leaking.	Replace compressor.
	Refrigerant overcharged.	Recover excess refrigerant.
Suction pressure too low.*	Dirty air filters or coils.	Replace filter, clean coils.
	Low refrigerant charge.	Check for leaks; repair and recharge.
	Metering device or low side restricted.	Remove source of restriction.
	Insufficient indoor airflow.	Increase air quantity. Check filter and replace if necessary.

LEGEND

TXV — Thermostatic Expansion Valve

*Energy recovery section uses TXVs with a 100 psig maximum operating pressure (MOP) feature to limit suction pressure in Cooling mode at high temperatures. Always consult charging chart for correct operating pressures.

Table 4 — Supply-Air Damper Troubleshooting

PROBLEM	CAUSE	REMEDY
Damper does not open; fan(s) off.	OCR not energized (thermostat in Unoccupied mode).	Check Light Commercial Thermidistat program settings (see Step 5 — Light Commercial Thermidistat Start-Up and Checkout section, page 33).
	OCR defective.	Replace OCR.
	Damper jammed.	Free damper.
	Damper motor defective.	Replace damper motor.
	Loose wiring.	Check wiring and correct.
	Damper jammed.	Free damper.
Damper will not close.	Motor return spring broken.	Replace motor.

LEGEND

OCR — Occupied Relay

Copyright 2002 Carrier Corporation

Manufacturer reserves the right to discontinue, or change at any time, specifications or designs without notice and without incurring obligations.

Book 1 | 1 | 4 | 4 PC 111 Catalog No. 534-80122 Printed in U.S.A. Form 48/50HJ,62AQ-2SIS Pg 42 9-02 Replaces: 48/50HJ,62AQ-1SIS
Tab | 1a | 1b | 6a | 6b

ROOFTOP UNIT (RTU) AND ENERGY RECOVERY SECTION (62AQ) START-UP CHECKLIST

(Remove and Store in Job File)

I. PRELIMINARY INFORMATION

RTU 62AQ

COBRA™ ENERGY RECOVERY UNIT MODEL NO.: _____

SERIAL NO.: _____ / _____

BASE UNIT MODEL NO.: _____

SERIAL NO.: _____ / _____

DATE: _____

TECHNICIAN: _____ / _____

II. PRE-START-UP (insert checkmark in box as each item is completed)

- VERIFY THAT CONDENSATE CONNECTION IS INSTALLED PER INSTALLATION INSTRUCTIONS
- CHECK ALL ELECTRICAL CONNECTIONS AND TERMINALS FOR TIGHTNESS
- CHECK THAT SUPPLY AND EXHAUST HOODS ARE INSTALLED AND AIR FILTER(S) ARE CLEAN AND IN PLACE
- CHECK FAN WHEEL AND PROPELLER FOR LOCATION IN HOUSING/ORIFICE AND SETSCREW TIGHTNESS
- CHECK PULLEY ALIGNMENT AND BELT TENSION PER INSTALLATION INSTRUCTIONS (62AQ300 BELT DRIVE EXHAUST FAN AND SUPPLY FAN)

III. START-UP

COMBINED ELECTRICAL (COBRA ENERGY RECOVERY UNIT)

SUPPLY VOLTAGE	L1-L2	_____	L2-L3	_____	L3-L1	_____
COMPRESSOR AMPS	L1	_____	L2	_____	L3	_____
INDOOR FAN AMPS	L1	_____	L2	_____	L3	_____

TEMPERATURES

OUTDOOR-AIR TEMPERATURE	_____	DB	_____	WB
RETURN-AIR TEMPERATURE	_____	DB	_____	WB
ENTERING SUPPLY-AIR (RTU)	_____	DB	_____	WB
LEAVING AIR TEMPERATURE (RTU)	_____	DB	_____	WB

PRESSESSES (IN COOLING MODE)

ROOFTOP UNIT

REFRIGERANT SUCTION	_____	PSIG	TEMP AT COMPRESSOR	_____	F
REFRIGERANT DISCHARGE	_____	PSIG	TEMP AT COMPRESSOR	_____	F

- VERIFY REFRIGERANT CHARGE USING CHARGING CHART LABEL ON UNIT.

62AQ

REFRIGERANT SUCTION	_____	PSIG	TEMP AT COMPRESSOR	_____	F
REFRIGERANT DISCHARGE	_____	PSIG	TEMP AT COMPRESSOR	_____	F

- VERIFY REFRIGERANT CHARGE USING CHARGING CHART LABEL ON UNIT.

III. START-UP (cont)

AIRFLOWS (62AQ)

SUPPLY AIR _____ CFM

MOTOR SPEED (Circle One) LOW MEDIUM HIGH

DAMPER SETTING (°) (Circle One) 30 45 60 90

EXHAUST AIR _____ CFM

MOTOR SPEED (Circle One) LOW MEDIUM HIGH

DAMPER SETTING (°) (Circle One) 30 45 60 90

IV. LIGHT COMMERCIAL THERMIDISTAT ACCESSORY

NOTE: To disable Keyboard Lock, press MODE, COPY PREVIOUS DAY, SET TIME/TEMP, and HOLD End buttons in sequence within 5 seconds.

PROGRAMMED _____ Yes _____ No
KEYBOARD LOCK _____ Yes _____ No

OCCUPIED SETTINGS:

ROOM TEMP _____ F
ROOM RH _____ %

TIMES: ON OFF

OC1 _____

OC2 _____

TIMES: ON OFF

UC1 _____

UC2 _____

CUT ALONG DOTTED LINE

CUT ALONG DOTTED LINE

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>